
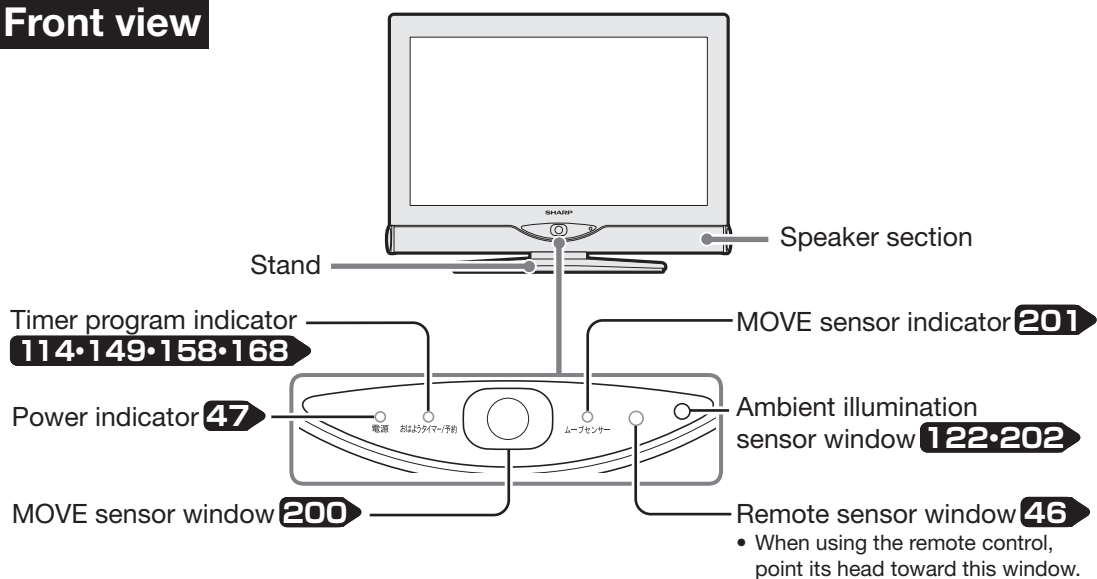


# English Guide

## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


### Front view




### Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

### Right Side view



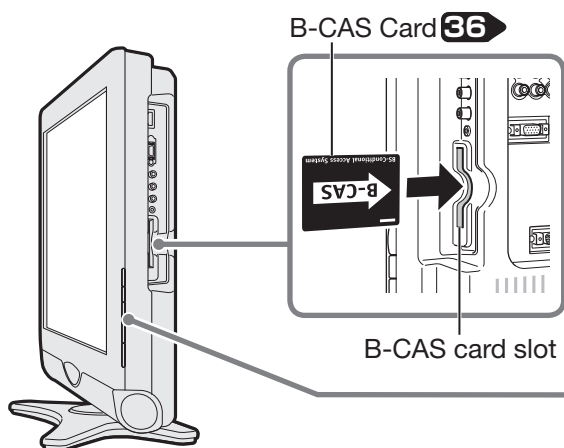


### Control panel

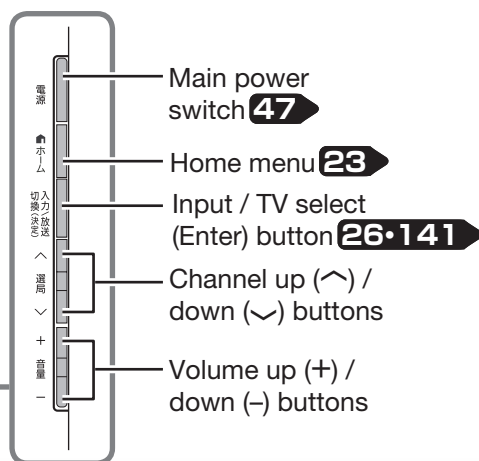

# Back view

The illustrations below are those of LC-26DE7.  
LC-20DE7 has the same layout of jacks and terminals as.

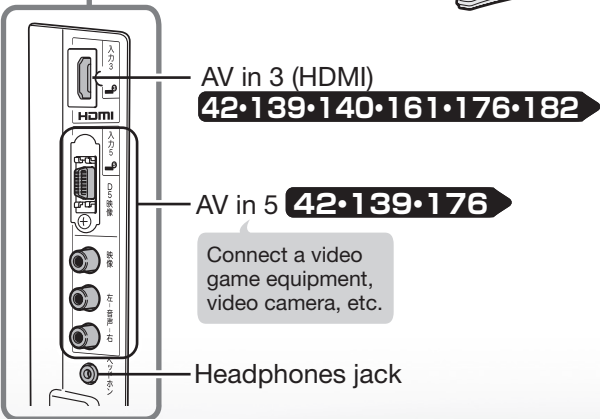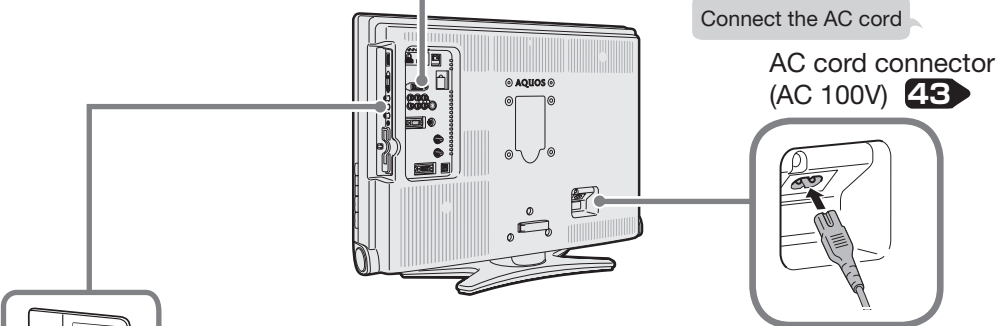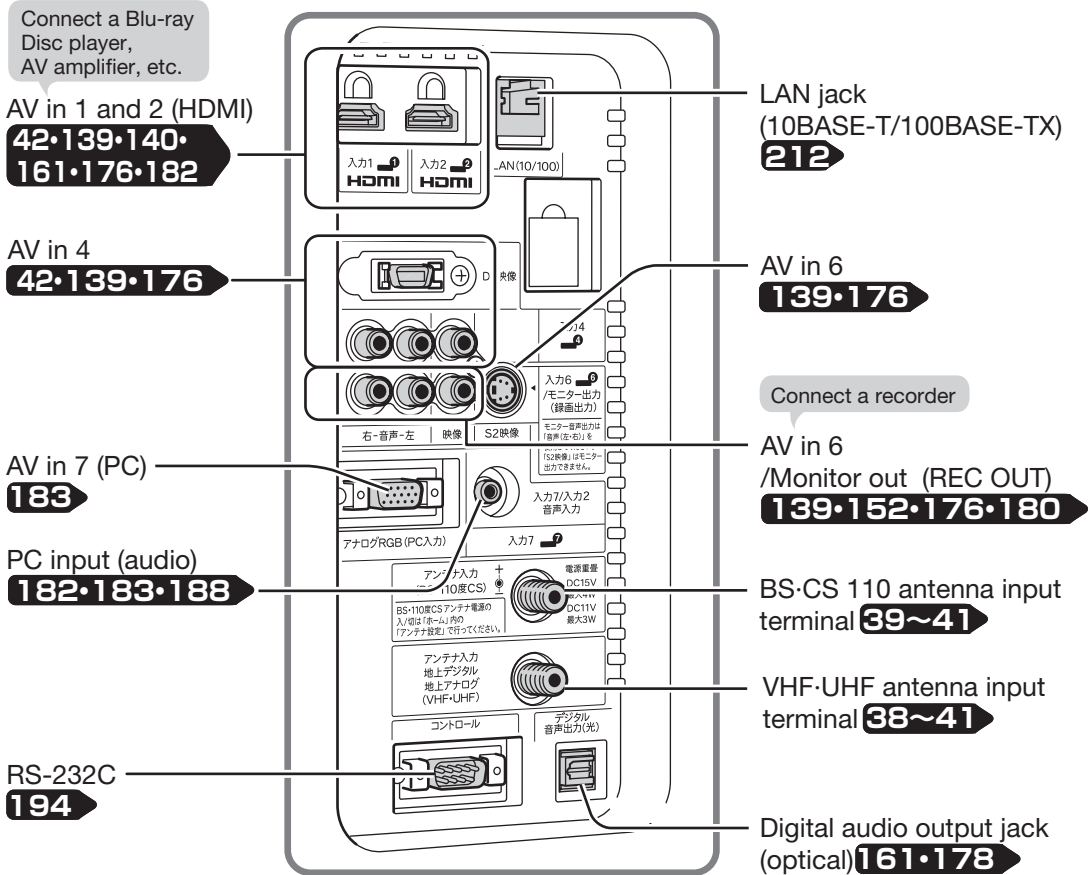

The provided power connector may have different shape from that shown in the drawing.

はじめに  
準備  
番組を見る  
録画と再生  
ファミリンク  
で録画・再生  
ゲーム・オーディオ  
パソコンをつなぐ  
活用する  
本機をさらに  
インターネット  
を楽しむ  
インターネット  
で番組を楽しむ  
写真の表示・  
音楽の再生  
故障かな？仕様  
寸法図など

English  
Guide

# Remote Control Unit

## Active/Standby 47

Press to engage the TV set in the active or standby mode.

## SAVE mode 203

Press to change to the SAVE mode.

## Digital channel number input 82

Use to select a digital channel by entering the 3-digit channel number.

## CATV 83

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10).

## Mute 79

Press to mute audio.

## Volume up (+)/down (-) 79

Press to adjust the volume.

## Linked data broadcast 109

Press to call the data broadcast linked with the current digital TV program.

## AV mode select 120

Press to select the picture/sound setting that best matches the current program.

## Sleep timer 205

Press to select the remaining time period after which the TV set automatically enters the standby mode.

## Familink 174

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## EPG 86

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## Display the "Home" Menu 26

Press to start some useful operations of the TV.

## Program info 110

Press to display detailed information on the current digital program.

## Finish 26

Press to finish menu operation, etc.

## Screen mode 117・184

Press to select the desired screen mode.

## Freeze 109

Press to freeze the picture.

## Familink 166・169~173

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

**Recommended programs select 90-91**  
Press to select a program which the TV set recommends.

**Display 80**  
Press to display or turn off the channel call, etc.

**Internet 218-238**  
Press to connect to the internet.

**VOD 247・252**  
Press to display the VOD control panel.

**Channel select 79**  
• Press to select a channel.  
• Use to input a number for various settings.

**Terrestrial digital select 78**

**BS select 78**

**CS select 78**

**Terrestrial analog select 78**  
When selecting the CS digital channel for the first time. **53**

**Channel up (^)/down (v) 79**  
Press to select channels in the ascending or descending order.  
\*CATV channels are factory set to be skipped. **71**

**Input select 141**  
Press to select the input.

## Display the Tool Menu

**Cursor (up, down, left, right) 26**  
Use to select a menu item, column, etc.

**Enter/Confirm 26**  
Press to confirm a selected setting or menu item.

**Return 26**  
Press to go back to the previous screen.

**Color 88・89**  
Use to operate EPGs and data program screens.

**Picture select 101**  
Press to select the desired picture when watching a digital multi-picture program.

**Caption 101~103**  
Press to display, select, or turn off captions when watching a digital program with captions.

**Audio select 100・101**  
Press to select the audio.


**Media select 78**  
Press to select the media (TV or data).

**Split screen 104**  
Press to switch between the split screen mode and the normal screen mode.

**Operable screen 105**  
Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover


Hold the cover by the projections on both sides and lift upwards.

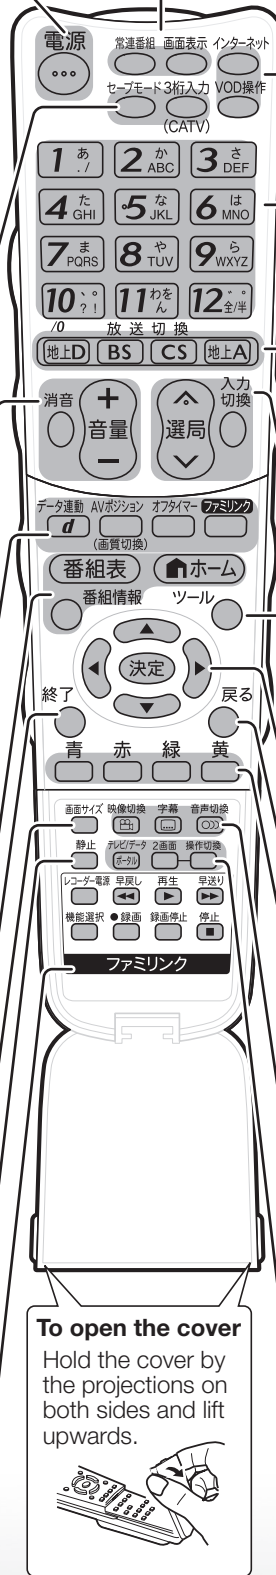

# Switching the Display Language to English

## ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.  
ホームメニューなどの画面表示を英語にすることができます。

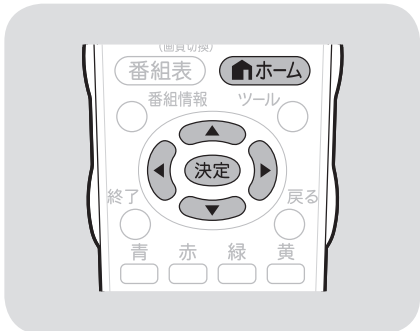


誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」 - 「 (View Setting)」 - 「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

**1**

Press and select with


Select “設定” (Setup) on the Home menu.  
ホームメニューから「設定」を選ぶ

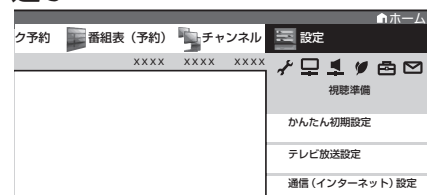

**2**

Select with and select with


Select “ (視聴準備)” (View Setting).  
 (視聴準備) を選ぶ

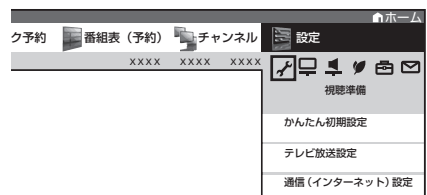

**3**

Select with Press


Select “Language (言語)”.  
「Language (言語)」を選ぶ

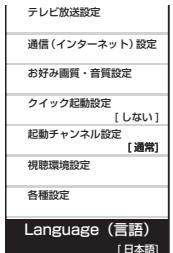

**4**

Select with Press

Select “English”.  
「English」を選ぶ  
Enter.  
決定する

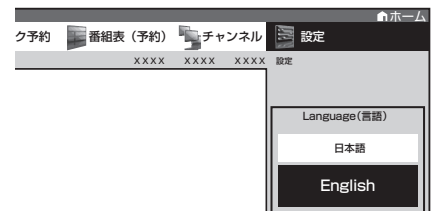

- The menu screen is now displayed in English.
- 画面表示が英語になります。

**5**

Press

Finish this operation.  
終了する

はじめに

準備

番組を見る

録画と再生

ファミリーリンク  
で録画・再生

ゲームオーディオ  
パソコンをつなぐ

本機をさらに  
活用する

インターネット  
を楽しむ

インターネット  
で番組を楽しむ

写真の表示・  
音楽の再生

故障かなど  
寸法図など

English  
Guide