
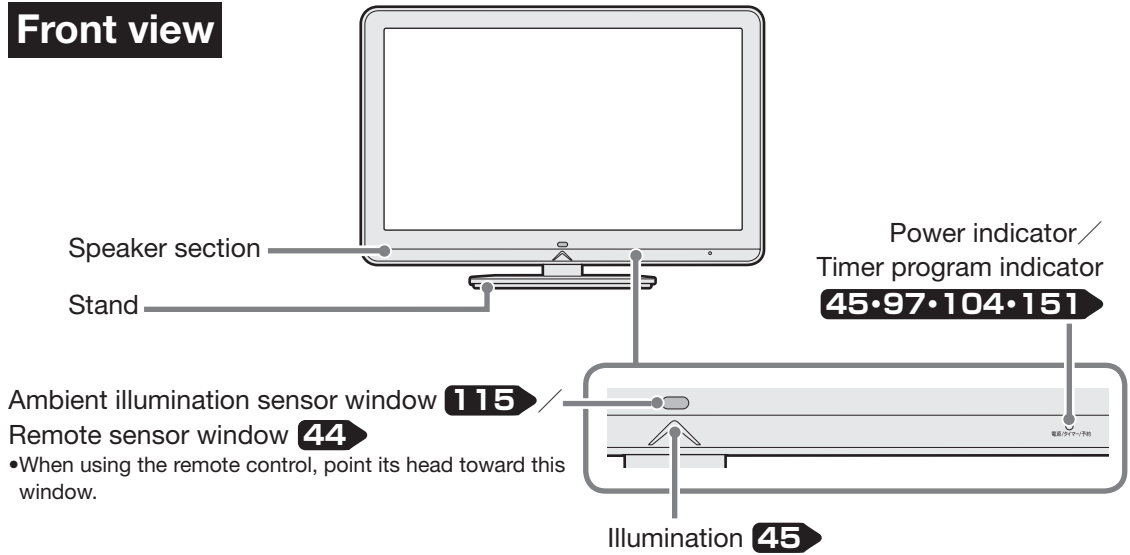



Part Names - Main Unit English Guide

● The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view




Left Side view

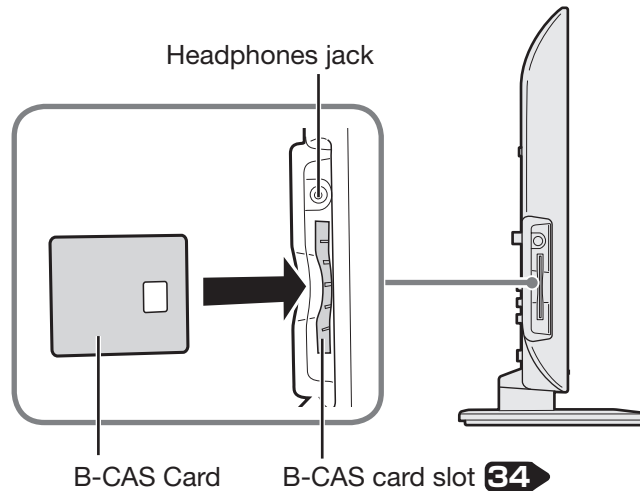



Back view

The illustrations below are those of LC-22K3.
LC-19K3 has the same layout of jacks and terminals as.

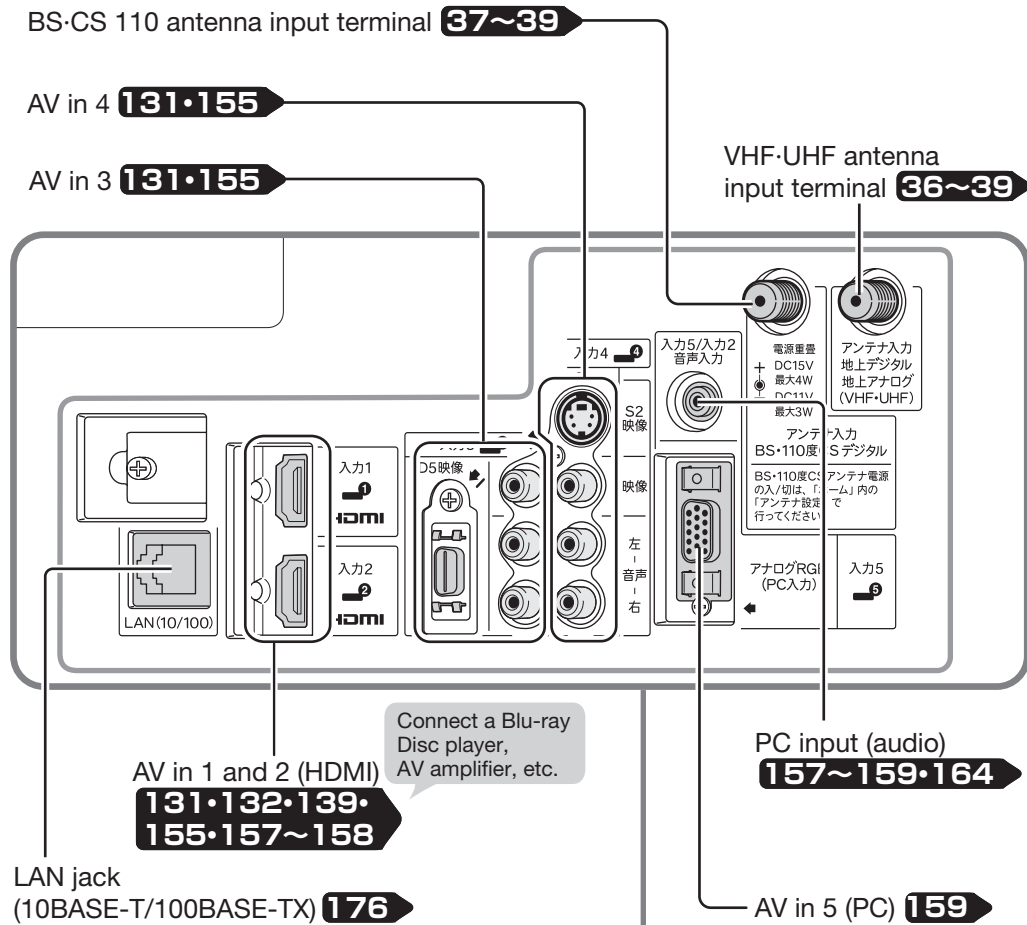

Control panel

Right side view

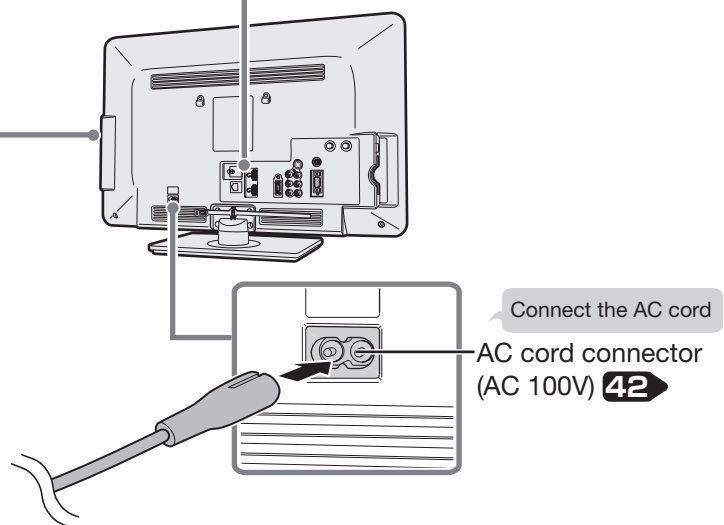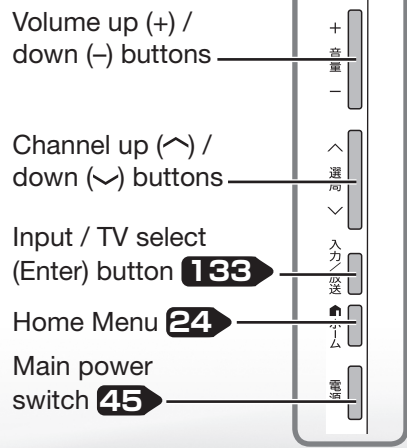

はじめに

準備

番組を見る

ハイパーレイヤ
で録画・再生

ファミリンク
で録画・再生

ゲームパ
をつなぐ

本機をさら
に活用す

故障かな
仕様・
寸法図な
ど

English
Guide

Part Names - Remote Control Unit

Active/Standby 45

Press to engage the TV set in the active or standby mode.

Digital channel number input 82

Use to select a digital channel by entering the 3-digit channel number.

CATV 82

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial digital select 78

BS select 78

CS select 78

Terrestrial analog select 78

Select the CS digital channel for the first time. 51

linked data broadcast 102

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-) 79

Press to adjust the volume.

Mute 79

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info 102

Press to display detailed information on the current digital program.

EPG 85

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Home Menu 24

Press to display or turn off the menu screen.

Finish 24

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode 110・160

Press to select the desired screen mode.

Media select 83

Press to select the desired media (TV or data).

Familink 148・152~154

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Display 80

Press to display or turn off the channel call, etc.

Sleep timer 169

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Wake up timer 104

Press to set wake up timer.

AV mode select 113

Press to select the picture/sound setting that best matches the current program.

Freeze 101

Press to freeze the picture.

Channel select 79

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) 79

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Familink 149

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Input select 133

Press to select the desired input.

Display the Tool Menu

Cursor (up, down, left, right) 24

Use to select a menu item, column, etc.

Enter/Confirm 24

Press to confirm a selected setting or menu item.

Return 24

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 88~89

Use to operate EPGs and data program screens.

Picture select 99


Press to select the desired picture when watching a digital multi-picture program.

Caption 99・100


Press to display, select, or turn off captions when watching a digital program with captions.

Audio select 98・99

Press to select the desired audio.

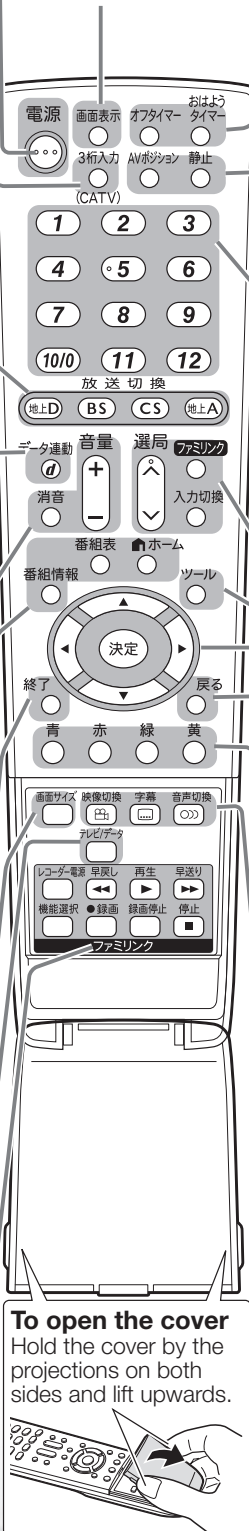

To open the cover
Hold the cover by the projections on both sides and lift upwards.

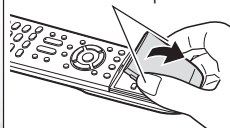


Switching the Display Language to English

ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

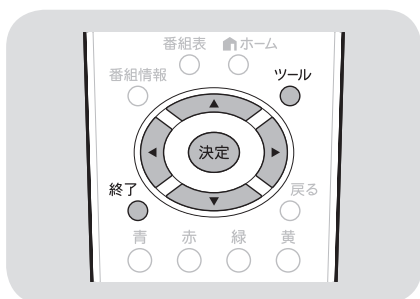


誤ってホームメニューを英語にしてしまったときは

- ・ ホームメニューから「Setup」 - 「 (View Setting)」 - 「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。


1 Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

Press and select with

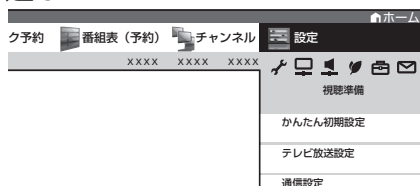


2 Select “ (視聴準備)” (View Setting).
 (視聴準備) を選ぶ

Select with

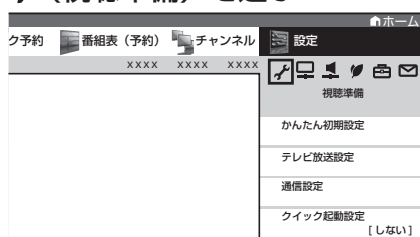


3 Select “Language (言語)”.
「Language (言語)」を選ぶ

Select with Press

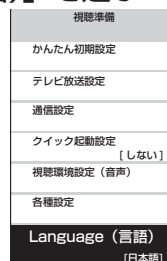

4 Select “English”.
「English」を選ぶ
決定する

 Select with Press



- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

5 Finish this operation.
終了する

Press

はじめに

準備

番組を見る

ヒューマンプレーヤ
で録画・再生

ファミリンク
で録画・再生

ゲームパソコン
をつなぐ

本機をさらに
活用する

故障かな仕様・
寸法図など

English
Guide