


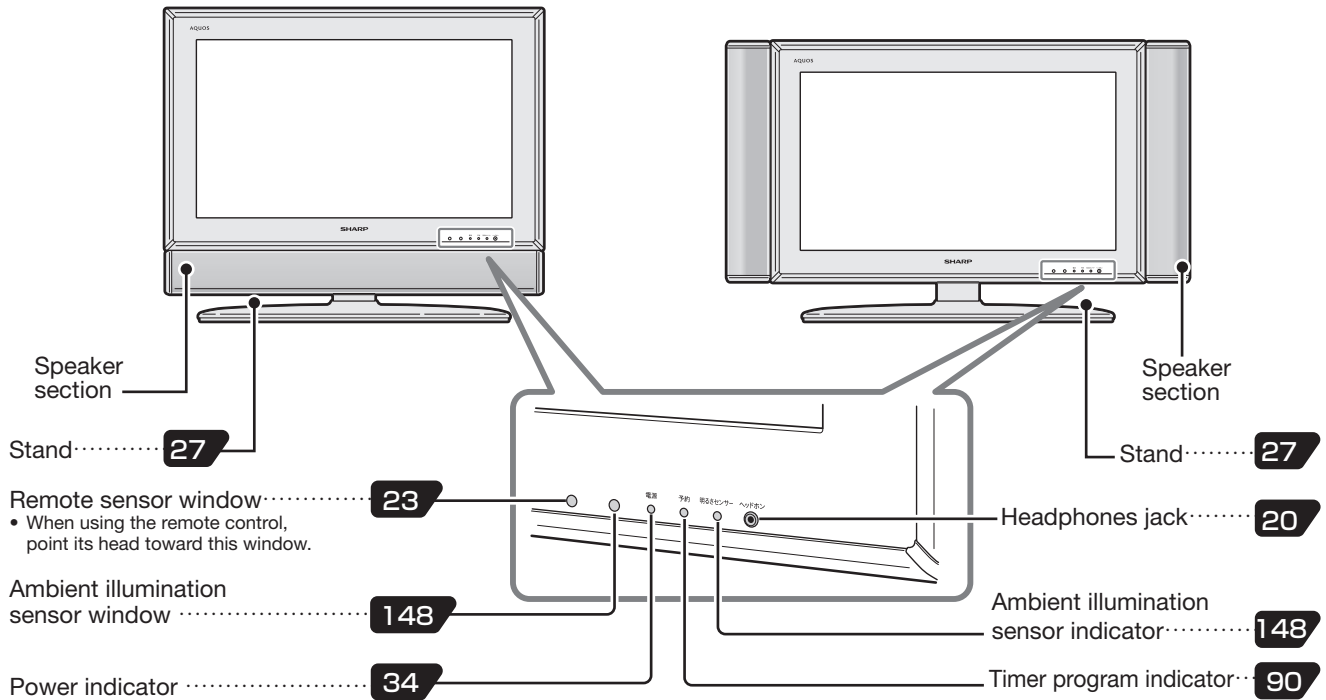
# Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

## Front view

LC-26GH1


LC-26GH2



## Top view


LC-26GH1

LC-26GH2

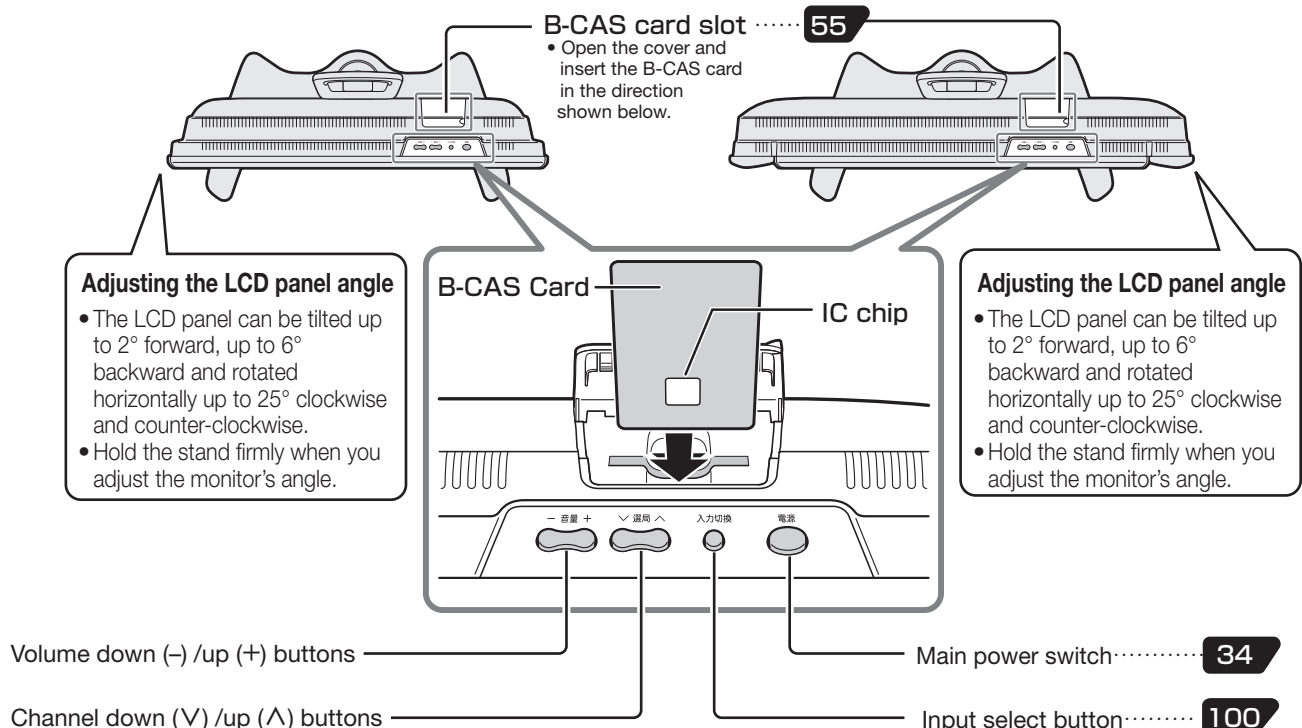


# Rear view


The illustrations below are those of LC-26GH1. LC-26GH2 has the same layout of jacks and terminals as LC-26GH1.

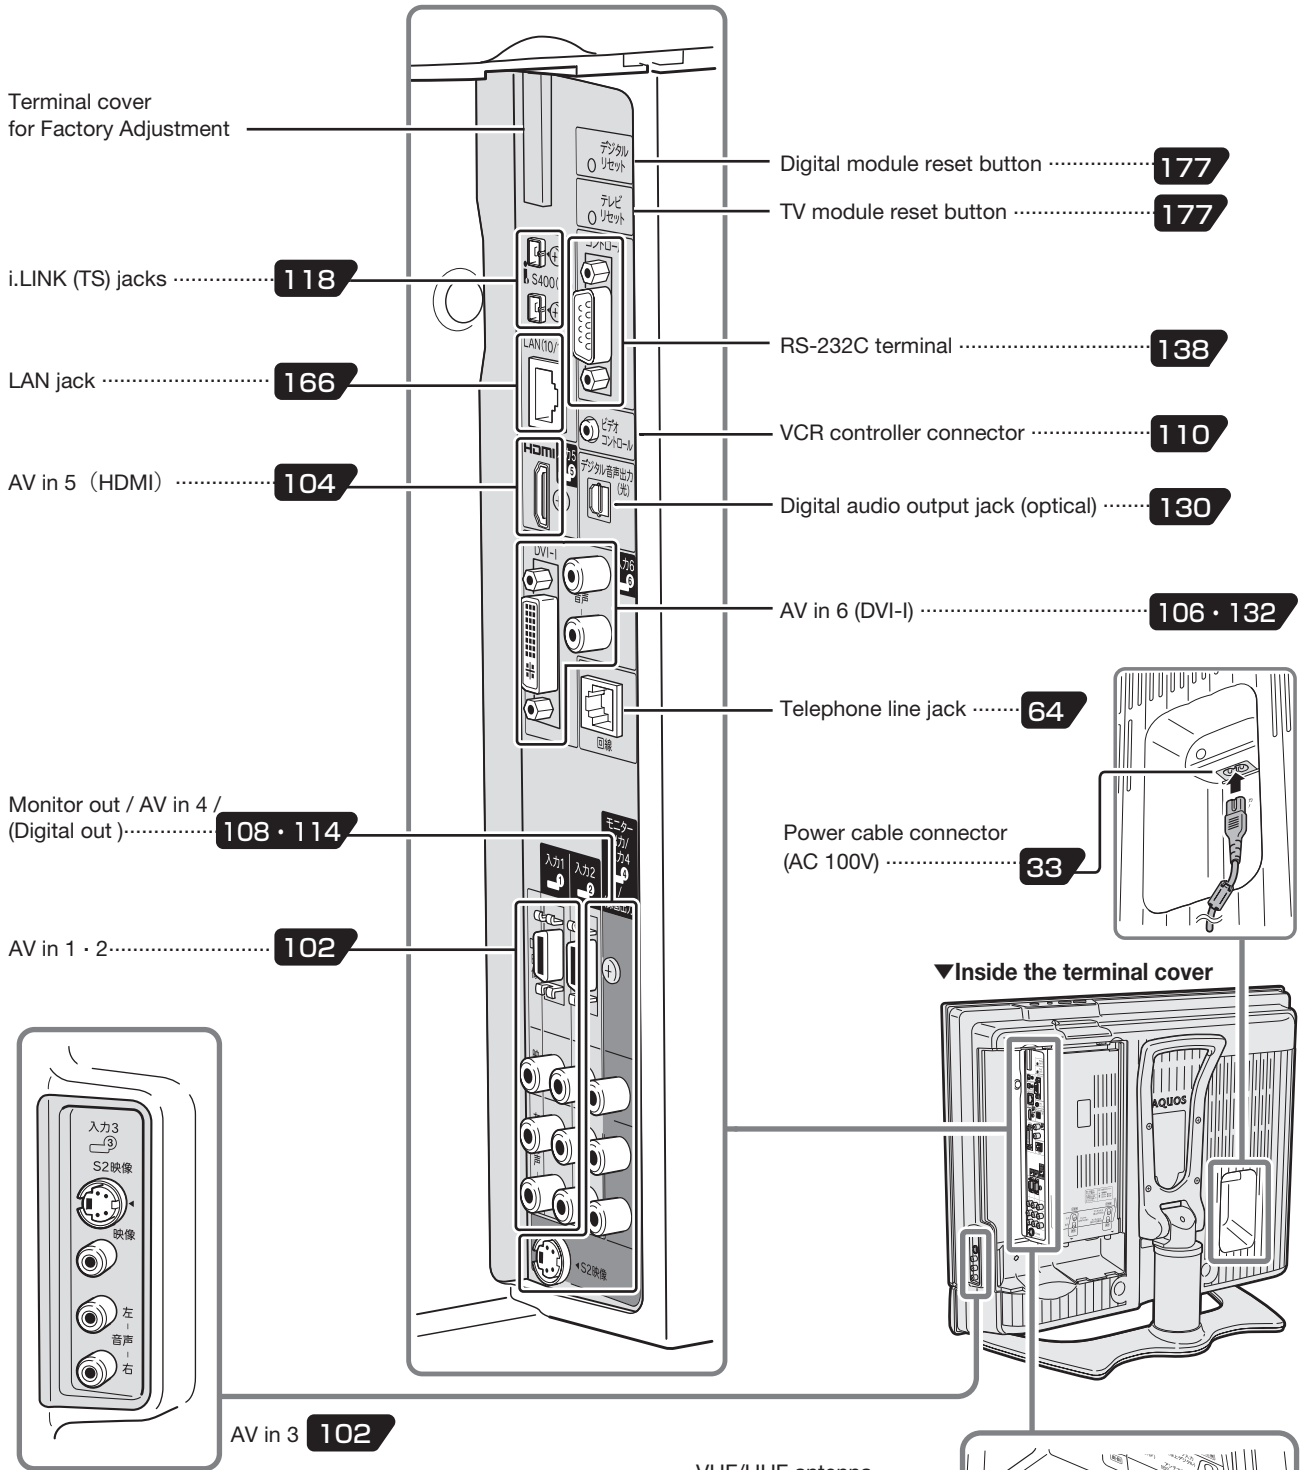

## Opening the terminal cover

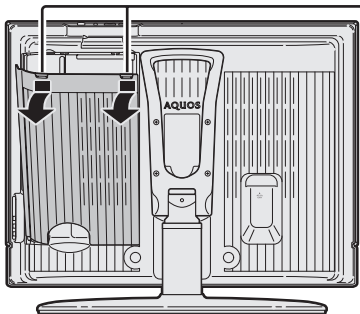

Holding the lock at the top of the cover downward, pull the cover off the back of the main unit.

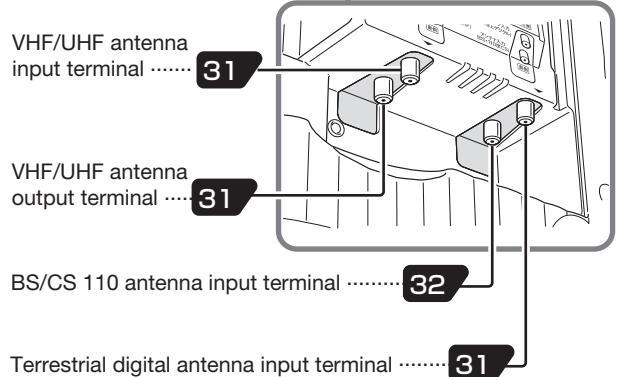

# Part Names – Remote Control Unit

## Cover closed

**Display**..... **82**  
Press to display or turn off the channel call, etc.

**Active/Standby**..... **34**  
Press to engage the TV set in the active or standby mode.

**CATV**..... **73**  
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

**Terrestrial digital select**..... **59-72**  
Press to select the terrestrial digital network.  
\* Use this button after the TV set is tuned to receive terrestrial digital broadcasts.

**Terrestrial analog select**..... **45-72**  
Press to select the terrestrial analog network.

**d (linked data broadcast)**..... **80**  
Press to call the data broadcast linked with the current digital TV program.

**Volume up (+)/down (-)**  
Press to adjust the volume.

**Mute**  
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

**EPG**..... **72-82**  
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

**Program info**..... **80**  
Press to display detailed information (e.g. title, genre, on-air time, cast, writer, etc.) on the current digital program.

**Cursor (up, down, left, right)**..... **40**  
Use to select a menu item, column, etc.

**Enter/Confirm**..... **40**  
Press to confirm a selected setting or menu item.

**Finish**..... **40**  
Press to end the picture freeze mode, turn off the EPG display, or finish menu operation, etc.

**Note**  
This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

**Color (blue, red, green, yellow)**  
..... **80-82**  
Use to operate EPGs and data program screens.

**Sleep timer**..... **154**  
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

**i.LINK**..... **118-119**  
Press to select the i.LINK mode. Press to display or turn off the D-VHS VCR, AV-HDD recorder, Blu-ray Disc recorder or Hi-Vision Video camera control panel.

**Favorite channel select/register**..... **73-156**  
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

**Digital channel number input**..... **73**  
When selecting a digital channel by entering the 3-digit channel number, press this button first, then enter the channel number with the channel select buttons (1-10/0).

**Channel select**..... **72**  
• Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).  
• Use to input a number for various settings.

**CS select**..... **72**  
Press to select the CS digital networks.

**BS select**..... **72**  
Press to select the BS digital network.

**Media select**..... **72**  
Press to select the desired media (TV, radio, or data).

**Channel up (^)/down (v)**..... **72**  
Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

**Input select**..... **103-116**  
Press to select the desired input.

**Other on-air programs**..... **86**  
Press to display the EPG for currently on-air programs only (裏番組).

**Menu**..... **40**  
Press to display or turn off the menu screen.  
*The menus can be displayed in English. See page 42 for instructions on how to switch the display language.*

**Return**..... **40**  
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

## Cover open

**Digital channel register**..... **76**  
Press to display or turn off the channel register/registered channel table screen.

**Freeze**..... **158**  
Press to freeze the picture.

**Screen mode**..... **134-143**  
Press to select the desired screen mode.

**Picture select**..... **79**  
Press to select the desired picture when watching a digital multi-picture program.

**GR**..... **74**  
Press to activate or deactivate the GR (ghost reduction) function.


**AV mode select**..... **147**  
Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

**Caption**..... **160**  
Press to display, select, or turn off captions when watching a digital program with captions.


**Audio select**..... **79-152**  
Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

### To open the cover

Hold the cover by the projections on both sides and lift upwards.

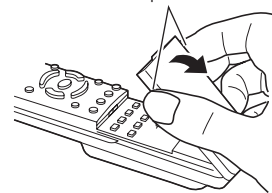

## Basic operation for channel selection

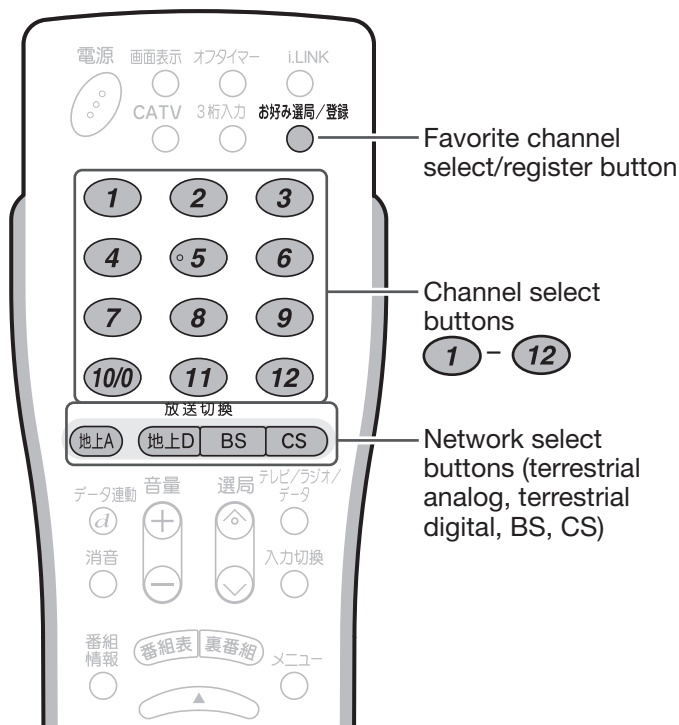

### Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **①** - **⑫** to select the desired channel.

### Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **①** - **⑫** to select the desired channel.

### Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page **72**.

### Selecting favorite channels

- ① Press **お好み選局/登録** to display the registered channel screen.
- ② Press **①** - **⑫** to select the desired channel.