



# Part Names - Main Unit

## Front view

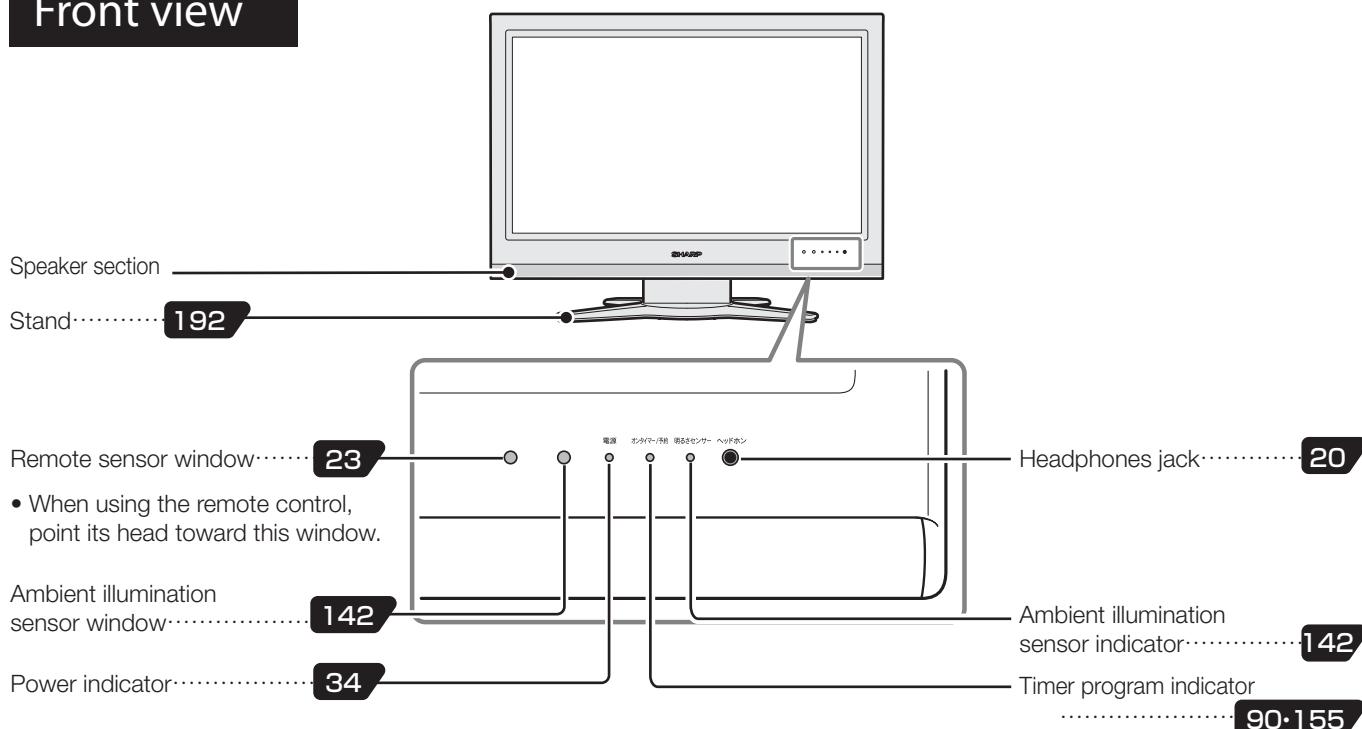

## Top view

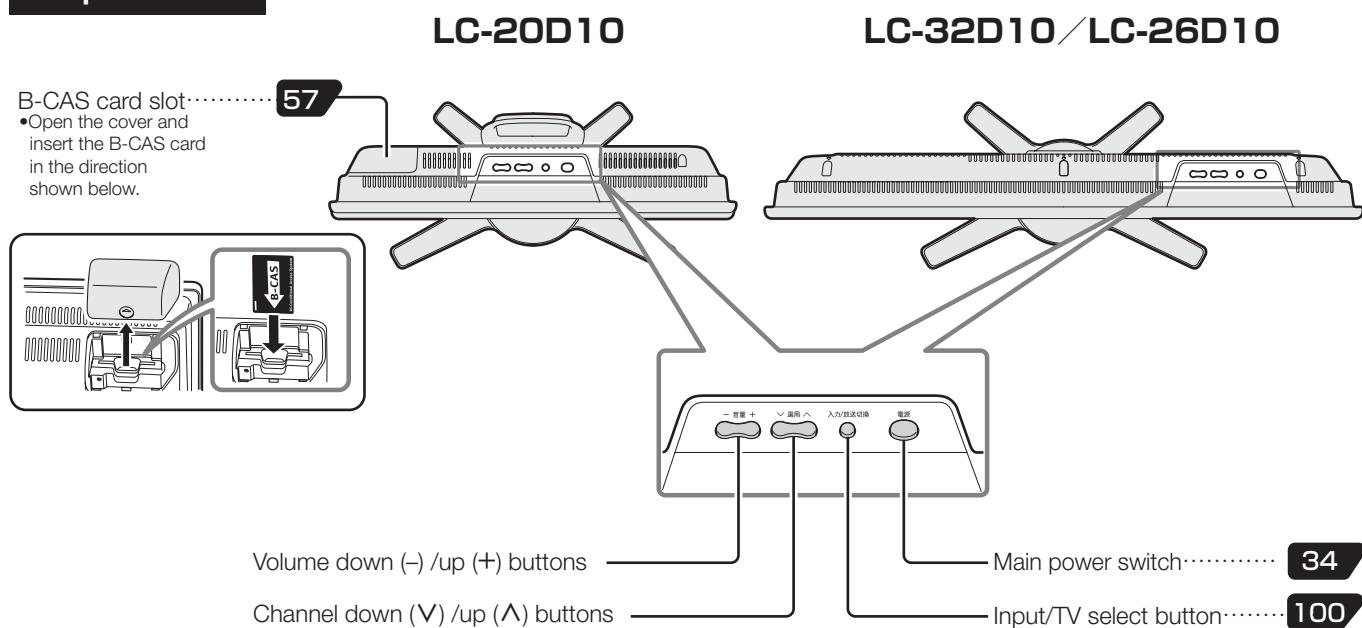


### Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.


## Rear view

The illustrations below are those of LC-32D10. LC-26D10 / 20D10 has the same layout of jacks and terminals as LC-32D10.

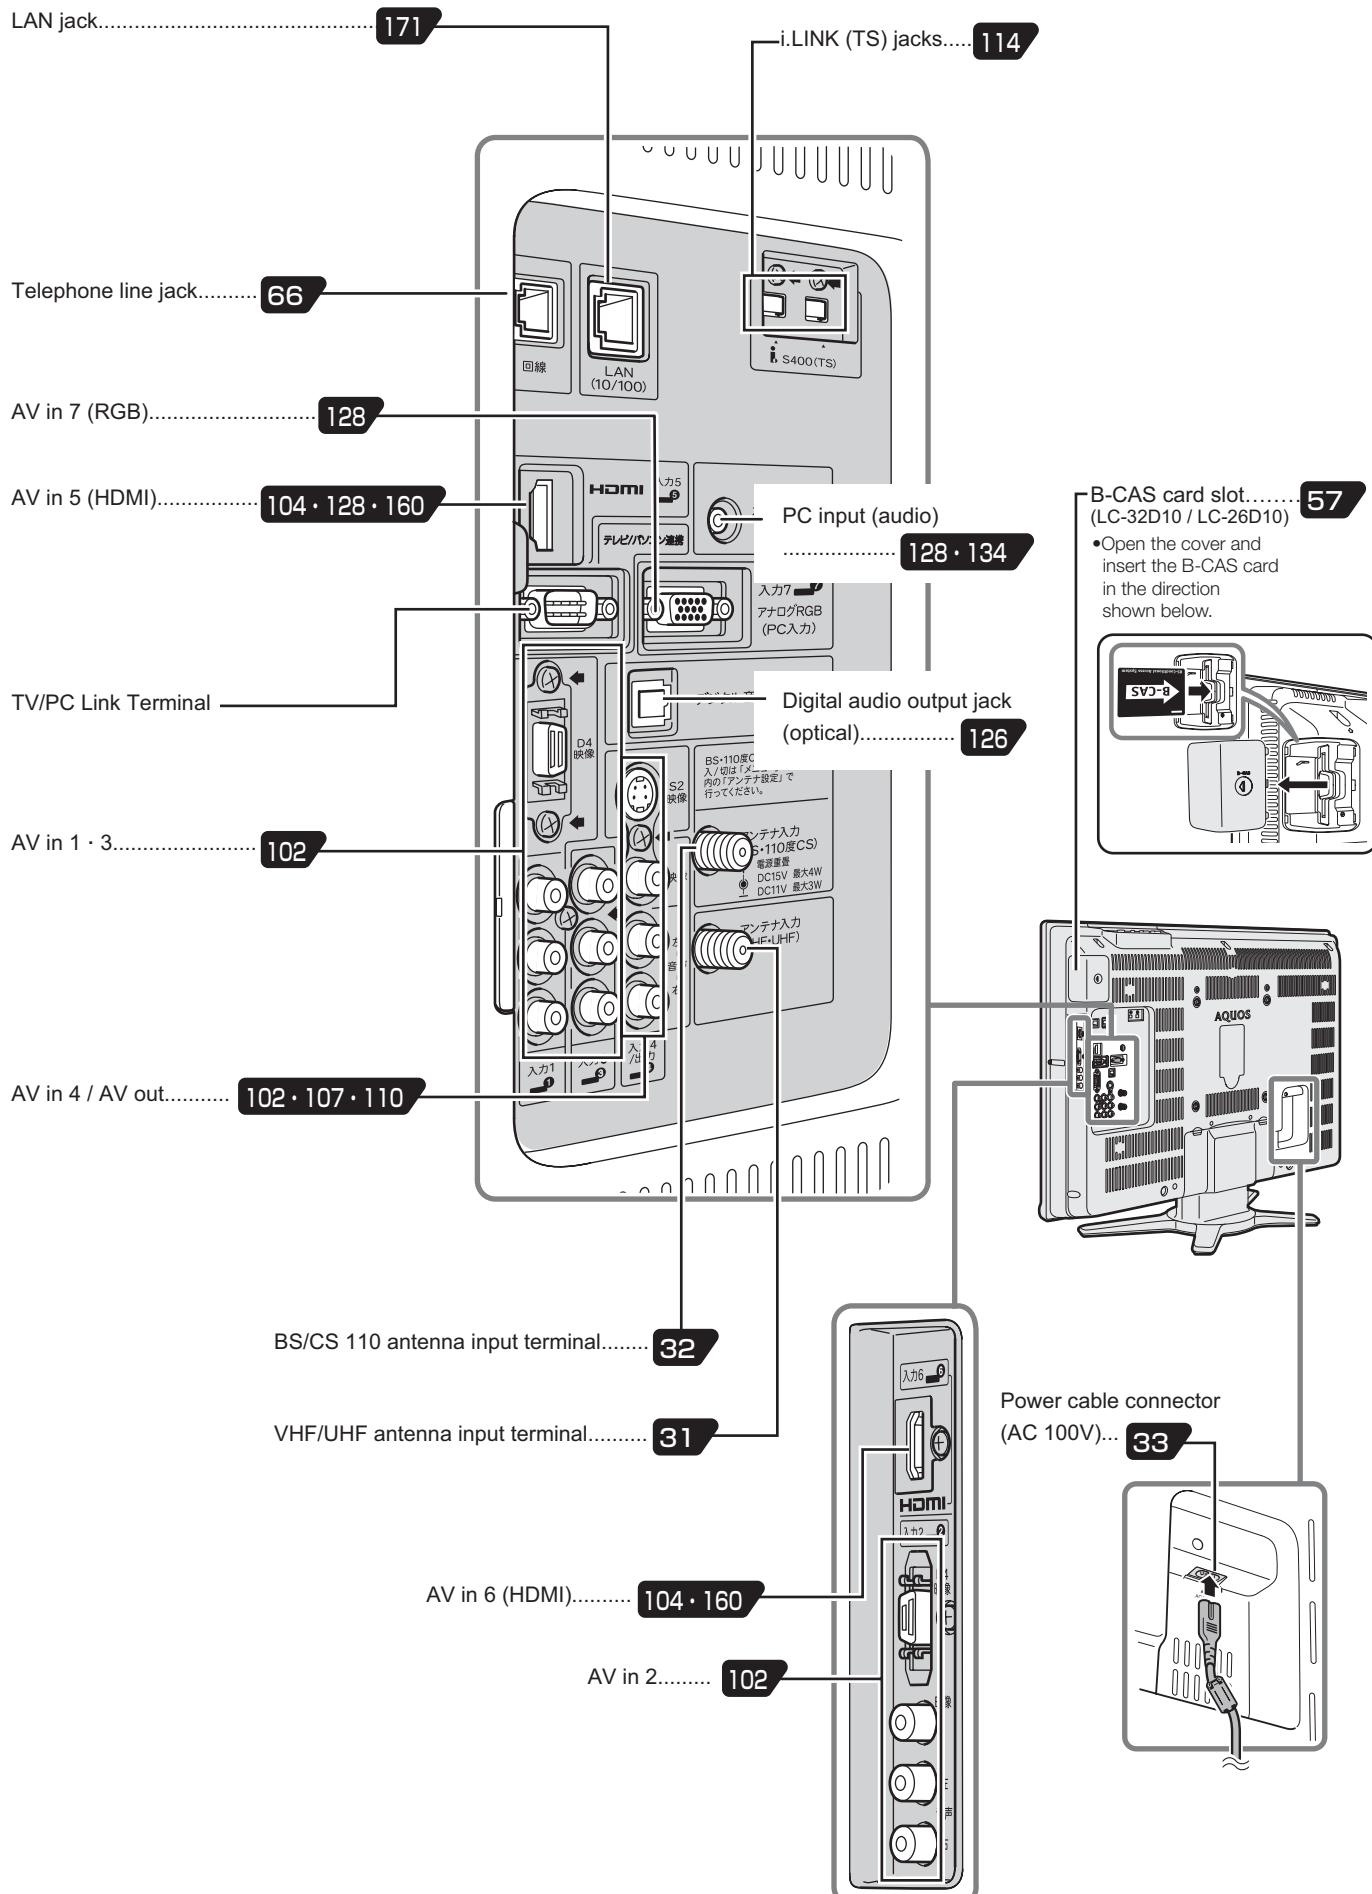


# Part Names - Remote Control Unit


## Cover closed

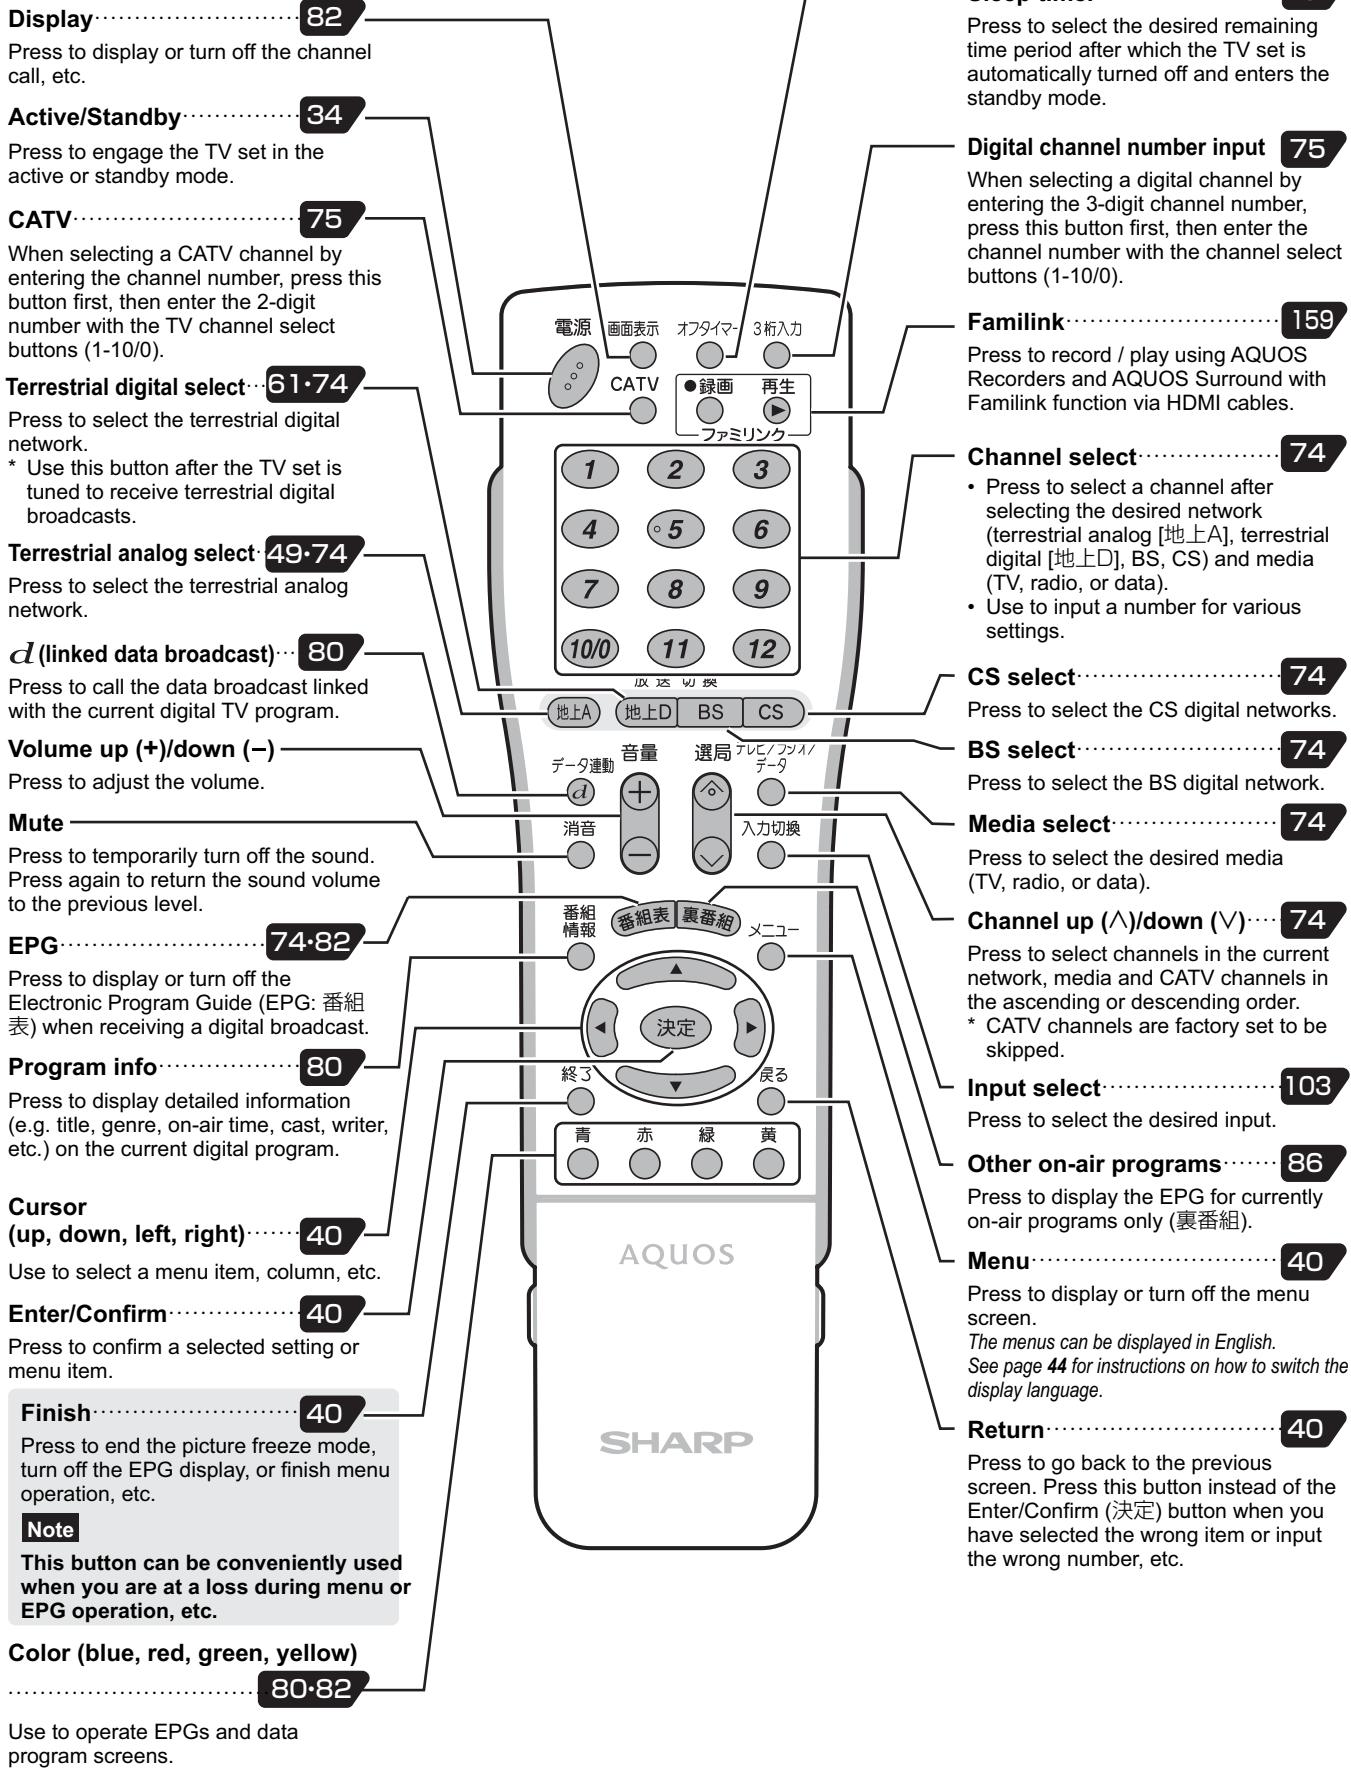

## Cover open

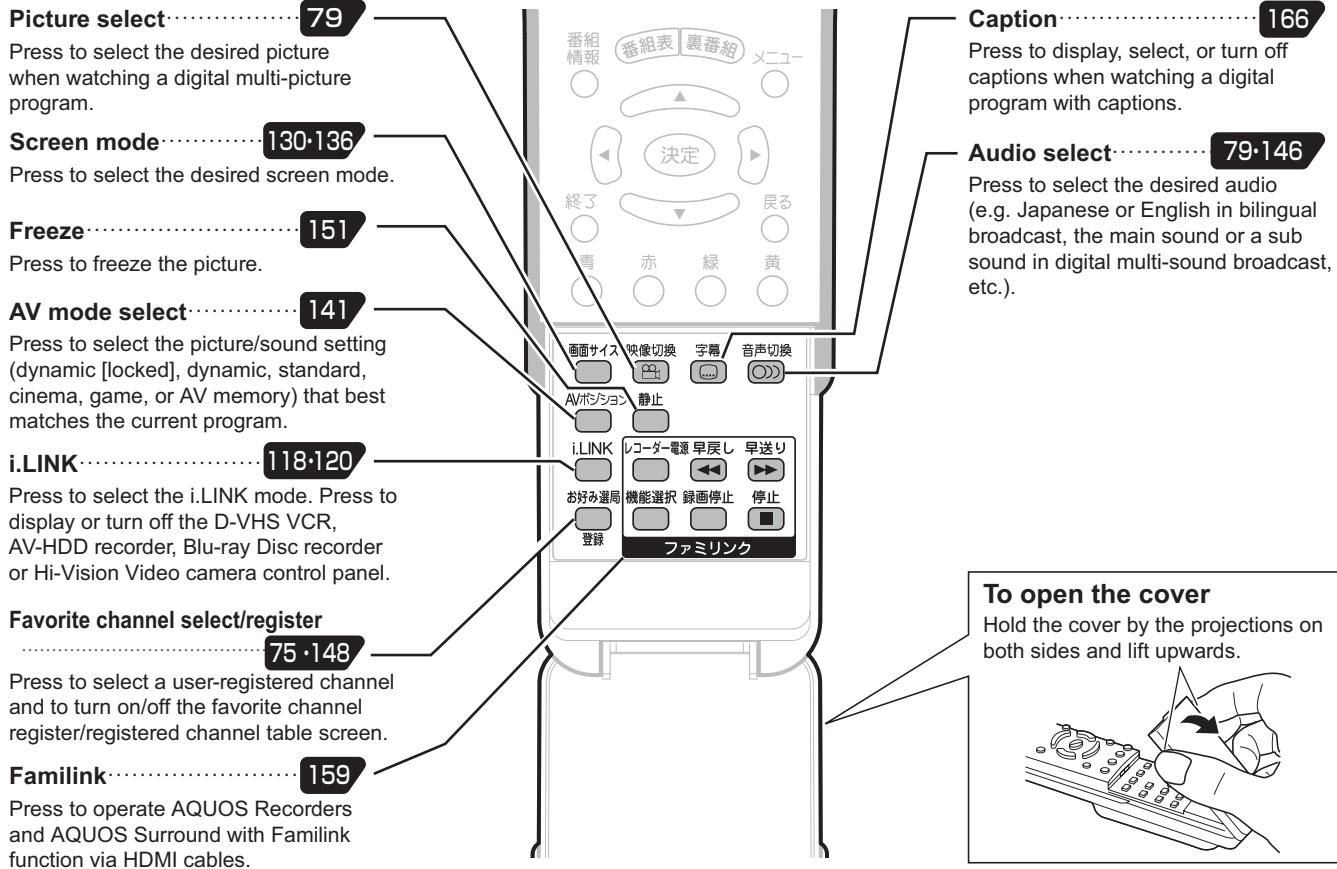

## Basic operation for channel selection

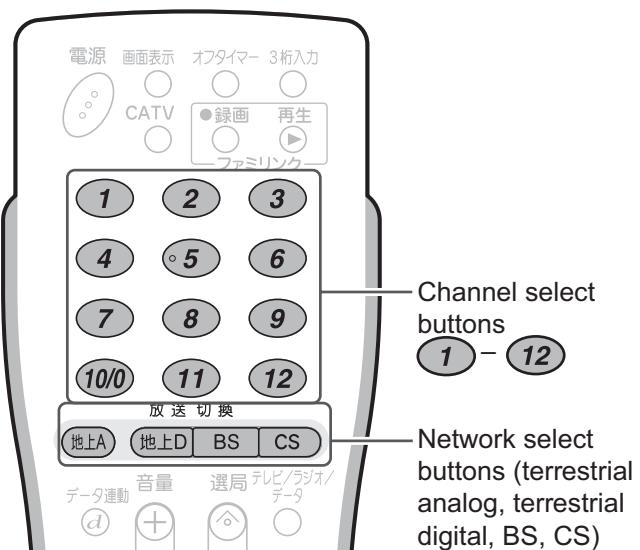

### Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

### Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

#### Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

For details about channel selection, see page 74.

### Selecting favorite channels

- ① Press **お好み選局** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.

