
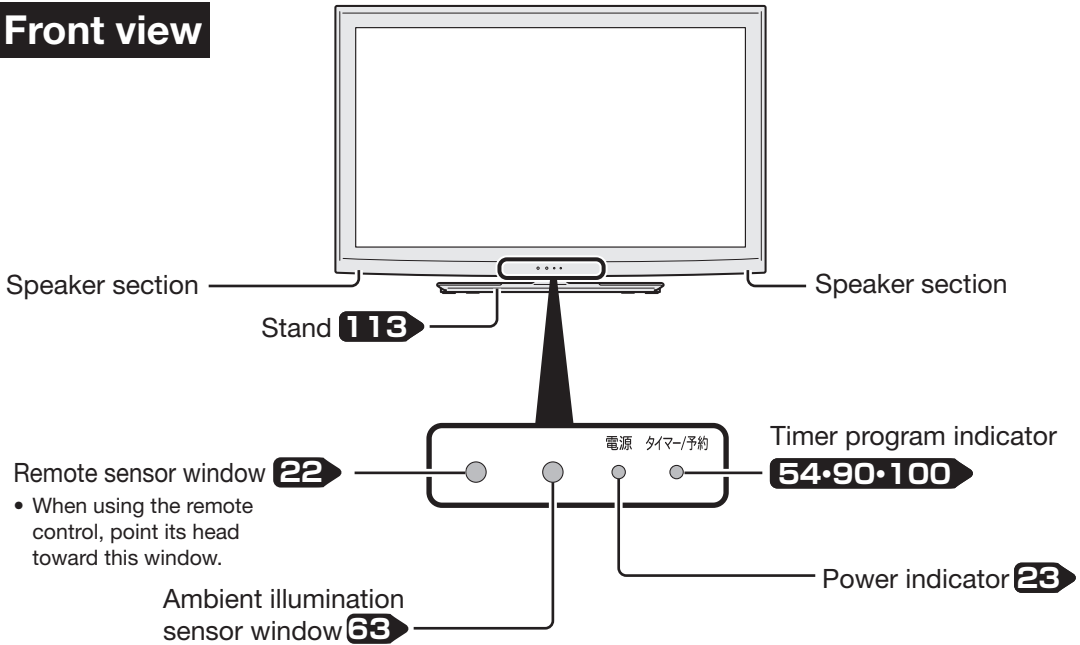


# English Guide


## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

### Front view



### Left side view

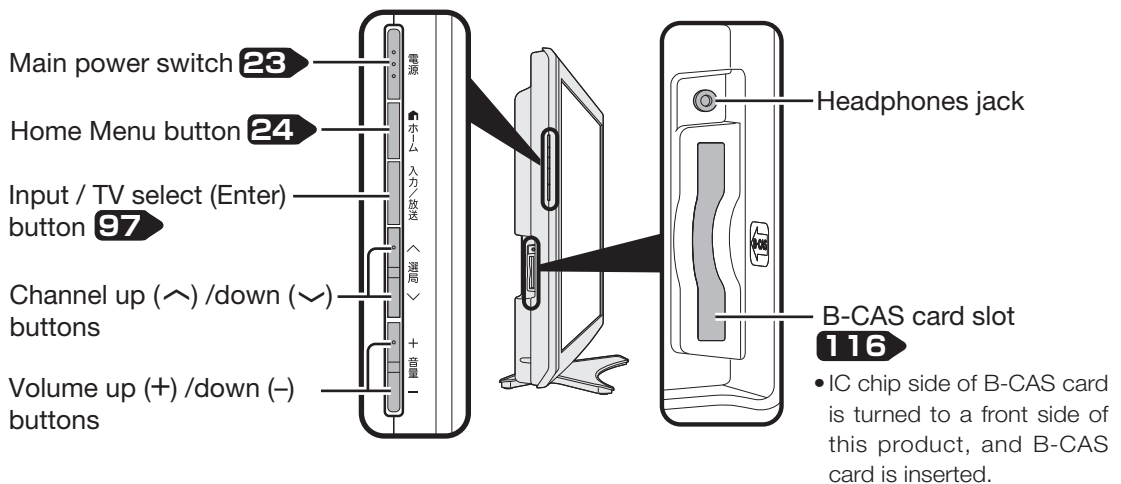

## Back view

The illustrations below are those of LC-40E9.  
LC-32E9 has the same layout of jacks and terminals as LC-40E9.

AV in 5 (PC)

**131**

AV in 4 (D5) /Audio out

**125・127・  
128・129**

LAN jack  
(10BASE-T/100BASE-TX)

**182**

Factory adjustment terminal

**177**

BS-CS 110 antenna  
input terminal

**118~121**

VHF-UHF antenna  
input terminal

**118~121**

PC input (audio)

**109・130・131**


Digital audio  
output jack (optical)

**123・129**

Connect a Blu-ray  
Disc player,  
AV amplifier, etc.

AV in 1・2 and 3 (HDMI)

**95・122・123・  
125・126・128・  
130・131**

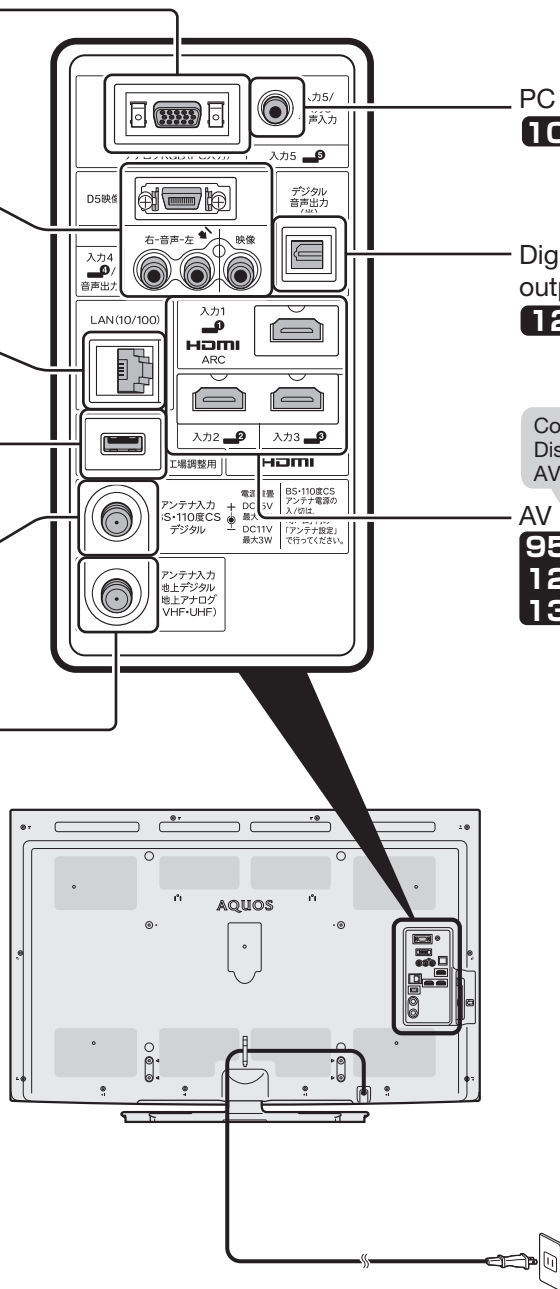

# Remote Control Unit

**電源** **Active/Standby 23**  
Press to engage the TV set in the active or standby mode.

**画面サイズ** **Screen mode 67・107**  
Press to select the desired screen mode.

**画面表示** **Display 33**  
Press to display or turn off the channel call, etc.

**字幕** **Caption 48**  
Press to display, select, or turn off captions when watching a digital program with captions.

**3桁入力 (CATV)** **Digital channel number input 31**  
Use to select a digital channel by entering the 3-digit channel number.

**消音** **Mute 29**  
Press to mute audio.

**+音量 -** **Volume up (+)/down (-) 29**  
Press to adjust the volume.

**データ連動** **Linked data broadcast 32**  
Press to call the data broadcast linked with the current digital TV program.

**AVボタソン (画質切換)** **AV mode select 61**  
Press to select the picture/sound setting that best matches the current program.

**オフタイマ** **Sleep timer 69**  
Press to select the remaining time period after which the TV set automatically enters the standby mode.

**ファミリンク** **Familink 86・95**  
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.


**番組表** **EPG 40・90**  
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

**ホーム** **Display the "Home" Menu 24**  
Press to start some useful operations of the TV.

**番組情報** **Program info 33**  
Press to display detailed information on the current digital program.

**終了** **Finish**  
Press to finish menu operation, etc.

**ファミリンク** **85・89・92**  
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

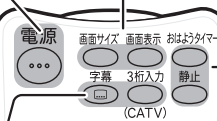

**おはよタイマ** **Wake up timer 54**  
Press to set wake up timer.

**静止** **Freeze 35**  
Press to freeze the picture.

**Channel select 29**  
• Press to select a channel.  
• Use to input a number for various settings.

**地上D** **Terrestrial digital select 29**

**BS** **BS select 29**

**CS** **CS select 29**

**地上A** **Terrestrial analog select 29**  
When selecting the CS digital channel for the first time. **139**

**選局** **Channel up (^)/down (v) 29**  
Press to select channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped. **157**

**入力切換** **Input select 97・103・107**  
Press to select the input.

**ツール** **Display the Tool Menu 28**

**Cursor (up, down, left, right) 24・25**  
Use to select a menu item, column, etc.

**決定** **Enter/Confirm 24・25**  
Press to confirm a selected setting or menu item.

**戻る** **Return**  
Press to go back to the previous screen.

**青 赤 緑 黄** **Color 41~45**  
Use to operate EPGs and data program screens.

**セーブモード** **SAVE mode 72**  
Press to change to the SAVE mode.

**テレビデータ** **Media select 29・32**  
Press to select the media (TV or data).

**映像切換** **Picture select 48**  
Press to select the desired picture when watching a digital multi-picture program.

**音声切換** **Audio select 48・50**  
Press to select the audio.



**To open the cover**  
Hold the cover by the projections on both sides and lift upwards.




# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.  
ホームメニューなどの画面表示を英語にすることができます。



## ◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」 - 「 (View Setting)」 - 「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

## 1

Press  and select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



## 2

Select with



Select “ (視聴準備)” (View Setting).


 (視聴準備)を選ぶ



## 3

Select with  Press 

Select “Language(言語)”.  
「Language(言語)」を選ぶ

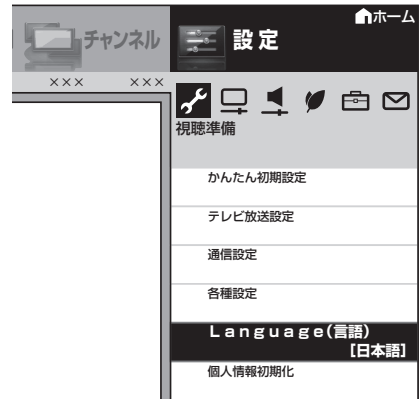

## 4

Select with  Press 

Select “English”.  
「English」を選ぶ

Enter.  
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

## 5

Press 

Finish this operation.  
終了する