
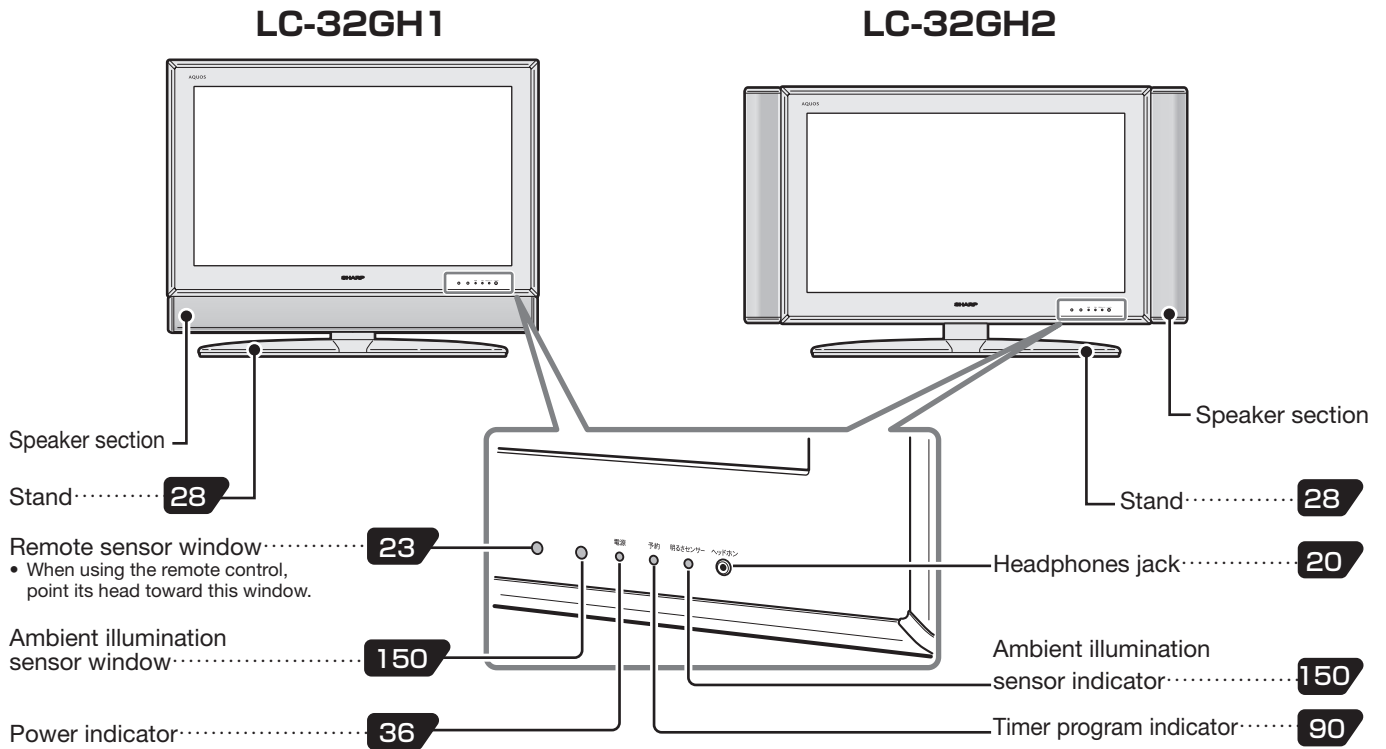



Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

Front view




Top view

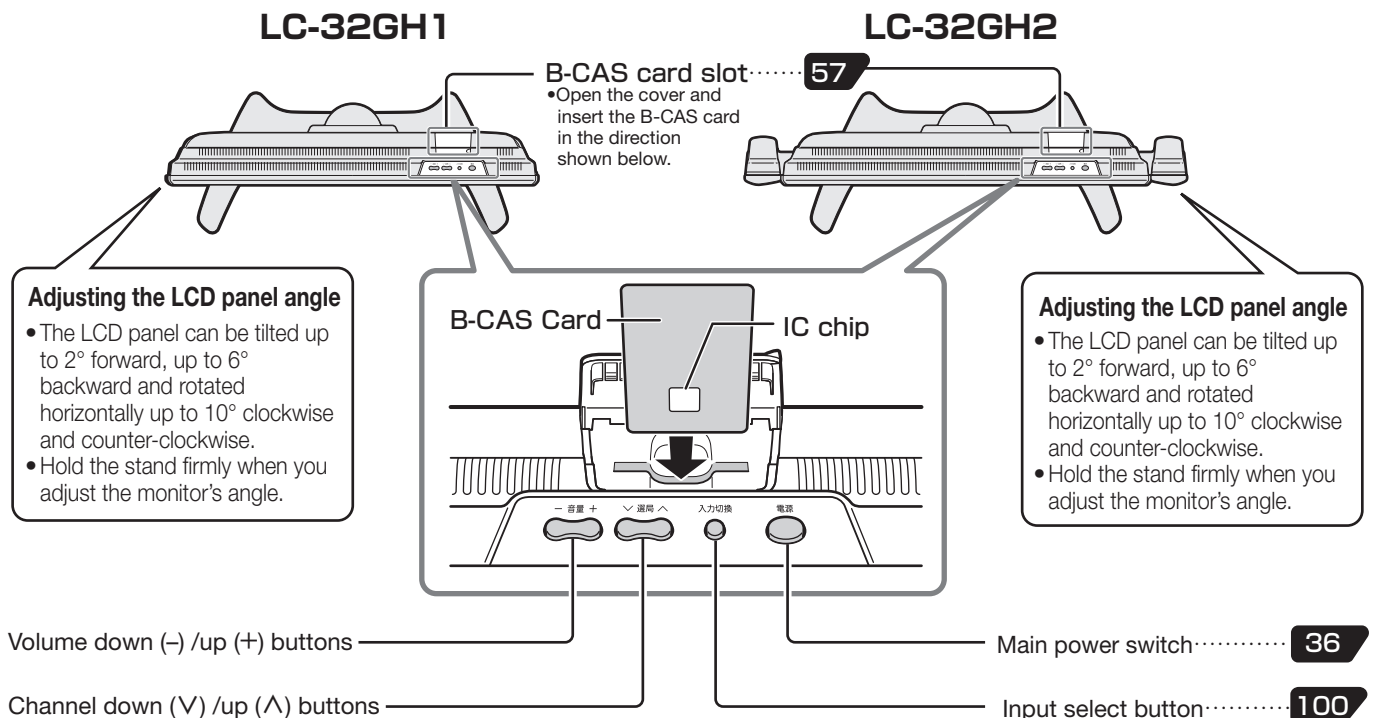


Rear view


The illustrations below are those of LC-32GH1. LC-32GH2 has the same layout of jacks and terminals as LC-32GH1.

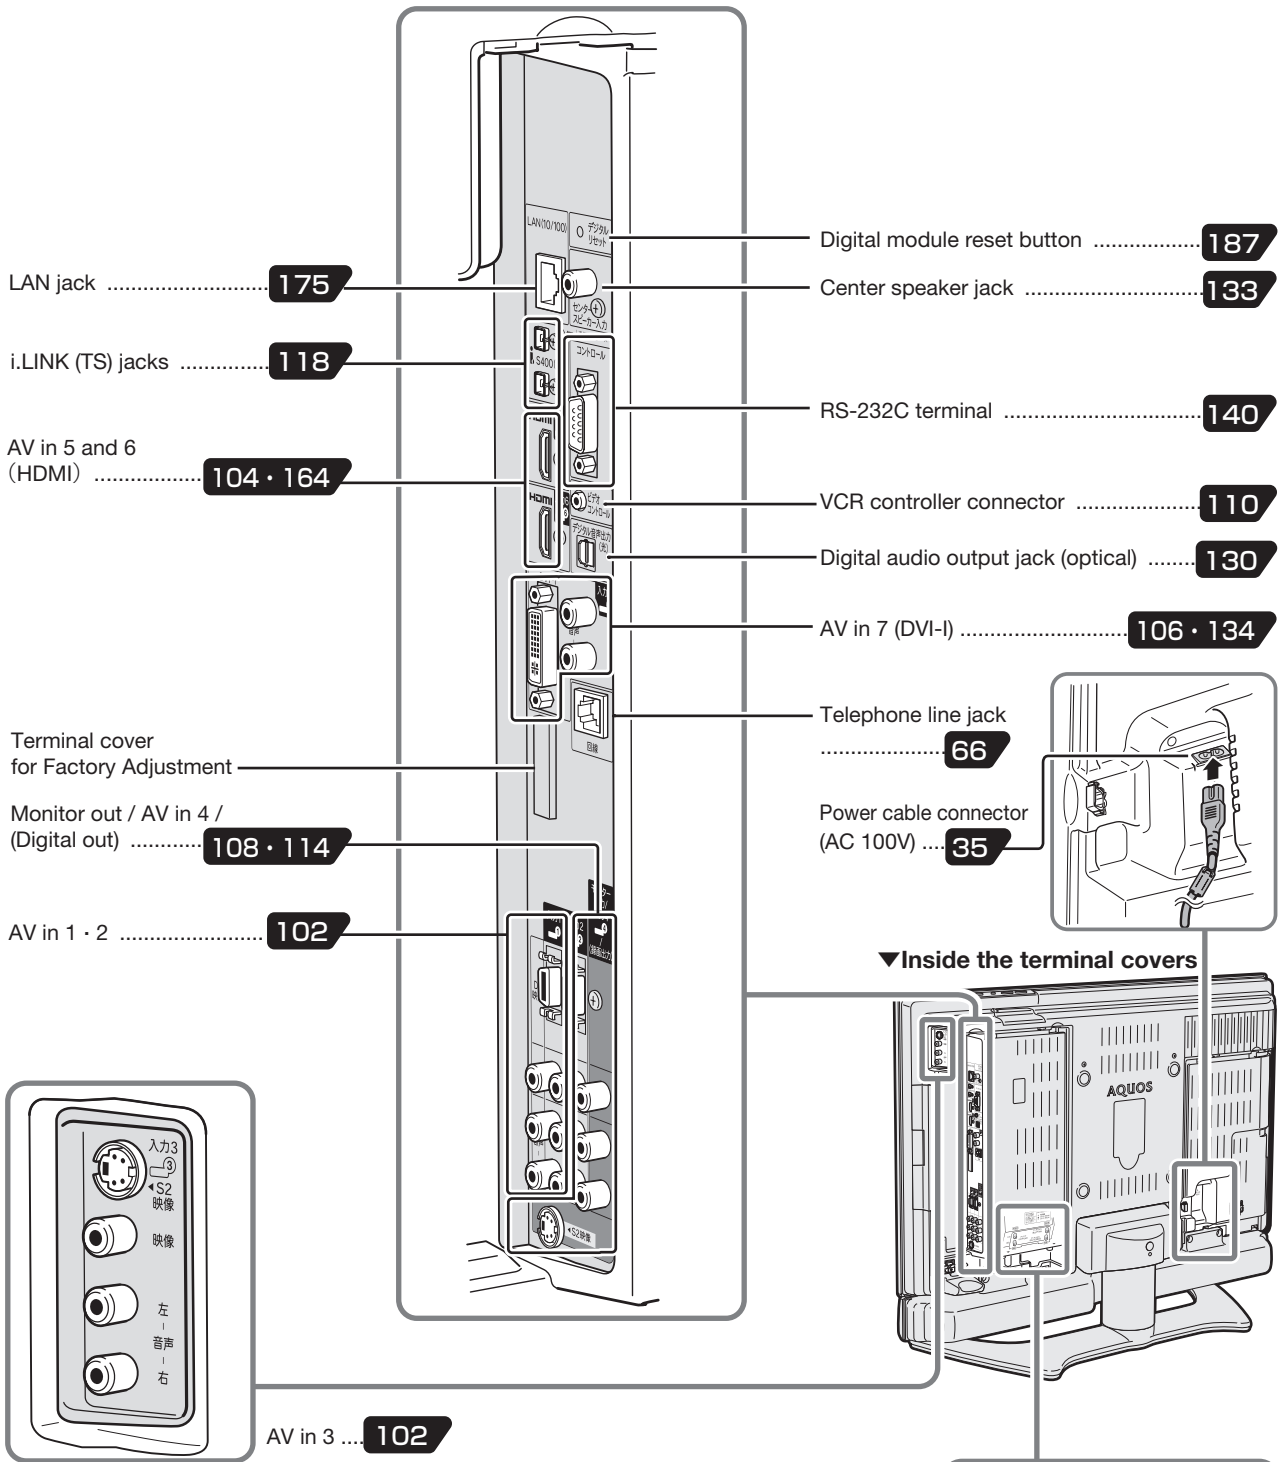

Opening the terminal covers

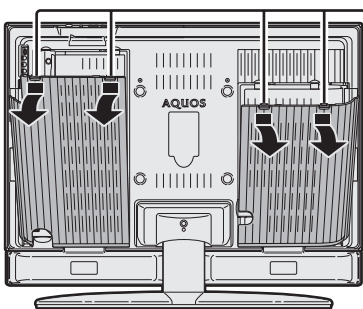

Holding the lock at the top of the cover downward, pull the cover off the back of the main unit.

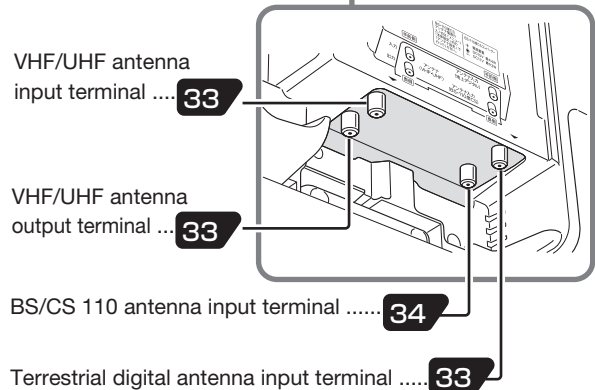

Part Names – Remote Control Unit

Cover closed

Display..... **82**
Press to display or turn off the channel call, etc.

Active/Standby..... **36**
Press to engage the TV set in the active or standby mode.

CATV..... **75**
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial digital select..... **61-74**
Press to select the terrestrial digital network.
* Use this button after the TV set is tuned to receive terrestrial digital broadcasts.

Terrestrial analog select..... **47-74**
Press to select the terrestrial analog network.

d (linked data broadcast)..... **80**
Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-)
Press to adjust the volume.

Mute
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

EPG..... **74-82**
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Program info..... **80**
Press to display detailed information (e.g. title, genre, on-air time, cast, writer, etc.) on the current digital program.

Cursor (up, down, left, right)..... **42**
Use to select a menu item, column, etc.

Enter/Confirm..... **42**
Press to confirm a selected setting or menu item.

Finish..... **42**
Press to end the picture freeze mode, turn off the EPG display, or finish menu operation, etc.

Note
This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Color (blue, red, green, yellow)..... **80-82**
Use to operate EPGs and data program screens.

Sleep timer..... **162**
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

i.LINK..... **118-119**
Press to select the i.LINK mode. Press to display or turn off the D-VHS VCR, AV-HDD recorder, Blu-ray Disc recorder or Hi-Vision Video camera control panel.

Favorite channel select/register..... **75-160**
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Digital channel number input..... **75**
When selecting a digital channel by entering the 3-digit channel number, press this button first, then enter the channel number with the channel select buttons (1-10/0).

Channel select..... **74**
• Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).
• Use to input a number for various settings.

CS select..... **74**
Press to select the CS digital networks.

BS select..... **74**
Press to select the BS digital network.

Media select..... **74**
Press to select the desired media (TV, radio, or data).

Channel up (^)/down (v)..... **74**
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Input select..... **103-116**
Press to select the desired input.

Other on-air programs..... **86**
Press to display the EPG for currently on-air programs only (裏番組).

Menu..... **42**
Press to display or turn off the menu screen.
The menus can be displayed in English. See page 44 for instructions on how to switch the display language.

Return..... **42**
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Cover open

Picture select.....79

Press to select the desired picture when watching a digital multi-picture program.

Screen mode.....136·145

Press to select the desired screen mode.

AV mode select.....149

Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

Freeze.....159

Press to freeze the picture.

HDMI CONTROL.....163

Press to operate HDMI CONTROL Recorders and AQUOS Surround connected via HDMI cables.

Caption.....171

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select.....79·154

Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

Operable screen.....158


Press to switch the operable screen (screen with the ♪ mark) when the TV set is in the split screen mode.

Split screen.....158


Press to switch between the split screen mode and the normal screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

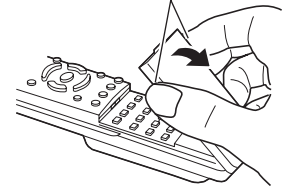

Basic operation for channel selection

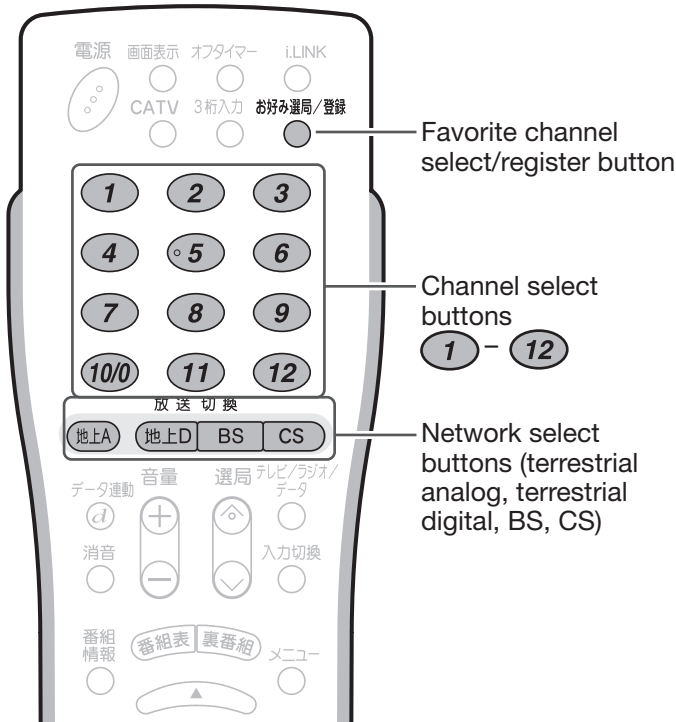

Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page 74.

Selecting favorite channels

- ① Press **お好み選局/登録** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.