
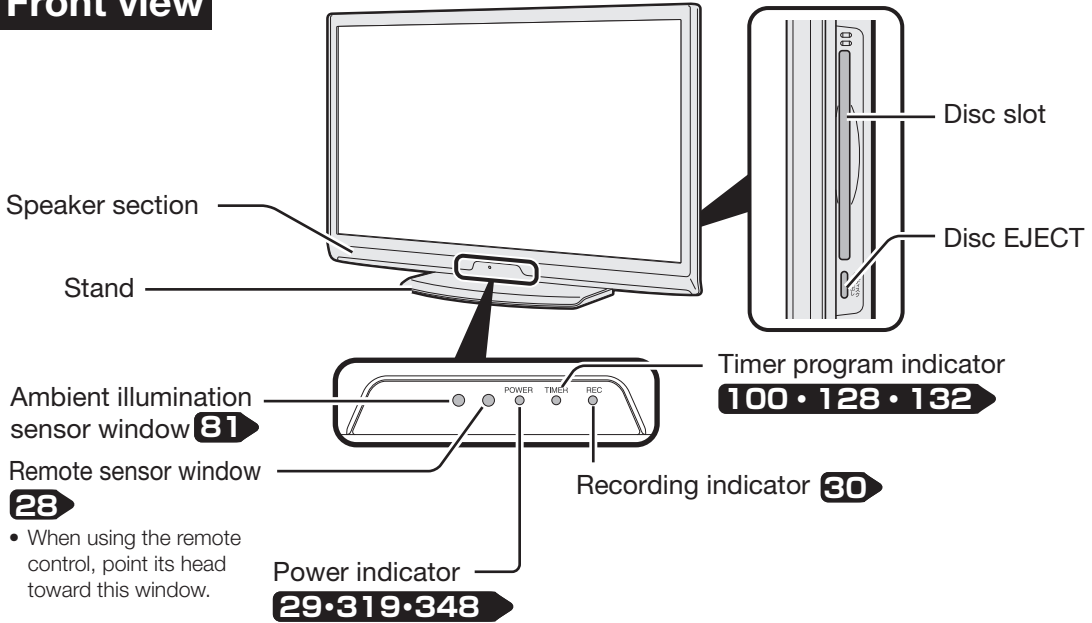


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Left side view

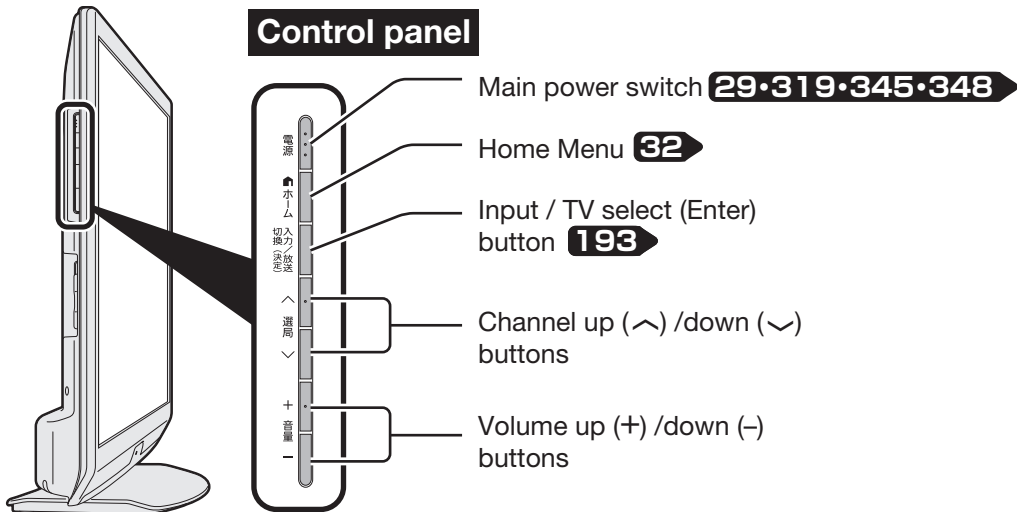

Back view

The illustrations below are those of LC-40R5.
LC-32R5/LC-26R5 has the same layout of jacks and terminals as LC-40R5.

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1・2 and 3 (HDMI)
**191・282・284・
286・287・288・
290**

Digital audio output jack (optical)
287・289

PC input (audio)
290・291

AV in 5 (PC)
291

AV in 4 (D5) /Audio out
**283・285・
288・292**



LAN jack (10BASE-T/100BASE-TX)
209・234

USB terminal

Used only for the input terminal to connect an external equipment with i.LINK output function.

BS-CS 110 antenna input terminal
278~281

VHF-UHF antenna input terminal
278~281

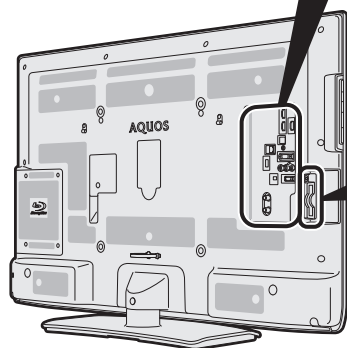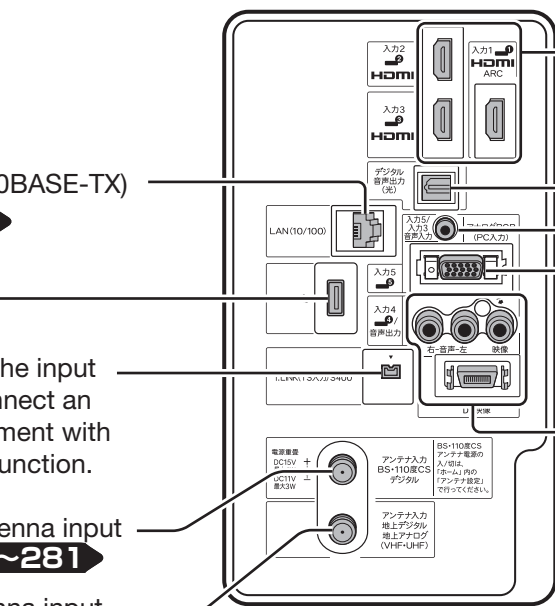

Headphones jack

B-CAS card slot
IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

Remote Control Unit

Active/Standby 29

Press to engage the TV set in the active or standby mode.

地上 Terrestrial digital select 37

Terrestrial analog select 37

BS BS select 37

CS CS select 37

When selecting the CS digital channel for the first time. **300**

データ連動

d Linked data broadcast 40・154・239

Press to call the data broadcast linked with the current digital TV program.

消音 Mute 37

Press to mute audio.

+ 音量 Volume up (+)/down (-) 37

Press to adjust the volume.

番組表(予約) EPG 49・127・184

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム Display the "Home" Menu 32-33

Press to start some useful operations of the TV.

番組情報

Program info 41

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

録画消去

Delete recording 167

Press to delete a title recorded on the USB-HDD.

録画状態

View status of the REC 109
Display the Pop-up Menu(REC) or Disc Menu (DVD) 146

取出し

Eject the disc 31

静止

Freeze 44

Press to freeze the picture.

3桁入力

Digital channel number input 38

Use to select a digital channel by entering the 3-digit channel number.

AV選択

AV mode select 77

Press to select the picture/sound setting that best matches the current program.

オフタイマ

Sleep timer 90

Press to select the remaining time period after which the TV set automatically enters the standby mode.

画面表示

Display 41-42

Press to display or turn off the channel call, etc.

2画面

Split screen 62~63

Press to switch between the split screen mode and the normal screen mode.

操作切換

Operable screen 64

Press to switch the operable screen when the TV set is in the split screen mode.

07カネ

Information 39

Press to display AQUOS information.

Channel select 37・238

- Press to select a channel.
- Use to input a number for various settings.

インターネット

Internet 223・238・242・246

Press to connect to the internet.

Channel up (^)/down (v) 37

Press to select channels in the ascending or descending order.

*CATV channels are factory set to be skipped. **314**

入力切換

Input select 126・173・193

Press to select the input.

Display the Tool Menu 36

Cursor (up, down, left, right) 32-33

Use to select a menu item, column, etc.

Enter/Confirm 32-33

Press to confirm a selected setting or menu item.

Return 32

Press to go back to the previous screen.

Color 40-50 ~ 54-96

Use to operate EPGs and data program screens.

Familink 181 ~ 183・187・191

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切換

Audio select 59-60・154

Press to select the audio.

前画面

Previous screen

Press to return to the most recently viewed channel or input.

字幕


Caption 60・155

Press to display, select, or turn off captions when watching a digital program with captions.

常連番組

Recommended programs select 57~58

Press to select a program which the TV set recommends.

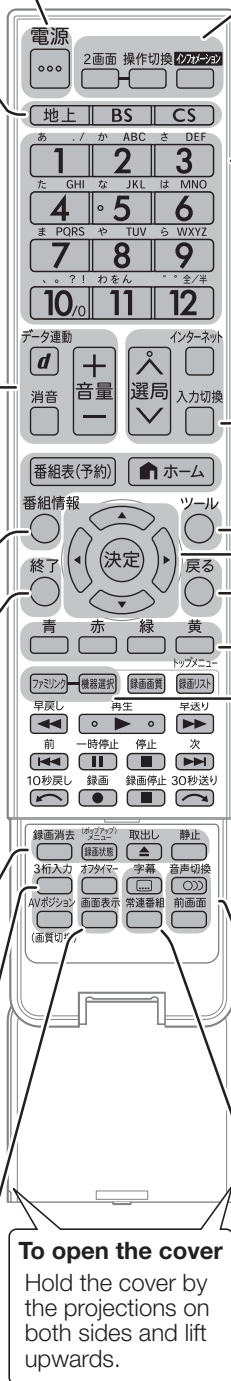

To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」- 「 (View Setting)」- 「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
 and
select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select with




and press



Select “Language (言語)”.

「Language (言語)」を選ぶ

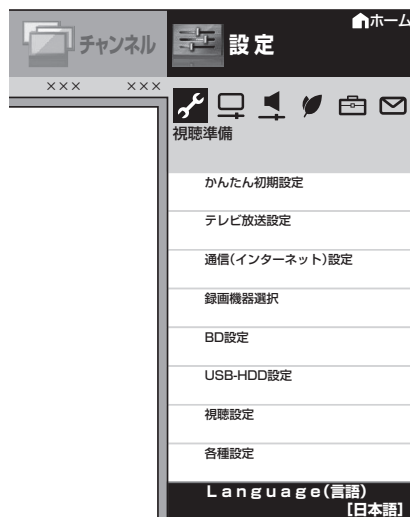

4

Select with



and press



Select “English”.

「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります

5

Press



Finish this operation.

終了する

はじめに
お読みください

テレビを見る/
便利は使いかた

録画・ダビング・
再生

ファミリンク

ビデオ・オーディオ・
パソコンをつなぐ

インターネット/
ホームネットワーク

設置・接続・
受信設定

故障かな？/
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide