


2. SETUP

1. AUDIO SETTINGS

HD Radio™ SYSTEM SETTINGS

HD Radio™ system can be set using the procedure outlined below.

- 1 Press the “MENU” button on the Remote Touch.

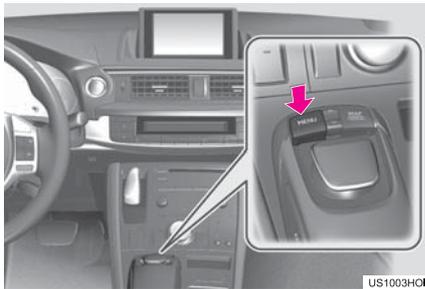


- 2 Select “Setup”.




- 3 Select “Audio”.




- 4 Select “HD Radio Settings”.

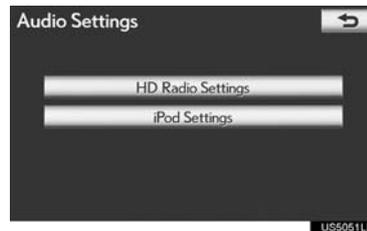

- 5 Select “HD Radio/Analog Setting”.

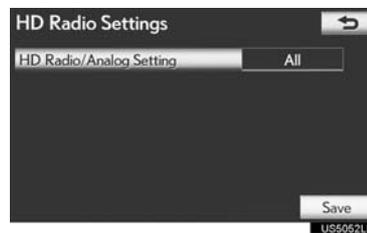

- 6 Select the item to be set.

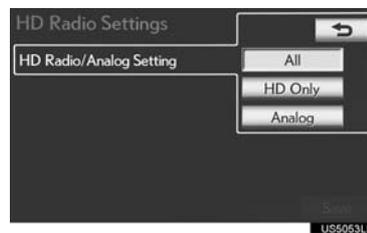

5

AUDIO/VIDEO SYSTEM

Screen button	Function
“All”	Select to receive both analog and digital broadcasts.
“HD Only”	Select to receive only digital broadcasts.
“Analog”	Select to receive only analog broadcasts.

- 7 Select “Save”.

2. SETUP


iPod SETTINGS

iPod can be set using the procedure outlined below.

COVER ART DISPLAY SETTINGS

When the track currently being played has cover art data, it can be displayed.

- 1 Press the "MENU" button on the Remote Touch.

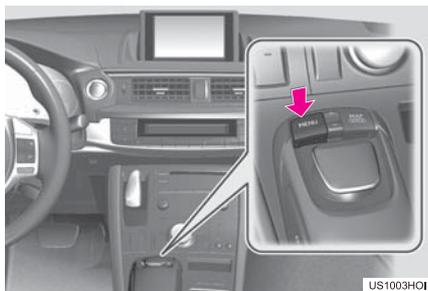


- 2 Select "Setup".



- 3 Select "Audio".



- 4 Select "iPod Settings".

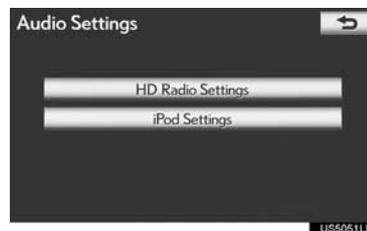

- 5 Select "Display Cover Art".



- 6 Select "On" or "Off".

