

6-2. Customization

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming these preferences requires specialized equipment and may be performed by your Lexus dealer.

It is also possible to customize certain vehicle features yourself using the “DISP” switch and the navigation system screen.

For instructions on customizing vehicle features using the navigation system screen, refer to the “Navigation System Owner’s Manual”.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Customizing vehicle features

It is possible to customize certain vehicle features using the “DISP” switch.

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift position in P and the parking brake set.



Press the “DISP” switch to display the “SETTINGS” screen while the vehicle is stopped, and then press and hold the “DISP” switch to display the customize mode screen.

6-2. Customization



Vehicles without a navigation system:

Press the "DISP" switch and select the "METER" or "VEHICLE" and press and hold the "DISP" switch.



Press the "DISP" switch and select the item, and then press and hold the "DISP" switch.



Press the "DISP" switch and select the desired setting, and then press and hold the "DISP" switch.

To go back to the previous screen or exit the customize mode, press the "DISP" switch to select the "EXIT", and then press and hold the "DISP" switch.

Customizable Features

- 1 Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system
- 2 Vehicles with a navigation system: Settings that can be changed using the “DISP” switch
- 3 Vehicles without a navigation system: Settings that can be changed using the “DISP” switch
- 4 Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – =Not available

Item	Function	Default setting	Customized setting	1	2	3	4
Door lock (→P. 73, 655)	Unlock on Second Key Turn (Allows all doors to be unlocked by turning the mechanical key once in the driver’s door)*1	On (Driver’s door unlocked in first step, all doors unlocked in second step)	Off (All doors unlocked in first step)	○	–	–	○

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Door lock (→P. 73, 655)	SPEED SENSITIVE AUTO. LOCK (All doors are automatically locked when vehicle speed is approximately 12 mph [20 km/h] or higher)	Off	On	O	-	O	O
	SHIFT-LINKED AUTOMATIC LOCK (All doors are automatically locked when shifting the shift position to other than P)	On	Off	O	-	O	O

Item	Function	Default setting	Customized setting	1	2	3	4
Door lock (→P. 73, 655)	SHIFT-LINKED AUTOMATIC UNLOCK (All doors are automatically unlocked when shifting the shift position to P)	On	Off	O	-	O	O
	DRIVER DOOR-LINKED UNLOCK (All doors are automatically unlocked when driver's door is opened)	Off	On	O	-	O	O


6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Smart access system with push-button start and wireless remote control (→P. 55, 68)	LOCK FEED-BACK VOLUME (Adjust the volume of buzzer sounds)	7	Off				
			1 to 6	○	-	○	○
	LOCK/UNLOCK ANSWER BACK (Enable/disable the operation of the emergency flashers when the vehicle is locked or unlocked)	On	Off	○	-	○	○

Item	Function	Default setting	Customized setting	1	2	3	4
Smart access system with push-button start and wireless remote control (→P. 55, 68)	AUTO. RELOCK TIME ADJUSTMENT (Adjust the time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked)	60 seconds	Off				
			30 seconds	○	-	○	○
			120 seconds				
	Operation buzzer (when the vehicle is lock or unlocked)	On	Off	-	-	-	○
	Open door reminder buzzer (When locking the vehicle)	On	Off	-	-	-	○

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Smart access system with push-button start (→P. 55)	SELECT DOORS TO UNLOCK (The doors that are unlocked using the smart access system with push button start can be selected)	Driver's door	All the doors	○	-	○	○
	ACCESS SYSTEM WITH ELEC. KEY (Smart access system with push button start can be disabled)	On	Off	○	-	○	○
	Number of consecutive door lock operations	2 times	As many as desired	-	-	-	○

Item	Function	Default setting	Customized setting	1	2	3	4
Wireless remote control (→P. 68)	Wireless remote control	On	Off	-	-	-	○
	REMOTE 2-PRESS UNLOCK (Allows all doors to be unlocked by pressing  on the electronic key once)	On (Driver's door unlocked in first step, all doors unlocked in second step)	Off (All doors unlocked in first step)	○	-	○	○
	Panic function	On	Off	-	-	-	○
Automatic light control system (→P. 210)	HEADLIGHT OFF TIME ADJUSTMENT (Adjust the time elapsed before the headlights automatically turn off)	30 seconds	Off				
			60 seconds	○	-	○	○
			90 seconds				

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Automatic light control system (→P. 210)	LIGHT SENSOR SENSITIVITY (Adjust the sensitivity of the ambient light sensor)	Standard	-2 to 2	O	-	O	O
	DAYTIME RUNNING LIGHTS (Daytime running lights can be disabled)*2	On	Off	O	-	O	O

Item	Function	Default setting	Customized setting	1	2	3	4
Illumination (→P. 445)	INTERIOR LIGHTS OFF TIME ADJUSTMENT (Adjust the time elapsed before the interior lights automatically turn off)	15 seconds	Off				
			7.5 seconds	○	-	○	○
			30 seconds				
	EXT. LIGHTS OFF TIME ADJUSTMENT (Adjust the time elapsed before the exterior illumination automatically turn off)	15 seconds	Off				
			7.5 seconds	○	-	○	○
			30 seconds				

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Illumination (→P. 445)	Operation after the "POWER" switch is turned to OFF	On	Off	-	-	-	○
	Operation when the doors are unlocked with the smart access system with push-button start or the wireless remote control function or the mechanical key*3	On	Off	-	-	-	○
	Operation when you approach the vehicle with the electronic key on your person*3	On	Off	-	-	-	○

Item	Function	Default setting	Customized setting	1	2	3	4
Illumination (→P. 445)	Footwell lighting	On	Off	-	-	-	○
	Cup holder light	On	Off	-	-	-	○
	Enable/disable operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	-	-	-	○

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Instrument cluster (→P.196)	TACHOMETER (Display of the tachometer and Hybrid System Indicator)	AUTO	KEEP ON*4	-	○	○	○
			OFF	-	○	○	○
	ECO LAMP (On/off operation of the Eco lamp)	ECO DRIVE SUPPORT	KEEP ON	-	○	○	○
			OFF	-	○	○	○
	SPORT LAMP (On/off operation of the sport lamp)	AUTO	OFF	-	○	○	○
	LAMP BRIGHTNESS (Brightness of ECO lamp and SPORT lamp)	STANDARD	BRIGHT	-	○	○	○

Item	Function	Default setting	Customized setting	1	2	3	4
Instrument cluster (→P.196)	EV INDICATOR (On/off operation of the EV drive mode indicator)	AUTO	OFF	-	○	○	○
	LANGUAGE (Language displayed on the screen)	ENGLISH	FRENCH	-	○	○	○
			SPANISH				
	UNITS (Unit displayed on the screen) (except for Canada)	miles (MPG)	km (km/L)	-	○	○	○
			km (L/100km)				
	UNITS (Unit displayed on the screen) (For Canada)	km (L/100km)	km (km/L)	-	○	○	○
			miles (MPG)				

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Automatic air conditioning system (→P. 296)	Efficient Ventilation Mode (Switching between outside air and recirculated air mode linked to "AUTO" switch operation)* ¹	On	Off	○	-	-	○
	AUTO A/C MODE (Enable/disable automatic operation of the air conditioning compressor when the "AUTO" switch ON)	Off	On	○	-	○	○
	Heating/cooling operation minimized in Eco drive mode	On	Off	-	-	-	○

Item	Function	Default setting	Customized setting	1	2	3	4
Power windows (→P.108)	Mechanical key linked operation	Off	On	-	-	-	○
	Wireless remote control linked operation	Off	On (Open only)	-	-	-	○
	Buzzer sounds if operated using wireless remote control*5	On	Off	-	-	-	○

6-2. Customization

Item	Function	Default setting	Customized setting	1	2	3	4
Intuitive parking assist-sensor*6 (→P. 247)	Alert Volume (Alert volume can be adjusted)	3	1 to 5	○	-	-	○
	Display (Automatic display off the LEXUS Park Assist graphic can be enabled/disabled)	On	Off	○	-	-	○
	Distance (Distance mode can be selected)	Long	Short	○	-	-	○

Item	Function	Default setting	Customized setting	1	2	3	4
Seat belt reminder (→P. 611)	Vehicle speed linked seat belt reminder buzzer	On	Off	-	-	-	○
Reverse buzzer (→P. 190)	Signal (buzzer) when the shift position is in R	Intermittent	Single	-	-	-	○

*1: Refer to the "Navigation System Owner's Manual".

*2: This function cannot be customized for vehicles sold in Canada.

*3: Interior or exterior illumination can be set separately.

*4: Except when using the cruise control or dynamic radar cruise control.

*5: This function cannot be customized unless power window operation using the wireless remote control is enabled.

*6: If equipped


6-2. Customization

■ Vehicle customization

- When “SPEED SENSITIVE AUTO LOCK” and “SHIFT-LINKED AUTOMATIC LOCK” are both on, the door lock operates as follows.
 - When shifting the shift position to any position other than P, all the doors will be locked.
 - If the vehicle is started with all the doors locked, “SPEED SENSITIVE AUTO LOCK” would not operate.
 - If the vehicle is started with any door unlocked, “SPEED SENSITIVE AUTO LOCK” will operate.
- When “ACCESS SYSTEM WITH ELEC. KEY” is off, “SELECT DOORS TO UNLOCK” cannot be customized.
- When the doors remain closed after unlocking the doors and “AUTO. RELOCK TIME ADJUSTMENT” activates, the signals will be generated in accordance with the “LOCK/ FEEDBACK VOLUME” and the “LOCK/ UNLOCK ANSWER BACK” settings.


■ In the following situations, customize mode in which the settings can be changed through the “DISP” switch will automatically be turned off.

- A warning message appears after the customize mode screen is displayed.
- The “POWER” switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed.

 **CAUTION**

■ Cautions during customization

As the hybrid system needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 **NOTICE**

■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is running while customizing features.