


















What to do if... What to do if...

	A tire punctures	P. 631	If you have a flat tire
	The hybrid system does not start	P. 645	If the hybrid system will not start
		P. 115	Immobilizer system
		P. 651	If the vehicle 12-volt battery is discharged
	The high coolant temperature warning light flashes or come on	P. 656	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 647	If you lose your keys
	The 12-volt battery runs out	P. 651	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 70	Side doors
		P. 74	Back door
	The horn begins to sound	P. 117	Alarm
	The vehicle is stuck in mud or sand	P. 661	If the vehicle becomes stuck
	A warning light or indicator light comes on	P. 596	If a warning light turns on or a warning buzzer sounds...



Warning lights

BRAKE or 	Brake system warning light (red indicator) P. 596		Electric power steering system warning light P. 598
	Charging system warning light P. 597	PCS	Pre-collision system warning light* P. 599
	Low engine oil pressure warning light P. 597		Slip indicator light P. 599
	High coolant temperature warning light P. 597		Brake system warning light (yellow indicator) P. 599
	Malfunction indicator lamp or 		Automatic headlight leveling system warning light P. 599
	SRS warning light P. 598		Open door warning light P. 600
ABS or 	"ABS" warning light P. 598		Low fuel level warning light P. 600
			Seat belt reminder light P. 600
			Master warning light P. 600
			Tire pressure warning light P. 601

*: The indicator flashes to indicate a malfunction.

What to do if...

What to do if...