


## Quick reference (“Start” screen)

To display the “Start” screen, push the “MENU” button on the Remote Touch.

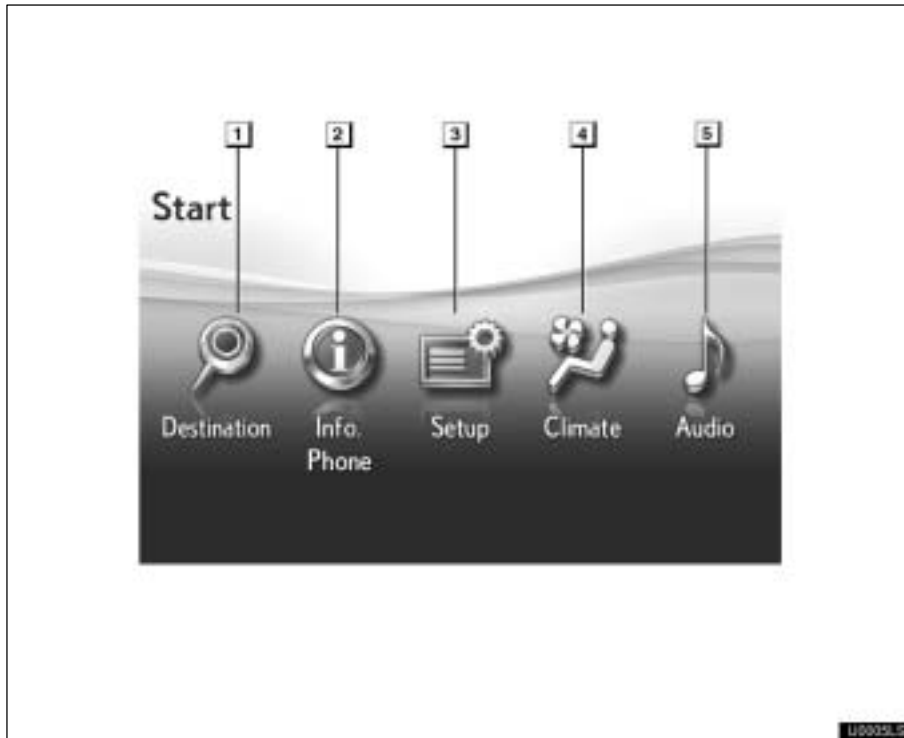

**1 “Destination”**

You can use one of 10 different methods to search your destination. . . . . 18, 67

**2 “Info./Phone”**

Select this button to operate the hands-free system and display fuel economy information, etc. . . . . 21, 135

**3 “Setup”**

Select this button to adjust settings of the navigation, audio and hands-free systems, etc. You can change the language from this screen. (See “● Selecting a language” on page 305.) . . . . . 20, 302

**4 “Climate”**


Select this button to operate the air conditioning system. . . . . 282

**5 “Audio”**

Select this button to operate the audio system. . . . . 188

## Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “MENU” button on the Remote Touch and select “Destination”.

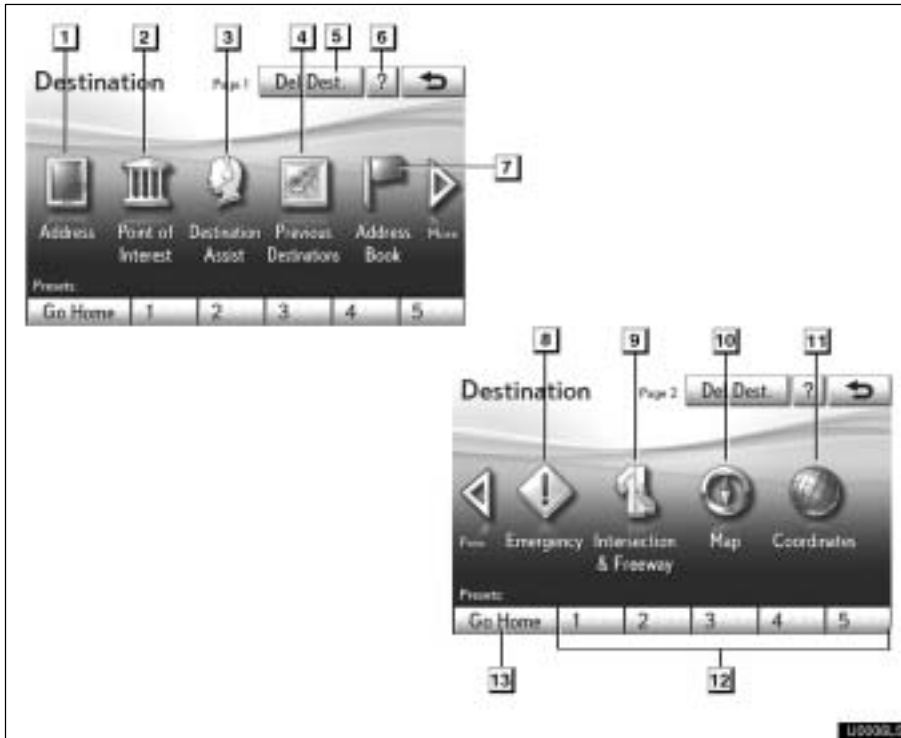

- |  |   |
|--|---|
| <p><b>1</b> “Address”<br/>A house number and the street address can be input by using the input keys. .... 71</p> <p><b>2</b> “Point of Interest”<br/>Select one of the many Points of Interest that have already been stored in the system’s database. .... 75</p> <p><b>3</b> “Destination Assist”<br/>Provides you with live assistance finding destinations via the Lexus Enform response center. .... 82, 162</p> | <p><b>4</b> “Previous Destinations”<br/>A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. .... 82</p> <p><b>5</b> “Del. Dest.”<br/>Set destinations can be deleted. .... 88</p> <p><b>6</b> “?”<br/>Function help for the “Destination” screen can be viewed on this screen. .... 39</p> |
|--|---|

**7 “Address Book”**

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 123.) . . . . . 83

**8 “Emergency”**

One of the four categories of emergency service points that are already stored in the system’s database can be selected. . . . . 83

**9 “Intersection & Freeway”**

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known. . . . . 84

**10 “Map”**

A destination can be selected simply by selecting the location on the displayed map. . . . . 87

**11 “Coordinates”**

A destination can be set using latitudes and longitudes as coordinates. . . . . 88

**12 Preset destination buttons**


One of 5 preset destination points can be selected by selecting the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “Preset Destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 120.) . . . . . 70

**13 “Go Home”**

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 118.) . . . . . 70

## Quick reference (“Setup” screen)


The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button on the Remote Touch and select “Setup”.

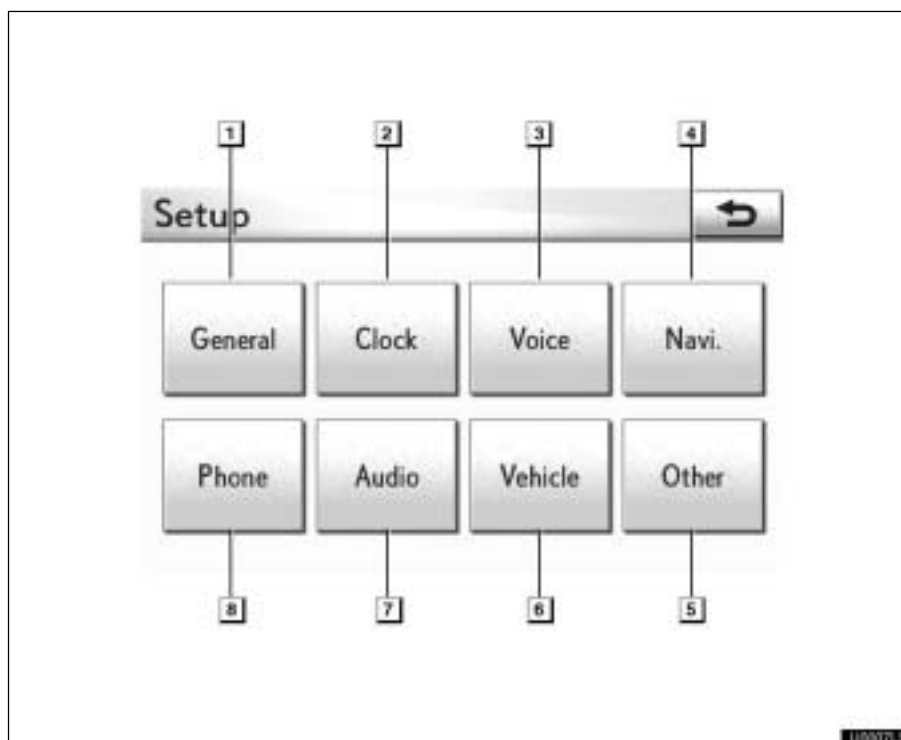

- |   |   |
|---|---|
| <p><b>1 “General”</b><br/>Settings are available for language selection, operation sounds, automatic screen change, etc. . . . . 303</p> <p><b>2 “Clock”</b><br/>Used for changing settings for time zones, daylight saving time, etc. . . . . 309</p> <p><b>3 “Voice”</b><br/>Voice guidance can be set. . . . . 312</p> <p><b>4 “Navi.”</b><br/>Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. . . . . 315</p> | <p><b>5 “Other”</b><br/>Settings are available for Lexus Insider, XM® Sports and Stocks. . . . . 379</p> <p><b>6 “Vehicle”</b><br/>Settings are available for vehicle information such as maintenance information. . . . . 371</p> <p><b>7 “Audio”</b><br/>Settings are available for portable audio devices, Bluetooth® audio devices etc. . . . . 364</p> <p><b>8 “Phone”</b><br/>Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. . . . . 325</p> |
|---|---|

## Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the “MENU” button on the Remote Touch and select “Info./Phone”.

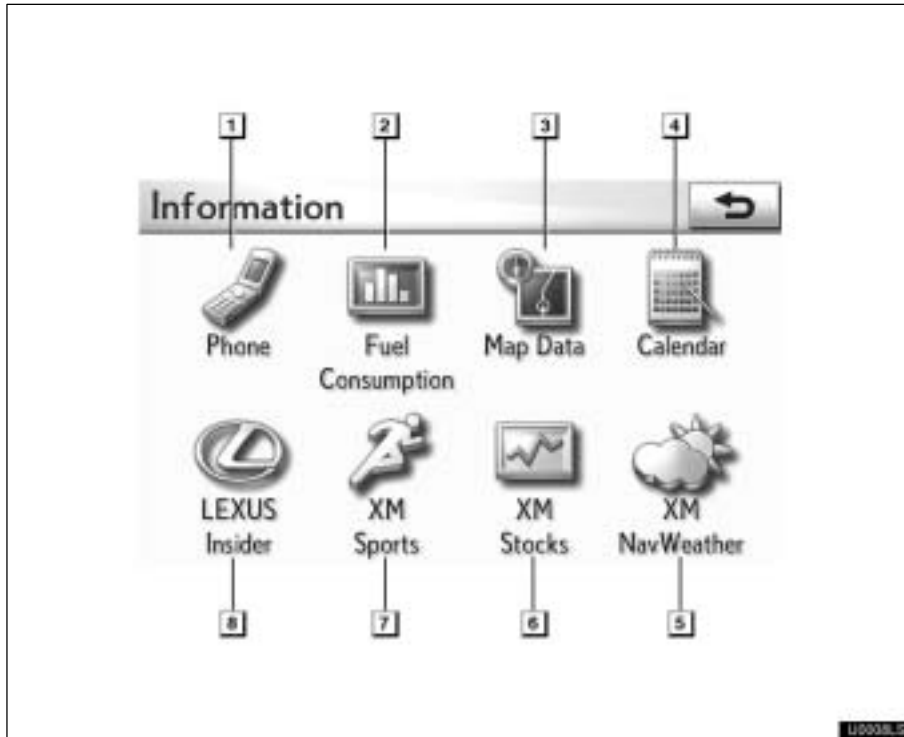

<b>1</b> “Phone” To view hands free phone information. ..... 140	<b>5</b> “XM NavWeather” To display the “XM NavWeather” screen. ..... 174
<b>2</b> “Fuel Consumption” Fuel consumption is displayed. .... 156	<b>6</b> “XM Stocks” To display the “XM Stocks” screen. ..... 168
<b>3</b> “Map Data” Displays information regarding the map data disc version or coverage area. ..... 394	<b>7</b> “XM Sports” To display the “XM Sports” screen. ..... 168
<b>4</b> “Calendar” To view calendar. .... 156	<b>8</b> “LEXUS Insider” To display the “LEXUS Insider” screen. ..... 181