

## 6-2. Customization

### Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming these preferences requires specialized equipment and may be performed by your Lexus dealer.

It is also possible to customize certain vehicle features yourself using the “DISP” switch and the navigation screen.


For instructions on customizing vehicle features using the navigation screen, refer to the “Navigation System Owner’s Manual”.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

#### Customizing vehicle features

It is possible to customize certain vehicle features using the “DISP” switch.

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift position in P and the parking brake set.

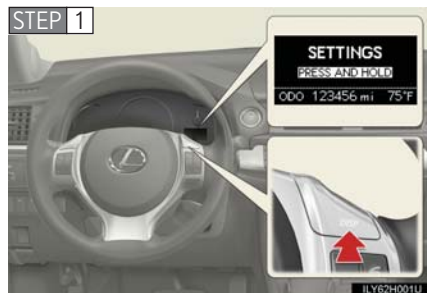

Press the “DISP” switch to display the SETTING screen while the vehicle is stopped, and then press and hold the “DISP” switch to display the customize mode screen.



Vehicles without a navigation system:

Press the “DISP” switch and select the “METER” or “VEHICLE” and press and hold the “DISP” switch.



Press the “DISP” switch and select the item, and then press and hold the “DISP” switch.



Press the “DISP” switch and select the desired setting, and then press and hold the “DISP” switch.

To go back to the previous screen or exit the customize mode, press the “DISP” switch to select the “EXIT”, and then press and hold the “DISP” switch.

## 6-2. Customization

### Customizable Features

- ❶ Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system
- ❷ Vehicles with a navigation system: Settings that can be changed using the "DISP" switch
- ❸ Vehicles without a navigation system: Settings that can be changed using the "DISP" switch
- ❹ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, - = Not available

| Item                    | Function  | Default setting  | Customized setting                     | ❶ | ❷ | ❸ | ❹ |
|-------------------------|---|--|--|---|---|---|---|
| Door lock (→P. 66, 632) | Unlock on Second Key Turn (Allows all doors to be unlocked by turning the mechanical key once in the driver's door)*1 | On (Driver's door unlocked in first step, all doors unlocked in second step) | Off (All doors unlocked in first step) | ○ | - | - | ○ |

| Item                    | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|-------------------------|---|-----------------|--------------------|---|---|---|---|
| Door lock (→P. 66, 632) | SPEED SENSITIVE AUTO. LOCK<br>(All doors are automatically locked when vehicle speed is approximately 12 mph [20 km/h] or higher) | Off             | On                 | O | - | O | O |
|                         | SHIFT-LINKED AUTOMATIC LOCK<br>(All doors are automatically locked when shifting the shift position to other than P)              | On              | Off                | O | - | O | O |

## 6-2. Customization

| Item                       | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|----------------------------|---|-----------------|--------------------|---|---|---|---|
| Door lock<br>(→P. 66, 632) | SHIFT-LINKED<br>AUTOMATIC<br>UNLOCK<br>(All doors are automatically unlocked when shifting the shift position to P) | On              | Off                | O | - | O | O |
|                            | DRIVER<br>DOOR-<br>LINKED<br>UNLOCK<br>(All doors are automatically unlocked when driver's door is opened)          | Off             | On                 | O | - | O | O |


| Item  | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---|--|-----------------|--------------------|---|---|---|---|
| Smart access system with push-button start and wireless remote control (→P. 49, 61) | LOCK FEED-BACK VOLUME<br>(Adjust the volume of buzzer sounds)  | 7               | Off                |   |   |   |   |
|   |  |                 | 1 to 6             | ○ | - | ○ | ○ |
|   | LOCK/UNLOCK ANSWER BACK<br>(Enable/disable the operation of the emergency flashers when the vehicle is locked or unlocked) | On              | Off                |   |   |   |   |
|   |  |                 |                    | ○ | - | ○ | ○ |

## 6-2. Customization

| Item  | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---|---|-----------------|--------------------|---|---|---|---|
| Smart access system with push-button start and wireless remote control (→P. 49, 61) | AUTO. RELOCK TIME ADJUSTMENT<br>(Adjust the time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked) | 60 seconds      | Off                |   |   |   |   |
|   |   |                 | 30 seconds         | ○ | - | ○ | ○ |
|   |   |                 | 120 seconds        |   |   |   |   |
|   | Operation buzzer (when the vehicle is lock or unlocked)   | On              | Off                | - | - | - | ○ |
|   | Open door reminder buzzer (When locking the vehicle)  | On              | Off                | - | - | - | ○ |

| Item  | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---|--|-----------------|--------------------|---|---|---|---|
| Smart access system with push-button start (→P. 49) | SELECT DOORS TO UNLOCK<br>(The doors that are unlocked using the smart access system with push button start can be selected) | Driver's door   | All the doors      | ○ | - | ○ | ○ |
|   | ACCESS SYSTEM WITH ELEC. KEY<br>(Smart access system with push button start can be disabled)                                 | On              | Off                | ○ | - | ○ | ○ |
|   | Number of consecutive door lock operations   | 2 times         | As many as desired | - | - | - | ○ |

## 6-2. Customization

| Item                                     | Function   | Default setting  | Customized setting                     | 1 | 2 | 3 | 4 |
|--|--|--|--|---|---|---|---|
| Wireless remote control (→P. 61)         | Wireless remote control  | On   | Off                                    | - | - | - | ○ |
|  | REMOTE 2-PRESS UNLOCK (Allows all doors to be unlocked by pressing  on the electronic key once) | On (Driver's door unlocked in first step, all doors unlocked in second step) | Off (All doors unlocked in first step) | ○ | - | ○ | ○ |
|  | Panic function   | On   | Off                                    | - | - | - | ○ |
| Automatic light control system (→P. 202) | HEADLIGHT OFF TIME ADJUSTMENT (Adjust the time elapsed before the headlights automatically turn off)   | 30 seconds   | Off                                    |   |   |   |   |
|  |  |  | 60 seconds                             | ○ | - | ○ | ○ |
|  |  |  | 90 seconds                             |   |   |   |   |

| Item                                     | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|--|--|-----------------|--------------------|---|---|---|---|
| Automatic light control system (→P. 202) | LIGHT SENSOR SENSITIVITY<br>(Adjust the sensitivity of the ambient light sensor) | Standard        | -2 to 2            | O | - | O | O |
|  | DAYTIME RUNNING LIGHTS<br>(Daytime running lights can be disabled)*2             | On              | Off                | O | - | O | O |

## 6-2. Customization

| Item                      | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---------------------------|--|-----------------|--------------------|---|---|---|---|
| Illumination<br>(→P. 425) | INTERIOR LIGHTS OFF TIME ADJUSTMENT<br>(Adjust the time elapsed before the interior lights automatically turn off)   | 15 seconds      | Off                |   |   |   |   |
|                           |  |                 | 7.5 seconds        | ○ | - | ○ | ○ |
|                           |  |                 | 30 seconds         |   |   |   |   |
|                           | EXT. LIGHTS OFF TIME ADJUSTMENT<br>(Adjust the time elapsed before the exterior illumination automatically turn off) | 15 seconds      | Off                |   |   |   |   |
|                           |  |                 | 7.5 seconds        | ○ | - | ○ | ○ |
|                           |  |                 | 30 seconds         |   |   |   |   |

| Item                      | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---------------------------|---|-----------------|--------------------|---|---|---|---|
| Illumination<br>(→P. 425) | Operation after the "POWER" switch is turned to OFF   | On              | Off                | - | - | - | ○ |
|                           | Operation when the doors are unlocked with the smart access system with push-button start or the wireless remote control function or the mechanical key <sup>*3</sup> | On              | Off                | - | - | - | ○ |
|                           | Operation when you approach the vehicle with the electronic key on your person <sup>*4</sup>  | On              | Off                | - | - | - | ○ |

## 6-2. Customization

| Item                      | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---------------------------|---|-----------------|--------------------|---|---|---|---|
| Illumination<br>(→P. 425) | Footwell lighting   | On              | Off                | - | - | - | ○ |
|                           | Foot lights operation when the vehicle is running   | On              | Off                | - | - | - | ○ |
|                           | Cup holder light  | On              | Off                | - | - | - | ○ |
|                           | Enable/disable operation of the outer foot lights when the doors are unlocked with the power door lock switch | On              | Off                | - | - | - | ○ |

| Item                           | Function  | Default setting   | Customized setting | 1 | 2 | 3 | 4 |
|--------------------------------|---|-------------------|--------------------|---|---|---|---|
| Instrument cluster<br>(→P.188) | TACHOMETER<br>(Display of the tachometer and Hybrid System Indicator) | AUTO              | KEEP ON*7          | - | ○ | ○ | ○ |
|                                |   |                   | OFF                | - | ○ | ○ | ○ |
|                                | ECO LAMP<br>(On/off operation of the Eco lamp)                        | ECO DRIVE SUPPORT | KEEP ON            | - | ○ | ○ | ○ |
|                                |   |                   | OFF                | - | ○ | ○ | ○ |
|                                | SPORT LAMP<br>(On/off operation of the sport lamp)                    | AUTO              | OFF                | - | ○ | ○ | ○ |
|                                | LAMP BRIGHTNESS<br>(Brightness of ECO lamp and SPORT lamp)            | STANDARD          | BRIGHT             | - | ○ | ○ | ○ |
|                                |   |                   |                    |   |   |   |   |
|                                |   |                   |                    |   |   |   |   |

## 6-2. Customization

| Item   | Function   | Default setting  | Customized setting | 1 | 2 | 3 | 4 |
|--|--|------------------|--------------------|---|---|---|---|
| Instrument cluster<br>(→P. 188)                | EV INDICATOR<br>(On/off operation of the EV drive mode indicator)  | AUTO             | OFF                | - | ○ | ○ | ○ |
|  | LANGUAGE<br>(Language displayed on the screen)   | ENGLISH*4        | FRENCH*4           | - | ○ | ○ | ○ |
|  |  |                  | SPANISH*4          |   |   |   |   |
|  | UNITS<br>(Unit displayed on the screen)  | miles<br>(MPG)*4 | km (km/L)*4        | - | ○ | ○ | ○ |
|  |  |                  | km<br>(L/100km)*4  |   |   |   |   |
| Automatic air conditioning system<br>(→P. 278) | Efficient Ventilation Mode<br>(Enable/disable switching of the air intake control mode to automatic when the "AUTO" switch ON)*1 | On               | Off                | ○ | - | - | ○ |

| Item  | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---|--|-----------------|--------------------|---|---|---|---|
| Automatic air conditioning system (→P. 278) | AUTO A/C MODE (Enable/disable automatic operation of the air conditioning compressor when the "AUTO" switch ON) (vehicles without a humidity sensor) | On              | Off                | O | - | O | O |
|   | AUTO A/C MODE (Enable/disable automatic operation of the air conditioning compressor when the "AUTO" switch ON) (vehicles with a humidity sensor)    | Off             | On                 | O | - | O | O |

## 6-2. Customization

| Item  | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|---|---|-----------------|--------------------|---|---|---|---|
| Automatic air conditioning system (→P. 278) | Air conditioning control of Eco drive mode                | On              | Off                | - | - | - | ○ |
| Power windows (→P. 100)                     | Mechanical key linked operation                           | Off             | On                 | - | - | - | ○ |
|   | Wireless remote control linked operation                  | Off             | On (Open only)     | - | - | - | ○ |
|   | Buzzer sounds if operated using wireless remote control*5 | On              | Off                | - | - | - | ○ |

## 6-2. Customization

| Item   | Function   | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|--|--|-----------------|--------------------|---|---|---|---|
| Intuitive parking assist-sensor*1,6<br>(→P. 233) | Alert Volume<br>(Alert volume can be adjusted)   | 3               | 1 to 5             | ○ | - | - | ○ |
|  | Display<br>(Automatic display off the LEXUS Park Assist graphic can be enabled/disabled) | On              | Off                | ○ | - | - | ○ |
|  | Distance<br>(Distance mode can be selected) (Front or rear individually)                 | Long            | Short              | ○ | - | - | ○ |

## 6-2. Customization

| Item                         | Function  | Default setting | Customized setting | 1 | 2 | 3 | 4 |
|------------------------------|---|-----------------|--------------------|---|---|---|---|
| Seat belt reminder (→P. 584) | Vehicle speed linked seat belt reminder buzzer  | On              | Off                | - | - | - | ○ |
| Reverse buzzer (→P. 182)     | Signal (buzzer) when the shift position is in R | Intermittent    | Single             | - | - | - | ○ |

\*1: Refer to the "Navigation System Owner's Manual".

\*2: This function cannot be customized for vehicles sold in Canada.

\*3: Interior or exterior illumination can be set separately.

\*4: The default setting varies according to countries.

\*5: This function cannot be customized unless power window operation using the wireless remote control is enabled.

\*6: If equipped.

\*7: Except when using the cruise control or dynamic radar cruise control.

### n Vehicle customization

- 1 When the "SPEED SENSITIVE AUTO LOCK" and "SHIFT-LINKED AUTOMATIC LOCK" are both on, the door lock operates as follows.
  - When shifting the shift position to any position other than P, all the doors will be locked.
  - If the vehicle is started with all the doors locked, the "SPEED SENSITIVE AUTO LOCK" would not operate.
  - If the vehicle is started with any door unlocked, the "SPEED SENSITIVE AUTO LOCK" will operate.
- 1 When the smart access system with push-button start is off, the "SELECT DOORS TO UNLOCK" cannot be customized.
- 1 When the doors remain closed after unlocking the doors and the "AUTO. RELOCK TIME ADJUSTMENT" activates, the signals will be generated in accordance with the "LOCK/ FEEDBACK VOLUME" and the "LOCK/ UNLOCK ANSWER BACK" settings.
- n **In the following situations, customize mode in which the settings can be changed through the "DISP" switch will automatically be turned off.**
  - 1 A warning message appears after the customize mode screen is displayed.
  - 1 The "POWER" switch is turned off.
  - 1 The vehicle begins to move while the customize mode screen is displayed.

## 6-2. Customization

### CAUTION

#### **n Cautions during customization**

As the hybrid system needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

### NOTICE

#### **n During customization**

To prevent 12-volt battery discharge, ensure that the hybrid system is running while customizing features.