


Remote Touch (if equipped)


The Remote Touch can be used to operate the navigation screens and configure settings.

n Basic operation

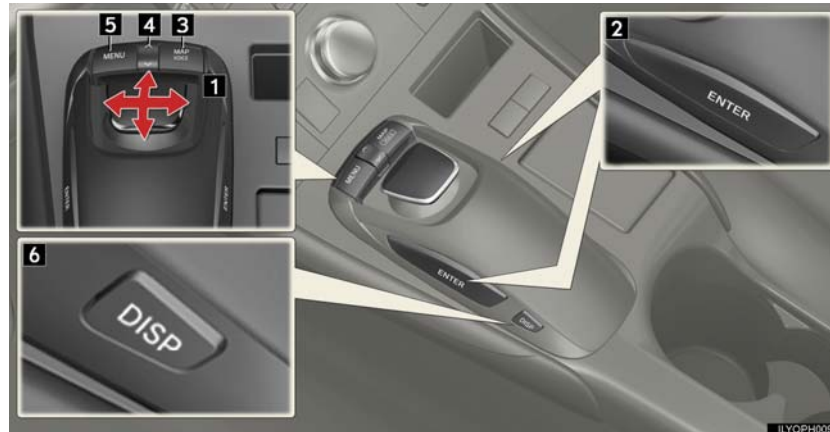

- 1** Remote Touch knob
Use this knob to move the cursor and select items on the screen.
Feedback force, pointer shape, and on or off of selection sounds can be changed. Refer to the "Navigation System Owner's Manual".
- 2** "ENTER" button
Press this button to confirm a selection.
- 3** "MAP/VOICE" button
Press this button to display the vehicle's current position.
- 4** "∧•∨" button
Press this button to change map scale and scroll through lists.
- 5** "MENU" button
Press this button to display the "Start" (menu) screen.
- 6** "DISP" button
Press this button to adjust picture quality.


n Start

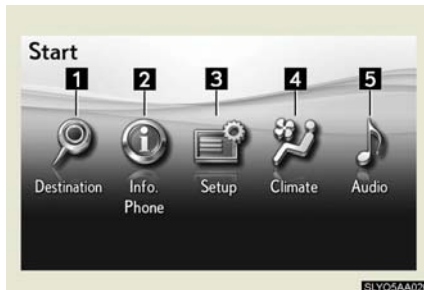

Press the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination
- 2 Info. Phone
- 3 Setup
- 4 Climate (→P.58)
- 5 Audio (→P.53)

n Display

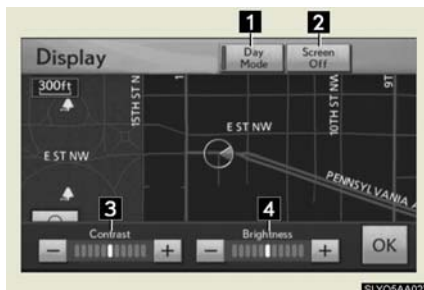


Press the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

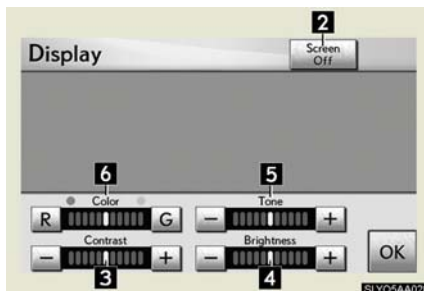

n Screen scroll operation

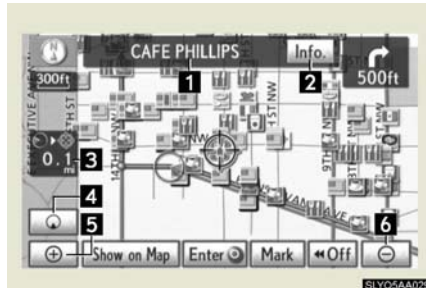

To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button on the Remote Touch.


- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

n Setting a route

While route guidance is operating, you can change the route using the following method.

Select “Route”.

The following settings can be accessed


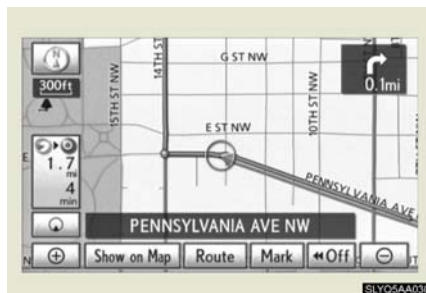


- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner’s Manual”.

Navigation System (if equipped)



n Register home

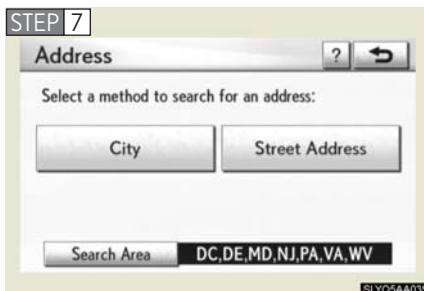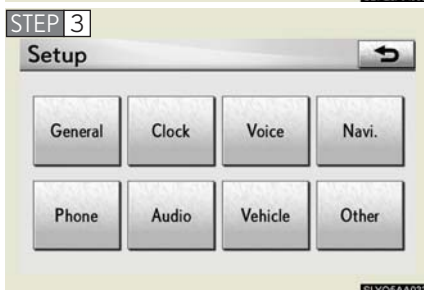

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Navi.".
- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".
- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the button of the desired city name from the displayed list.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

n Destination input——Search by address

Select by city name

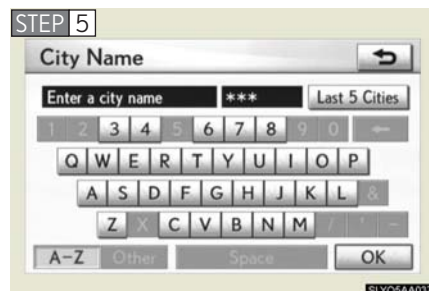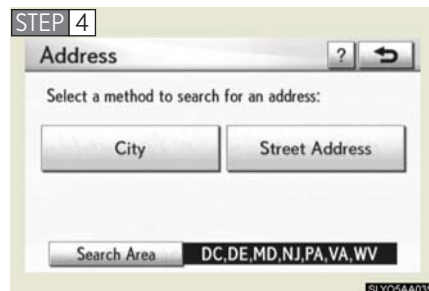




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Address".
- 4 Select "City".
- 5 Input a city name and select "OK".
- 6 Select the button of the desired city name from the displayed list.
- 7 Input the street name and select "OK".
- 8 When the desired street name is found, select the corresponding button.
- 9 Input a house number and select "OK".
- 10 Select "Go to".
- 11 Select "OK".

Select by street address




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Address".
- 4 Select "Street Address".
- 5 Input a house number and select "OK".
- 6 Input the street name and select "OK".
- 7 When the desired street name is found, select the corresponding button.
- 8 Input a city name and select "OK".
- 9 Select the button of the desired city name from the displayed list.
- 10 Select "Go to".
- 11 Select "OK".

n Destination input——Search points of interest by name

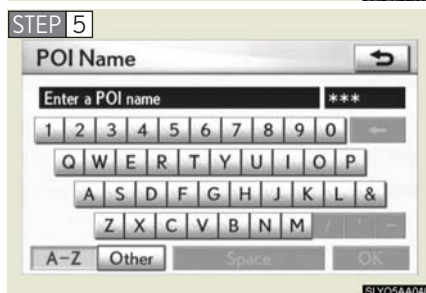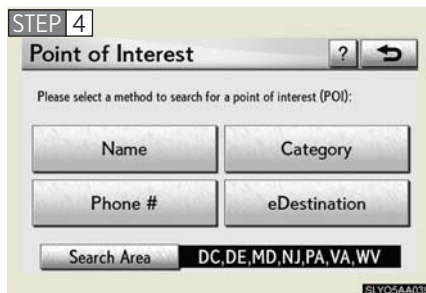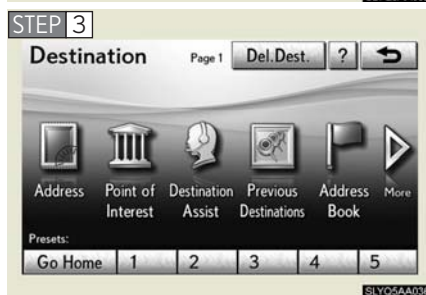



- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".
- 4 Select "Name".
- 5 Input the name of the point of interest and select "OK".
- 6 Select the button of the desired destination.
- 7 Select "Go to".
- 8 Select "OK".

n Destination input—— Search points of interest by category

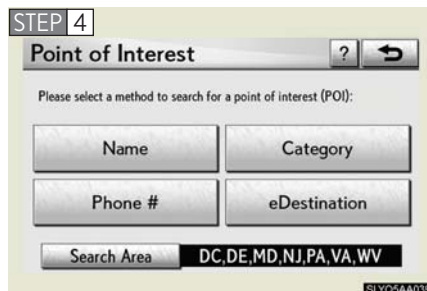

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".
- 4 Select "Category".
- 5 Select "Near a Destination".
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select "Go to".
- 10 Select "OK".

n Destination input—— Search points of interest by telephone number


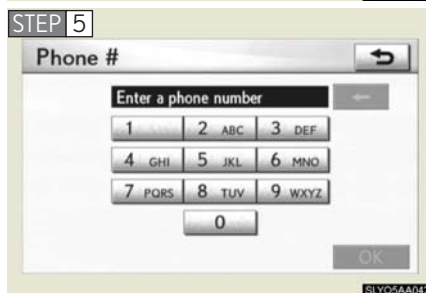
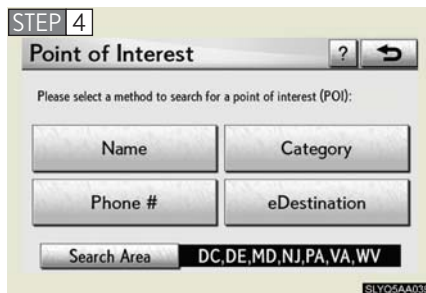


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".
- 4 Select "Phone #".
- 5 Input a telephone number and select "OK".
- 6 Select "Go to".
- 7 Select "OK".

Hands-free System For Cellular Phone (vehicles with a navigation system)

n Bluetooth® phone pairing



Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

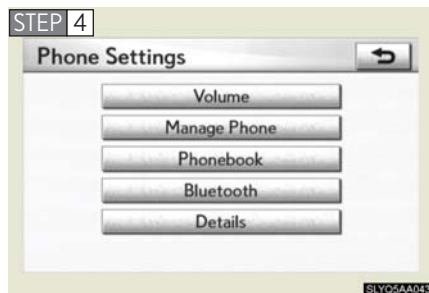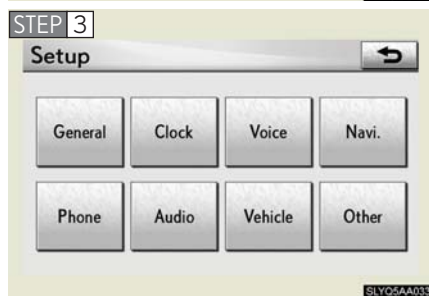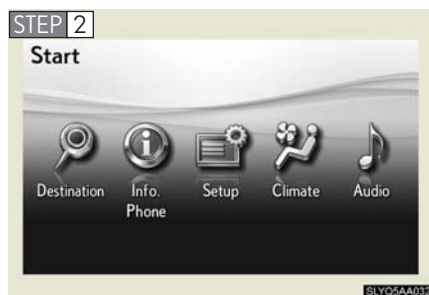

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Manage Phone".
- 5 Select "(add new)" to display the screen for connecting Bluetooth®.
- 6 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 When the connection is completed, "Bluetooth connection successful." will appear.





n Phonebook transfer

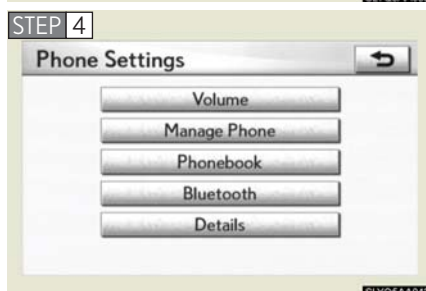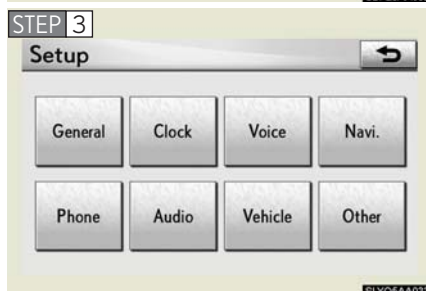

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Contacts".
- 6 Select "Transfer Contacts".
- 7 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.




Phonebook transfer may not be possible depending on phone model.

n Registering a voice tag

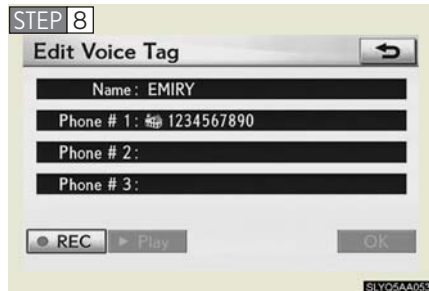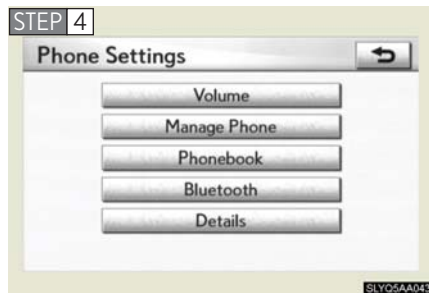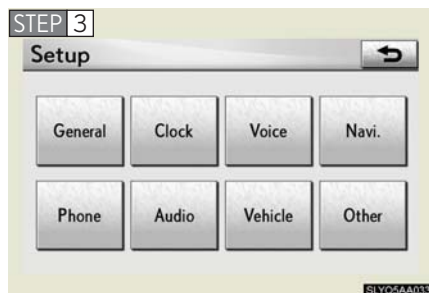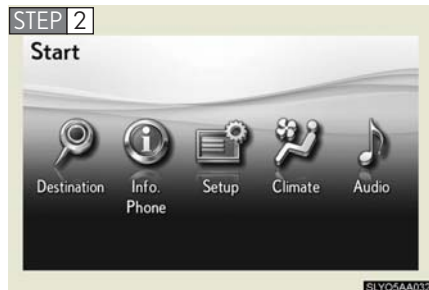

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Voice Tags".
- 6 Select "New Voice Tag".
- 7 Select the data you want to register.
- 8 Select "REC", and record a voice tag.
- 9 Select "OK".




n Registering a speed dial

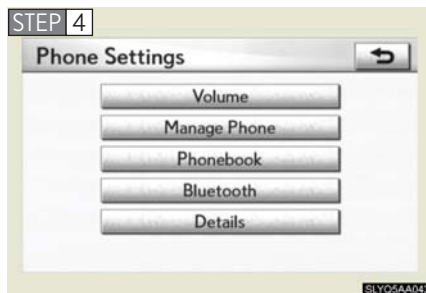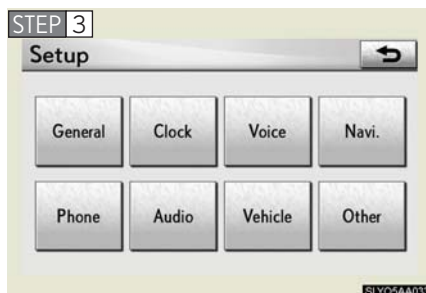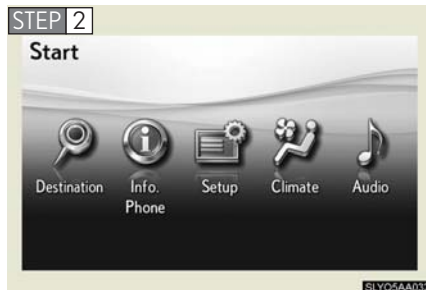

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Speed Dials".
- 6 Select "New Speed Dial".
- 7 Select the data you want to register.
- 8 Select the desired phone number.
- 9 Select the button you want to register in.
- 10 The registration completion message is displayed on the screen.

n Calling by name


You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

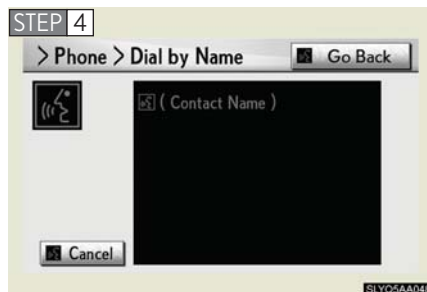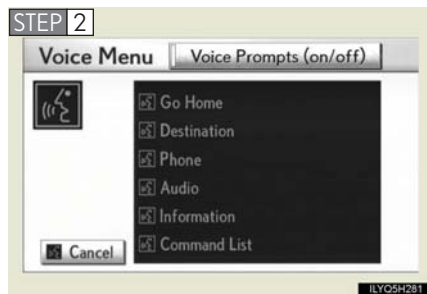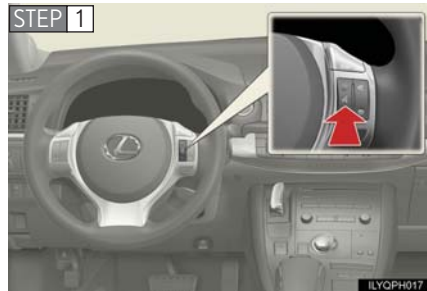


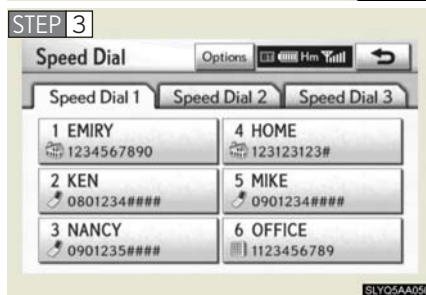
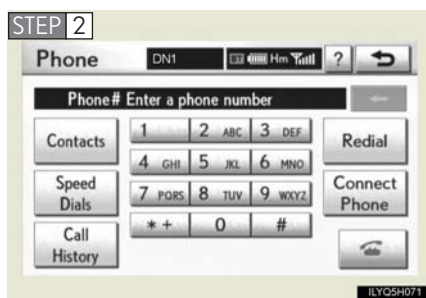
- 1 Press .
- 2 Follow the voice guidance and say "Phone".
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".

: Pressing this switch turns the voice command system on. Say a command after the beep.



n Calling by speed dial

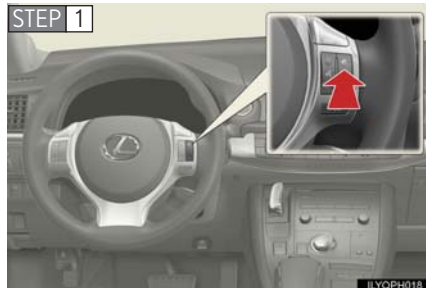


- 1 Press .
- 2 Select "Speed Dials".
- 3 Select the desired number to call.



n Receiving a call

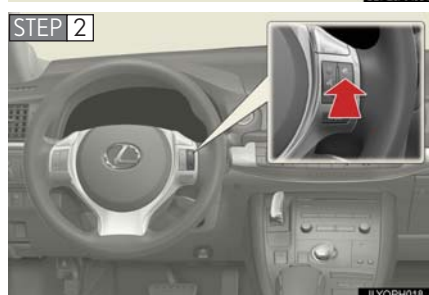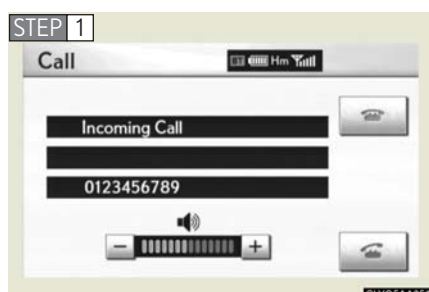

1 When a call is received, this screen is displayed with a sound.


2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

Audio System (vehicles with a navigation system)

n Audio control screen

Follow the procedure below to display the audio control screen.

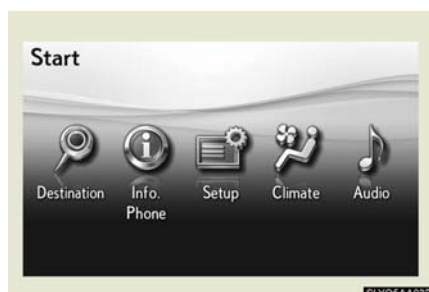

1 Press the "MENU" button on the Remote Touch.

Please refer to P.38 for the Remote Touch operation.

The "Start" screen will be displayed.

2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

n Basic operation



- 1 Sound quality modes
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT (if equipped): Satellite radio
 - DISC (if equipped): DVD changer
 - CD (if equipped): CD changer
 - AUX•USB: Bluetooth® audio/Auxiliary audio device/USB memory/iPod
- 3 Power/Volume

n Radio



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Adjusting the frequency
- 4 Station selector
- 5 Seeking the frequency

n Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the "ENTER" button until a beep is heard, indicating that the station has been set.

n DVD changer/CD changer

n Playing an audio CD



- 1 CD selection
- 2 Repeat play
- 3 Random playback
- 4 Search play
- 5 Selecting a track
- 6 CD insert
- 7 CD eject

n Playing a CD with MP3/WMA files



- 1 CD selection
- 2 Repeat play
- 3 Random playback
- 4 Search play
- 5 Folder selection
- 6 File selection
- 7 Selecting a file
- 8 CD insert
- 9 CD eject

n Playing a DVD (DVD changer only)



- 1 DVD selection
- 2 DVD operation
- 3 Image display (full screen)
- 4 Chapter selection
- 5 DVD insert
- 6 DVD eject

n Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator on the slot turns from amber to green, insert a disc.

n Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator on the slot turns from amber to green, insert a disc.
The indicator on the slot turns to amber when the disc is being inserted.
- 3 When the indicator on the slot turns from amber to green, insert the next disc.
Repeat the procedure for the remaining discs.
To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.


n Operating an iPod



- 1 iPod menu
- 2 Playback/pause
- 3 Repeat play
- 4 Shuffle playback
- 5 Song list
- 6 Song selection


n Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

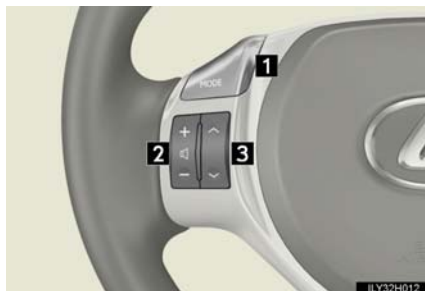

- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a radio station
DVD mode: Selects a track, chapter and disc
CD mode: Selects a track, file (MP3 and WMA) and disc
iPod mode: Selects a song

Air Conditioning System (vehicles with a navigation system)

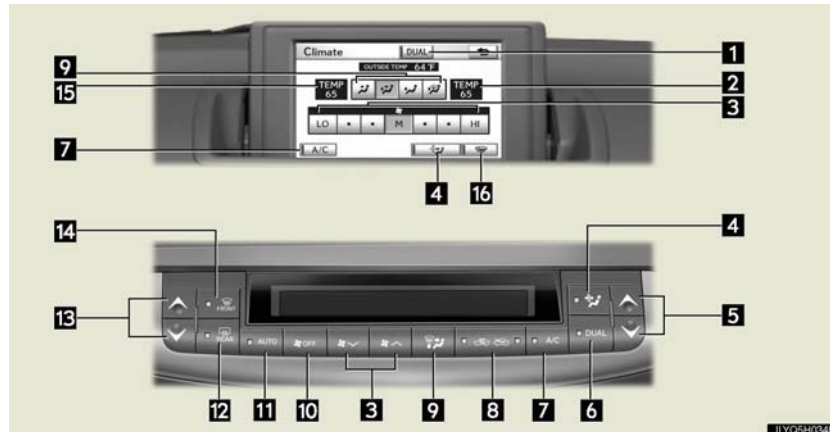

- | | |
|---|------------------------------------|
| 1 Dual mode button | 9 Air outlet selector button |
| 2 Passenger side temperature display | 10 "OFF" button |
| 3 Fan speed control button | 11 Automatic mode button |
| 4 Micro dust pollen filter button | 12 Rear window defogger button |
| 5 Passenger side temperature control | 13 Driver side temperature control |
| 6 Dual mode button | 14 Windshield defogger |
| 7 Cooling and dehumidification function on/off button | 15 Driver side temperature display |
| 8 Outside air/recirculated air mode button | 16 Windshield wiper de-icer button |

n Using the automatic mode

Press **11** to turn on the airflow and **13** to adjust the temperature.

n Adjusting the temperature

n To simultaneously adjust the driver's side and passenger's side temperature settings

Select **1** or press **6** to turn the "DUAL" indicator off and then press **13**.


n To individually adjust the driver's side and passenger's side temperature settings

Select **1** or press **6** or **5** to turn the "DUAL" indicator on and then press **13** or **5**.

Hands-free System For Cellular Phone (vehicles without a navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

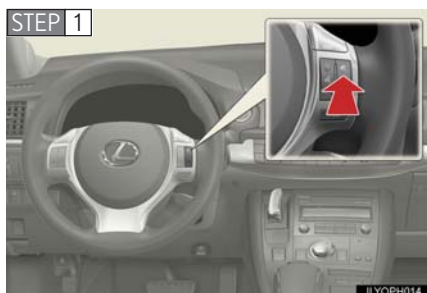

To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1 Press or .
- 2 Press and say "Pair phone".
- 3 Press and say a name*.





*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4 Press and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .

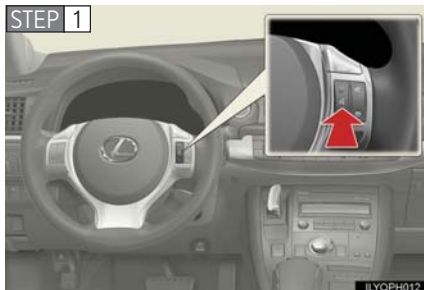: Pressing this switch turns the voice command system on. Say a command after the beep.


n Calling by number







- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

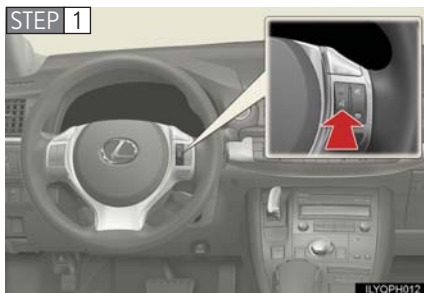n Calling by name


You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".





- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

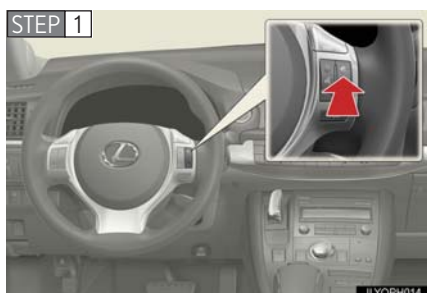
n Calling by speed dial









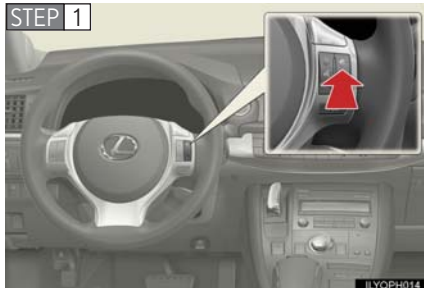



- 1 Press .
- 2 Press the desired preset button.
- 3 Press .



n Phonebook transfer











- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

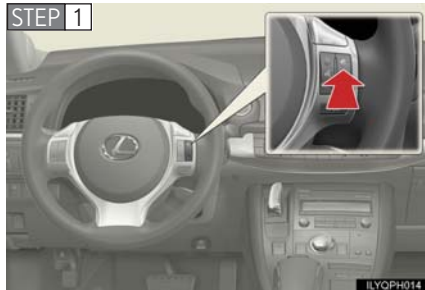
Phonebook transfer may not be possible depending on phone model.

 : Pressing this switch turns the voice command system on. Say a command after the beep.

n Changing the registered name









- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

n Registering a speed dial



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm"

 : Pressing this switch turns the voice command system on. Say a command after the beep.

Audio System (vehicles without a navigation system)

n Basic operation

Type A



- 1 Power/Volume
- 2 Audio sources
 - AM•SAT: AM radio/Satellite radio
 - FM1/FM2: FM radio
 - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

Type B



- 1 Power/Volume
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT: Satellite radio
 - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes


Type C



- 1 Power/Volume
- 2 Audio sources
 - AM: AM radio
 - FM: FM radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

n Radio

Type A

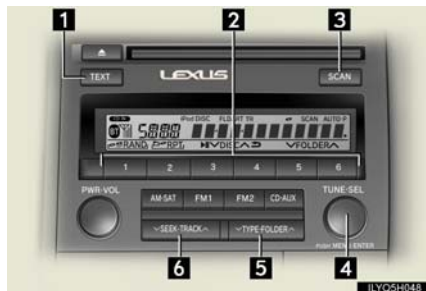

- 1 Displaying text message
- 2 Station selector
- 3 Scanning for receivable stations
- 4 Adjusting the frequency
- 5 Changing the program type
- 6 Seeking the frequency

Type B



- 1 Station selector
- 2 Displaying text message
- 3 Traffic information button
- 4 Adjusting the frequency
- 5 Scanning for receivable stations
- 6 Changing the program type
- 7 Seeking the frequency

Type C



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Displaying text message
- 4 Adjusting the frequency
- 5 Station selector
- 6 Seeking the frequency


n Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

n CD player


n Playing an audio CD

Type A

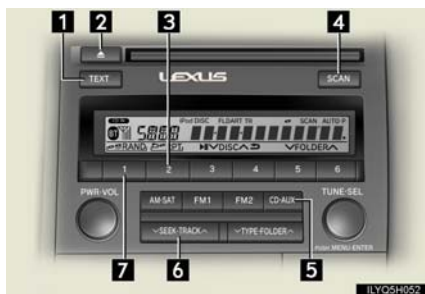

- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 Playback
- 6 Selecting a track
- 7 Random playback

Type B

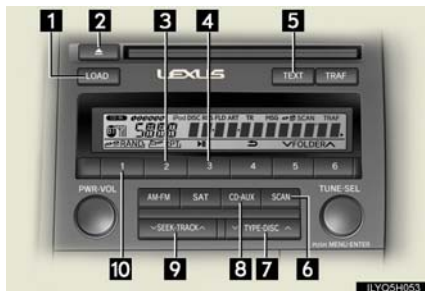

- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Search play
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback


Type C



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback


n Playing a CD with MP3/WMA files

Type A

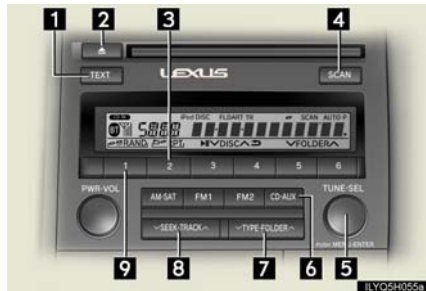


- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 File selection
- 6 Playback
- 7 Folder selection
- 8 Selecting a file
- 9 Random playback

Type B

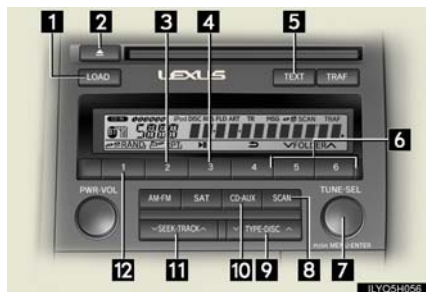

- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Folder selection
- 7 File selection
- 8 Search play
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

Type C

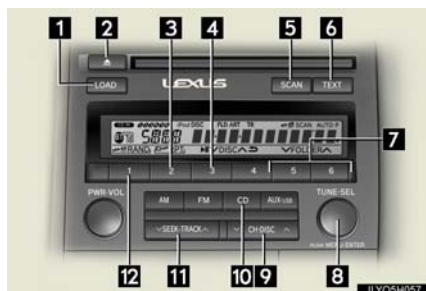

- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 Folder selection
- 8 File selection
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

n Loading a CD

Type A

Insert a CD.

Type B and C


- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" to "LOAD".

n Loading multiple CDs (Type B and C)

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" to "LOAD".
The indicator on the slot turns to amber when the CD is being inserted.
- 3 When the indicator on the slot turns from amber to green, insert the next CD.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

n Operating an iPod

Type A

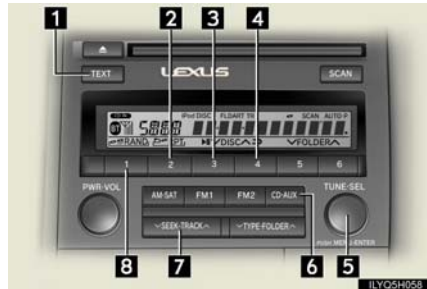


- 1 Displaying text message
- 2 Repeat play
- 3 Playback/pause
- 4 Go back
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback

Type B



- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback

Type C

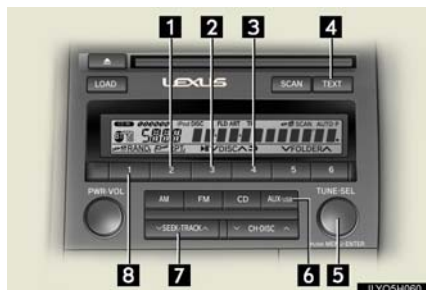

- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback


n Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.



- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a radio station
CD mode: Selects a track, file (MP3 and WMA) and disc
iPod mode: Selects a song

Air Conditioning System (vehicles without a navigation system)

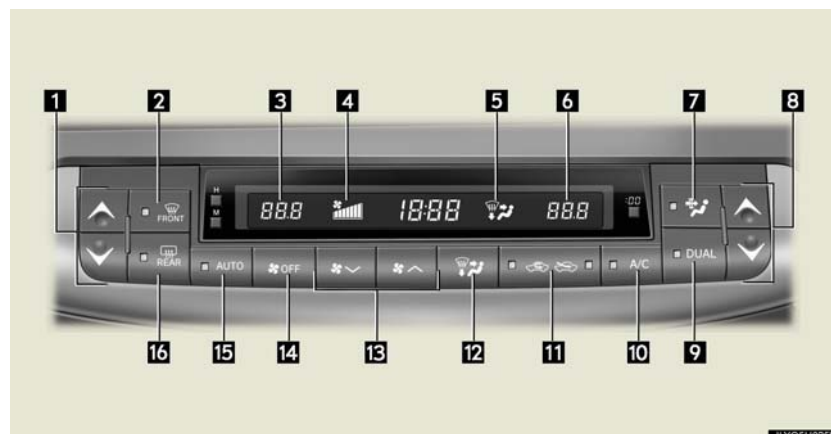

- | | |
|--|--|
| 1 Driver's side temperature control buttons | 9 Dual mode button |
| 2 Windshield defogger button | 10 Cooling and dehumidification function on/off button |
| 3 Driver's side temperature display | 11 Outside/recirculated air mode button |
| 4 Fan speed display | 12 Air outlet selector button |
| 5 Air outlet display | 13 Fan speed control buttons |
| 6 Passenger's side temperature display | 14 "OFF" button |
| 7 Micro dust and pollen filter mode button | 15 Automatic mode button |
| 8 Passenger's side temperature control buttons | 16 Rear window defogger button |

n Using the automatic mode

Press **15** to turn on the airflow and **1** to adjust the temperature.

n Adjusting the temperature

n To simultaneously adjust the driver's side and passenger's side temperature settings

Press **9** to turn the "DUAL" indicator off and then press **1**.

n To individually adjust the driver's side and passenger's side temperature settings




Press **9** or **8** to turn the "DUAL" indicator on and then press **1** or **8**.

Voice Command System

NOTE: When inputting voice commands you must wait until after the beep to speak.

n Basic operation





- 1 Press  on the steering wheel.
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

Continue on to pages 73-77 for a detailed list of Voice Commands for the following categories:

PHONE.....	P.73, 75
DESTINATIONS.....	P.73
GENERAL NAVIGATION COMMANDS.....	P.74
AUDIO	P.76
XM INFORMATION	P.77
CLIMATE CONTROL/AIR CONDITIONING	P.77

n Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

n Command list

All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

Vehicles with a navigation system

DESTINATIONS				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:		"Address" and then follow the prompts to enter city, state, street and house number	
To Enter a Point of Interest, SAY:	A Point of Interest Category, Such As: "Dining", "Shopping Malls", "Police", "Gas", ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
			"Emergency"	
		"Phone Number"		
To Enter a Previous Destination, SAY:	"Destination" and then SAY:		"Previous Destinations"	
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	
			"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	

GENERAL NAVIGATION COMMANDS	
To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
To Change the Map Orientation, SAY:	"North Up"
	"Heading Up"
	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
	"Right Map Direction"
To Change the Guidance Mode, SAY:	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
	"Freeway Mode"
To Save a Point on the Map, SAY:	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

GENERAL NAVIGATION COMMANDS	
To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
	"Final Destination Map"
To Delete the Destination, SAY:	"Delete Next Destination"
	"Delete Final Destination"
	"Delete All Destinations"
To Operate Guidance Options, SAY:	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
	"Louder"
	"Softer"
To Operate the Traffic Information, SAY:	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.

PHONE				
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Select Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
			"Hands Free Power OFF"	

AUDIO			
To Turn Audio On or Off, SAY:	"Audio ON"		
	"Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD, CD Changer, DVD, DVD Changer, Bluetooth® Audio, iPod, USB Audio		
	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD track, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"		
	"Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	"Seek Up" or "Seek Down"
			"Type Up" or "Type Down"

XM INFORMATION		
To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts


CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Press down and release the lid.

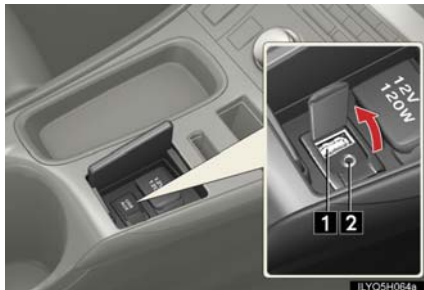

- 1 USB port
- 2 AUX port

Garage Door Opener (if equipped)

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.

n Programming the HomeLink® (for U.S.A. owners)

The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.



- 1** Indicator light
- 2** Buttons

n Programming HomeLink®



1 Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

n Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

n Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

n System components



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

n Services

Subscribers have the following Safety Connect services available:

1 **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

1 **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

1 **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

1 **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

n Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (if equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

n Services

With an active Lexus Enform subscription, the following features are available:

1 Safety Connect features (→P.81)

- Automatic collision notification^{*1}
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

1 Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

1 eDestination

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

1 **XM® Sports and Stocks** *2

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

1 **XM NavWeather™** *3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

1 **XM® NavTraffic** *3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

The following navigation-based Lexus Enform features are available without a subscription:

1 **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

1 **Voice Command**

The voice command system enables you to operate the navigation system, audio/video system, air conditioning system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

n Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select "Destination Assist" in your vehicle for further subscription details. XM® NavTraffic and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.