
## Front seats

## Adjustment procedure

#### ▶ Type A

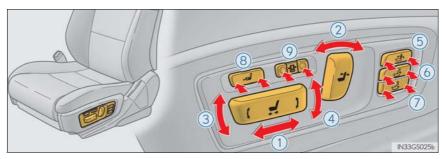


▶ Type B

3 1 4 7 6 IN33GS043

- 1 Seat position adjustment switch
- ② Seatback angle adjustment switch
- 3 Seat cushion (front) angle adjustment switch
- 4 Vertical height adjustment switch
- (5) Seatback upper angle adjustment switch (if equipped)

▶ Type C

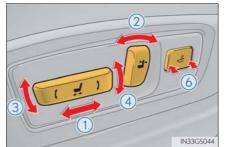

- 6 Lumbar support adjustment switch
- Pelvic support adjustment switch (if equipped)
- 8 Seat cushion length adjustment switch (if equipped)
- 9 Seatback side support adjustment switch (if equipped)

#### ■ Power easy access system

The driver's seat and steering wheel move in accordance with engine switch mode and the driver's seat belt condition. The passenger's seat moves when the passenger's door is opened. ( $\rightarrow$ P. 133)

#### **A** CAUTION

#### ■ When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.

#### ■ Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

#### ■ When adjusting the seat positions

Make sure to leave enough space around the feet so they do not get stuck.

## **Driving position memory**

Your preferred driving position (the position of the driver's seat, steering wheel and outside rear view mirrors) can be memorized and recalled by pressing a button. It is also possible to set this function to activate automatically when the doors are unlocked.


Three different driving positions can be entered into memory.

The same buttons are found on the front passenger's side, allowing the position of the front passenger's seat to be memorized (if equipped).

## Entering a position to memory


- 1 Check that the shift lever is in P.
- **1** Turn the engine switch to IGNITION ON mode.
- Adjust the driver's seat, steering wheel, and outside rear view mirrors to the desired positions. (When memorizing the front passenger's seat, adjust the front passenger's seat to the desired positions.)
- While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

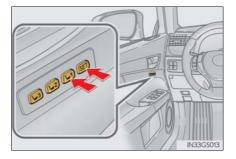

## Recalling the memorized position

- 1 Check that the shift lever is in P.
- **2** Turn the engine switch to IGNITION ON mode.
- 3 Press button "1", "2" or "3" to recall the desired position.

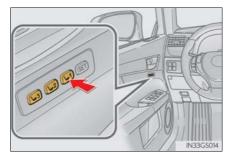

#### ■ When you want to stop the position recall operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Adjust the seat using the switches (only cancels seat position recall).

#### ■ The adjusted positions that can be memorized

▶ Vehicles without seatback side support adjustment switch

The adjusted positions other than the position adjusted by lumber support switch can be memorized.

▶ Vehicles with seatback side support adjustment switch

All adjusted positions can be memorized.

# Linking driving position memory with door unlock operation (driver's side only)

A desired driving position can be recalled linked with the unlocking of the door.

#### ■ Setting procedure


Record your driving position to button "1", "2" or "3" before performing the following:

Carrying only the key to which you want to link the driving position, shift the shift lever to P and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

- 1 Turn the engine switch to IGNITION ON mode and recall the position which you want to link.
- While pressing the button to recall the position, press the driver's door lock switch (either lock or unlock) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.

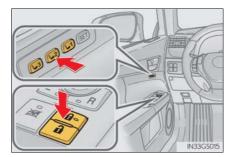

#### ■ Cancelation procedure


Carry only the key for which you want to cancel the linked door unlock operation.

If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Turn the engine switch to IGNITION ON mode.
- While pressing the "SET" button, press the driver's door lock switch (either lock or unlock) until the signal beeps.

### Power easy access system

The auto away/return function enables easy access by activating when the driver or front passenger attempts to enter or exit the vehicle.

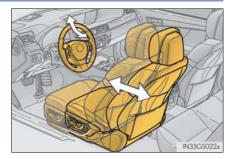

## Auto away function when exiting the vehicle (driver's/front passenger's seat)

▶ Driver's seat

When all of the following actions have been performed, the steering wheel will move up and back to the point farthest away from the driver and the seat will move backward:

- The shift lever has been shifted to P.
- The engine switch has been turned off.
- The driver seat belt has been unfastened.
- ► Front passenger's seat (if equipped)

If the lumbar support, side support (if equipped), etc. of the front passenger's seat has been adjusted, the seat will return to its original state if the front passenger's door is opened while the vehicle is stopped to allow easy exit from the vehicle.

#### ■ Auto return function when entering the vehicle (driver's seat only)

When either of the following actions has been performed, the steering wheel will move toward the driver and seat will move forward:

- The engine switch has been turned to ACCESSORY mode.
- The driver's seat belt has been fastened.

#### ■ When driving position memory is linked with door unlock operation

If the driver's door is opened, the driver's seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle.

Turning the engine switch to ACCESSORY or IGNITION ON mode, or fastening the driver's seat belt moves the seat fully into the memorized position.

#### Operating the driving position memory after turning the engine switch off

#### Driver's seat:

Memorized seat positions can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again. Memorized steering wheel position can be activated by pressing the engine switch.

#### Front passenger's seat:

Memorized positions can be activated up to 180 seconds after the front passenger's door is opened by pressing button "1", "2" or "3".

#### ■ Correct seat position

When the seat is in the most forward or most backward position, and the seat is being moved in those directions, the system may not correctly recognize the current position and the memorized position will not be correctly recalled.

#### ■ The auto away function for exiting the driver's seat

If the seat is already close to the rearmost position, the auto away function may not operate when the driver exits the vehicle.

#### ■ Customization

The distance that the driver's seat moves backward during the auto away function can be changed. (Customizable features:  $\rightarrow$ P. 777)

## **A** CAUTION

### ■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

## Head restraints

## Head restraints are provided for all seats.

#### Front seats


Vertical adjustment

- ① Up
- Pull the head restraints up.


  ② Down
  - Push the head restraint down while pressing the lock release button.
- ► Angle adjustment (if equipped)


The position of the head restraint can be adjusted forward in 4 stages.

If the head restraint is pulled forward from the foremost position, it will return to the rearmost position.

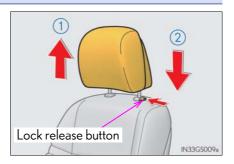

Side support adjustment (if equipped)

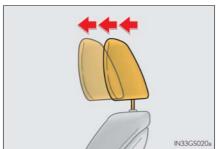

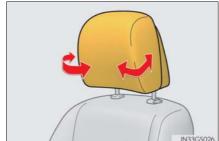


### Rear seats

1 Up

Pull the head restraints up.


2 Down

Push the head restraint down while pressing the lock release button.

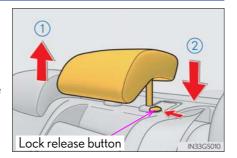

#### ■ Removing the head restraints


Pull the head restraint up while pressing the lock release button.

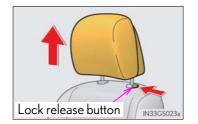

#### ■ Installing the head restraints


#### ▶ Front seats

Align the head restraint with the installation holes and push it down to the lock position. Press and hold the lock release button when lowering the head restraint.

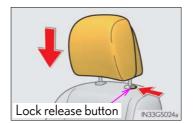


#### ▶ Rear seats

Align the head restraint with the installation holes and push it down to the lowest lock position while pressing the lock release button.

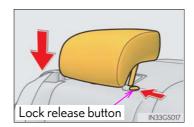

### ■ Adjusting the height of the head restraints

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

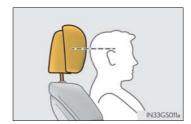

#### Adjusting the rear seat head restraint

Always raise the head restraint one level from the stowed position when using.

## **A** CAUTION

#### ■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.