# 5-1. Essential information **Emergency flashers**

Use the emergency flashers if the vehicle malfunctions or is involved in an accident.



Press the switch to flash all the turn signal lights. To turn them off, press the switch once again.

# **NOTICE**

# To prevent 12 volt battery discharge

Do not leave the emergency flashers on longer than necessary when the engine is not running.

520



# 5-1. Essential information If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or a commercial towing service, using a lift-type truck or a flat bed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

If towing from the rear, the wheels and axle on the ground must be in good condition.

If they are damaged, use a towing dolly or flat bed truck.

## **Before towing**

The following may indicate a problem with your automatic transmission. Contact your Lexus dealer before towing.

• The engine is running, but the vehicle will not move.

• The vehicle makes an abnormal sound.

When trouble arises

GS\_G\_U (OM30C80U)

## Emergency towing

If a tow truck is not available, in an emergency your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet. This should only be attempted on hard, surfaced roads for short distances at low speeds.

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

► Towing eyelet



#### Emergency towing procedure

STEP 1 Release the parking brake.

STEP 2 Put the shift lever in "N".

STEP 3 The "ENGINE START STOP" switch must be in the ACCESSORY mode (engine off) or the IGNITION ON mode (engine on).

522



# **CAUTION**

## While towing

- Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelet and the cable or chain. Always use caution for the surroundings and other vehicles while towing.
- If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

## 🕂 NOTICE

#### To prevent causing serious damage to the automatic transmission

Never tow this vehicle from the front with the rear wheels (2WD models) or four wheels (4WD models) on the ground.

This may cause serious damage to the automatic transmission.

5

523

GS\_G\_U (OM30C80U)

STEP 2

# Installing towing eyelet



Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body, as shown in the illustration.

Insert the towing eyelet into the hole and tighten partially by hand.



Tighten down the towing eyelet securely using a wheel nut wrench.

524



## Location of the emergency towing eyelet

→P. 556

# 

## Installing towing eyelet to the vehicle

Make sure that towing eyelet is installed securely. If not securely installed, towing eyelet may come loose during towing. This may lead to accidents that cause serious injury or even death.

5

When trouble arises



# Towing with a sling-type truck



# **NOTICE**

To prevent body damage Do not tow with a sling-type truck, either from the front or rear.

526







## **NOTICE**

- To prevent causing serious damage to the automatic transmission
  - Never tow this vehicle from the front with the rear wheels on the ground.
- To prevent damaging the vehicle
  - Do not tow the vehicle with the "ENGINE START STOP" switch is OFF. The steering lock mechanism is not strong enough to hold the front wheel straight.
  - When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

528



# Using a flat bed truck



If your Lexus is transported by a flat bed truck, it should be tied down at the locations shown in the illustration.

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tiedowns or the vehicle may be damaged.

529

# GS\_G\_U (OM30C80U)

# 5-1. Essential information If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

- Visible symptoms
  - Fluid leaks under the vehicle (Water dripping from the air conditioning after use is normal.)
  - Flat-looking tires or uneven tire wear
  - Engine coolant temperature gauge needle continually points higher than normal

#### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

## Operational symptoms

- Engine missing, stumbling or running rough
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

530



# 5-1. Essential information Fuel pump shut off system

To minimize the risk of fuel leakage when the engine stalls or an airbag inflates upon collision, the fuel pump shut off system stops supplying fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

STEP 1 Turn the "ENGINE START STOP" switch to the ACCESSORY mode or OFF.

STEP 2 Restart the engine.

# 🕂 NOTICE

## Before starting the engine

Inspect the ground under the vehicle. If you find that fuel has leaked on to the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

When trouble arises



# 5-1. Essential information Event data recorder

Your vehicle has computers that monitor and control certain aspects of your vehicle. These computers assist in driving and maintaining optimal vehicle performance.

Besides storing data useful for troubleshooting, there is a system to record data in a crash or a near car crash event. This is called an Event Data Recorder (EDR).

#### In a crash or a near car crash event

The SRS airbag sensor assembly contains the EDR. In a crash or a near car crash event, this device may record some or all of the following information:

- Engine speed
- Whether the brake pedal was applied or not
- Vehicle speed
- To what extent the accelerator pedal was depressed
- Position of the automatic transmission shift lever
- Whether the driver and front passenger wore seat belts or not
- Driver's seat position
- SRS airbag deployment data
- SRS airbag system diagnostic data
- Front passenger's occupant classification

532



#### Disclosure of the data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the leasing company for a leased vehicle) is obtained
- Officially requested by the police or other authorities
- Used as a defense for Lexus in a law suit
- Ordered by a court

However, if necessary Lexus will:

- Use the data for research on Lexus vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing details of the vehicle owner, and only when it is deemed necessary
- Disclose summarized data cleared of vehicle identification information to a non-Lexus organization for research purposes

533

GS\_G\_U (OM30C80U)