1-4. Opening and closing the windows and moon roof **Power windows**

The power windows can be opened and closed using the following switches.



Closing

One-touch closing*

- **B** Opening
- One-touch opening*
- *: Pushing the switch in the opposite direction will stop window travel partway.

Before driving

Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.



1-4. Opening and closing the windows and moon roof

The power windows can be operated when

The "ENGINE START STOP" switch is in IGNITION ON mode.

Linked door lock window operation

- The power windows can be opened and closed using the mechanical key. $(\rightarrow P. 571)$
- The power windows can be opened using the wireless remote control if customized at your Lexus dealer. (\rightarrow P. 41)

Operating the power windows after turning the "ENGINE START STOP" switch OFF

The power windows can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. They cannot, however, be operated once the driver's or front passenger's door is opened.

Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed. (Customizable features \rightarrow P. 620)



1-4. Opening and closing the windows and moon roof





1-4. Opening and closing the windows and moon roof **Moon roof***

Use the overhead switches to open, close, and tilt the moon roof up and down.

Opening and closing
I Open
Stops just before it is opened fully. Press the switch again to fully open.
Close
To stop partway, press the switch lightly.
Tilt up and down
I Tilt up
I Tilt down
To stop partway, press the switch lightly.



GS_G_U(OM30C80U)

The moon roof can be operated when

The "ENGINE START STOP" switch is in IGNITION ON mode.

Linked door lock moon roof operation

• The moon roof can be opened and closed using the mechanical key. $(\rightarrow P. 571)$

 The moon roof can be opened using the wireless remote control if customized at your Lexus dealer.^{*} (→P. 41)

*: This function cannot be customized unless power window operation using the wireless remote control is enabled.

Operating the moon roof after turning the "ENGINE START STOP" switch OFF

The moon roof can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. It cannot, however, be operated once the driver's door is opened.

Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

■ If the moon roof cannot be closed automatically

Keep the close switch depressed.

To reduce moon roof wind noise

Drive with the moon roof opened automatically (just before fully opened position).

Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

GS_G_U (OM30C80U)

1-4. Opening and closing the windows and moon roof

When the moon roof does not close normally

Perform the following procedure:

- If the moon roof closes but then re-opens slightly
- STEP 1 Stop the vehicle.
- STEP 2 Press and hold the "CLOSE" switch.*1

The moon roof will close, reopen and pause for approximately 10 seconds.^{*2} Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

- STEP 3 Check to make sure that the moon roof is completely closed and then release the switch.
- If the moon roof tilts down but then tilts back up
- STEP 1 Stop the vehicle.
- **STEP 2** Press and hold the "UP" switch^{*1} until the moon roof moves into the tilt up position and stops.
- STEP 3 Release the "UP" switch once and then press and hold the "UP" switch again.*1

The moon roof will pause for approximately 10 seconds in the tilt up position.^{*2} Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.

- STEP 4 Check to make sure that the moon roof is completely closed and then release the switch.
 - *1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.
 - *2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed. (Customizable features \rightarrow P. 620)

	1
A CAUTION	Ľ
When opening the moon roof	Be
Observe the following precautions. Failing to do so may cause death or serious injury.	Before driving
 Do not allow any passengers to put their hands or heads outside the vehicle while it is moving. 	ving
Do not sit on top of the moon roof.	
When closing the moon roof	
Observe the following precautions. Failing to do so may result in death or serious injury.	
 Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated. 	
 Do not allow children to operate the moon roof. Closing the moon roof on someone can cause death or serious injury. 	
Jam protection function	
 Never try jamming any part of your body to activate the jam protection function intentionally. 	
• The jam protection function may not work if something gets caught just before	

81



the moon roof fully closes.