 


3-7. Other interior features

Sun visors

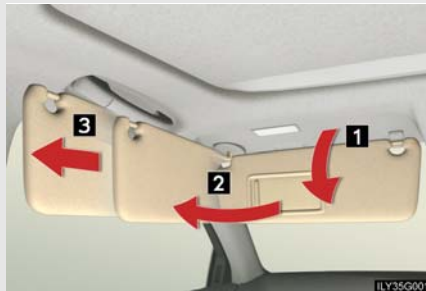

- 1 Forward position: Flip down.
- 2 Side position: Flip down, unhook, and swing to the side.
- 3 Side extender: Place in side position, then slide backwards.

3-7. Other interior features

Vanity mirrors



Slide the cover.

The light turns on when the cover is opened.

3

Interior features

3-7. Other interior features

Clock

 


n Adjust clock

- ▶ With navigation system
→ "Navigation System Owner's Manual".
- ▶ Without navigation system
Perform the following steps.

STEP 1 Press **INFO**.

STEP 2 Touch **Adjust Clock**.

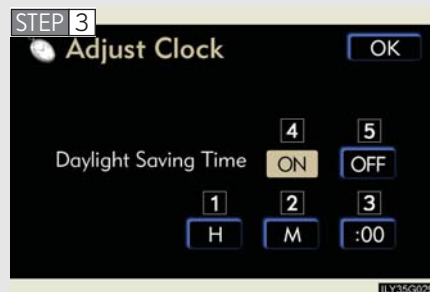

- 1 Adjusts hours.
 - 2 Adjusts minutes.
 - 3 Rounds to the nearest hour.
 - 4 Turns daylight saving time on.
 - 5 Turns daylight saving time off.
- After setting, touch **OK**.

n The clock is displayed when

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

n When the 12 volt battery is disconnected

The time display will automatically be set to 1:00.

3-7. Other interior features

Outside temperature display

The displayed temperature ranges from -40°F (-40°C) up to 122°F (50°C).



n The outside temperature is displayed when

The "ENGINE START STOP" switch is in IGNITION ON mode.

n When "--" or "E" is displayed

The system may be malfunctioning. Take your vehicle to your Lexus dealer.

n On the multi-information display

→P. 153

n Display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- l When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- l When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

3-7. Other interior features

Ashtrays

► Front



Slide the lid to open.

Push the lever to remove the ashtray.

Push the lid to close.

► Rear



Pull the lid to open.

Hold the plate down and pull the ashtray upwards to remove.

⚠ CAUTION

n When not in use

Keep the ashtray closed.

Injuries may result in the event of sudden braking, sudden swerving or an accident.

n To prevent fire

I Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.

I Do not place paper or any other type of flammable object in the ashtray.

3-7. Other interior features

Cigarette lighter



n The cigarette lighter can be used when

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

! CAUTION

n To avoid burns or fires

- I** Do not touch the metal parts of the cigarette lighter.
- I** Do not hold the cigarette lighter down. It could overheat and cause a fire.
- I** Do not insert anything other than the cigarette lighter into the outlet.

n When not in use

Keep the ashtray lid closed.
Injuries may result in the event of sudden braking, sudden swerving or an accident.

3-7. Other interior features

Power outlet

The power outlet can be used for 12V accessories that run on less than 10A.



n The power outlet can be used when

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

⚠ NOTICE

n To avoid damaging the power outlet

Close the power outlet lid when not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

n To prevent the fuse from being blown

Do not use an accessory that uses more than 12V/10A.

n To prevent 12 volt battery discharge

Do not use the power outlet longer than necessary when the engine is off.

3-7. Other interior features

Seat heaters/ventilators*

The temperature of the seats can be adjusted individually.

 
n Seat heaters



1 Heats the seats

The indicator light comes on.
The higher the number, the warmer the seats become.

n Seat heaters/ventilators

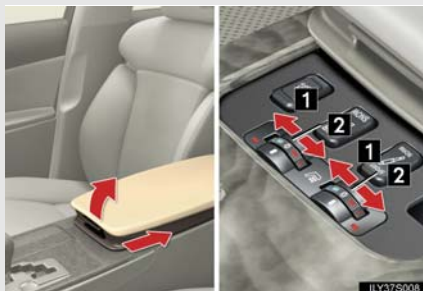

1 Heats the seats

The indicator light (red) comes on.
The higher the number, the warmer the seats become.

2 Blows air from the seats

The indicator light (green) comes on.
The higher the number, the stronger the airflow becomes.

n The seat heaters/ventilators can be used when

The "ENGINE START STOP" switch is in IGNITION ON mode.

n When not in use

Set the dial to "0". The indicator light turns off.

*: If equipped

3-7. Other interior features

CAUTION

n Burns

- I** Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
 - Babies, small children, the elderly, the sick and the disabled
 - Persons with sensitive skin
 - Persons who are fatigued
 - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- I** Do not cover the seat with anything when using the seat heater.
Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.
- I** Do not use seat heater more than necessary.
Doing so may cause minor burns or overheating.

NOTICE

n To prevent damage to the seat heaters/ventilators

Do not put heavy objects on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

n To prevent 12 volt battery discharge

Turn the switches off when the engine is off.

3-7. Other interior features

Armrest



Pull the armrest down for use.

NOTICE

- n To prevent damage to the armrest**
Do not place too much strain on the armrest.

3

Interior features

3-7. Other interior features

Rear sunshade*

The rear sunshade can be raised and lowered by pressing the switch shown below.



1 Raise/lower

n **The rear sunshade can be used when**

The "ENGINE START STOP" switch is in IGNITION ON mode.

n **Reverse operation feature**

To ensure adequate rear visibility, the sunshade automatically lowers when the shift lever is shifted to "R".


However, the rear sunshade is raised again if any of the following occurs:

- 1 Shift the shift lever into "P".
- 1 The switch is pressed again.
- 1 The shift lever is shifted out of "R", and the vehicle reaches a speed of 9 mph (15 km/h).

If the engine is turned off when the rear sunshade has been lowered due to the reverse operation feature, it will not be raised even when the engine is turned on again and the vehicle reaches a speed of 9 mph (15 km/h). To raise the sunshade again, press the switch.


*: If equipped

- n **After the “ENGINE START STOP” switch is turned to OFF**
The rear sunshade can be raised and lowered for approximately 1 minute.
- n **Customization that can be configured at Lexus dealer**
Time elapsed before the reverse operation feature activates can be changed.
(Customizable features →P. 593)

 **CAUTION**

n **When the rear sunshade is being raised or lowered**

Do not place fingers or other objects in the fastener section or in the opening.
They may get caught, causing injury.

 **NOTICE**

n **To prevent 12 volt battery discharge**

Do not operate the rear sunshade when the engine is off.

n **To ensure normal operation of the sunshade**

 
Observe the following precautions.

- l Do not place excessive load on the motor or other components.
- l Do not place objects where they may hinder opening and closing operations.
- l Do not attach items to the rear sunshade.
- l Keep the opening clean and clear of obstructions.
- l Do not operate the rear sunshade continuously over long periods of time.

3-7. Other interior features

Floor mats

Securely place a mat that matches the size of the space on the carpet.

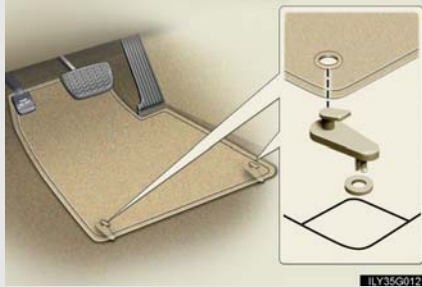

Secure the floor mat using the hooks provided.

CAUTION

n When inserting the floor mat

Observe the following precautions.

Failure to do so may result in the floor mat slipping and interfering with the movement of the pedals during driving, resulting in an accident.

- I** Make sure the floor mat is properly placed on the vehicle carpet and the correct side face upward.
- I** Do not place floor mats on the top of existing mats.

3-7. Other interior features

Trunk features

n Cargo hooks



Cargo hooks are provided for securing loose items.

n Shopping bag hooks



n First-aid kit storage belt



- 1 Loosen
- 2 Tighten

3-7. Other interior features

n Luggage mat

 


Pull the lever upwards when lifting the luggage mat up.




The lever can be hooked on the edge of the trunk.

Trunk storage extension

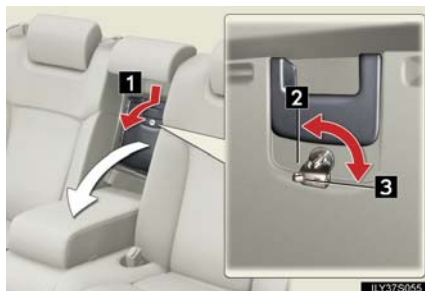


Pull down the rear armrest.

- 1 Open (push down the handle)
- 2 Unlock with the mechanical key
- 3 Lock with the mechanical key

 **CAUTION**

n While driving

- I** To avoid injury, always return the cargo hooks to their positions when they are not in use.
- I** Always keep the trunk storage extension door closed to reduce the chance of injury in case of an accident or sudden stop.

 **NOTICE**

n When closing the trunk

Do not leave the luggage mat lever hooked on the edge of the trunk.
The luggage mat may get damaged.

3-7. Other interior features

 
Garage door opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.

Programming the HomeLink® (for U.S.A. owners)

The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

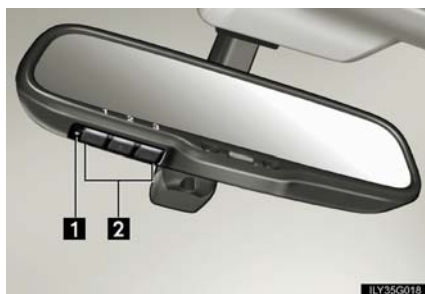

- 1 Indicator
- 2 Buttons

 
n Programming the HomeLink®



Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the HomeLink® control buttons.

Keep the HomeLink® indicator light in view while programming.

3-7. Other interior features

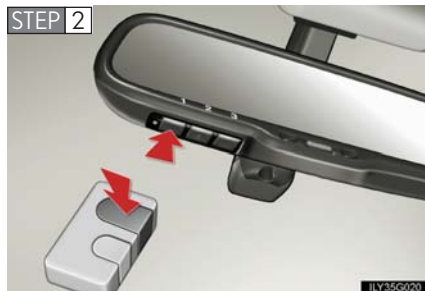

Press and hold one of the HomeLink[®] buttons and the transmitter button. When the HomeLink[®] indicator light changes from a slow to a rapid flash, you can release both buttons.

If the HomeLink[®] indicator light comes on but does not flash, flashes rapidly for 2 seconds and remains lit, the HomeLink[®] button is already programmed. Use the other buttons or follow the "Reprogramming a HomeLink[®] button" instructions. (→P. 385)



Test the HomeLink[®] operation by pressing the newly programmed button.

If a HomeLink[®] button has been programmed for a garage door, check to see if the garage door opens and closes. If the garage door does not operate, see if your remote control transmitter is of the rolling code type. Press and hold the programmed HomeLink[®] button. The remote control transmitter is of the rolling code type if the HomeLink[®] indicator light flashes rapidly for 2 seconds and then remains lit. If your transmitter is of the rolling code type, proceed to the heading "Programming a rolling code system".

STEP 4 Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

3

Interior features

3-7. Other interior features

n Programming a Rolling Code system

If your device is Rolling Code equipped, follow the steps under the heading "Programming the HomeLink[®]" before proceeding with the steps listed below.

STEP 1 Locate the learn button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener motor.

Refer to the operation manual supplied with the garage door opener motor for the location of the learn button.

STEP 2 Press the learn button.

STEP 3 Press and hold the vehicle's programmed HomeLink[®] button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the garage door opens, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink[®] transceiver and operate the garage door.

STEP 4 Repeat the steps above to program another rolling code system for any of the remaining HomeLink[®] buttons.

n Programming an entry gate (for U.S.A. owners)/Programming all devices in the Canadian market

STEP 1 Place your transmitter 1 to 3 in. (25 to 75 mm) away from the surface of the HomeLink[®].

Keep the indicator light on the HomeLink[®] in view while programming.

STEP 2 Press and hold the selected HomeLink[®] button.

STEP 3 Repeatedly press and release (cycle) the device's remote control button for two seconds each until step 4 is completed.

STEP 4 When the indicator light on the HomeLink[®] compatible transceiver starts to flash rapidly, release the buttons.

STEP 5 Test the operation of the HomeLink[®] by pressing the newly programmed button. Check to see if the gate/device operates correctly.

STEP 6 Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

n Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

n Reprogramming a button

The individual HomeLink[®] buttons cannot be erased but can be reprogrammed. To reprogram a button, follow the "Reprogramming a HomeLink[®] button" instructions.

Operating the HomeLink[®]

Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light on the HomeLink[®] transceiver should turn on.

The HomeLink[®] continues to send a signal for up to 20 seconds as long as the button is pressed.

Reprogramming a HomeLink[®] button

Press and hold the desired HomeLink[®] button. After 20 seconds, the HomeLink[®] indicator light will start flashing slowly. Next, while still pressing and holding the HomeLink[®] button, press and hold the button on the transmitter until the HomeLink[®] indicator light changes from a slow to a rapid flash.

3-7. Other interior features

Erasing the entire HomeLink® memory (all three programs)



Press and hold the 2 outside buttons for 10 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink® memory.

n Before programming

- 1 Install a new battery in the remote control transmitter.
- 1 The battery side of the remote control transmitter must be pointed away from the HomeLink® button.

n Certification for the garage door opener

This device complies with Part 15 of the FCC Rules and with RSS-210 of the IC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: This transmitter has been tested and complies with FCC and IC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

CAUTION

n When programming a garage door or other remote control devices

The garage door on other devices may operate, so ensure people and objects are out of danger to prevent potential harm.

n Conforming to federal safety standards

Do not use the HomeLink® Compatible Transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an obstruction object. A door or device without these features increases the risk of death or serious injury.

3-7. Other interior features

Compass

The compass on the inside rear view mirror indicates the direction in which the vehicle is heading.

n Operation




To turn the compass on or off, press "AUTO" for 3 seconds.

n Displays and directions

Display	Direction
N	North
NE	Northeast
E	East
SE	Southeast
S	South
SW	Southwest
W	West
NW	Northwest

 Calibrating the compass

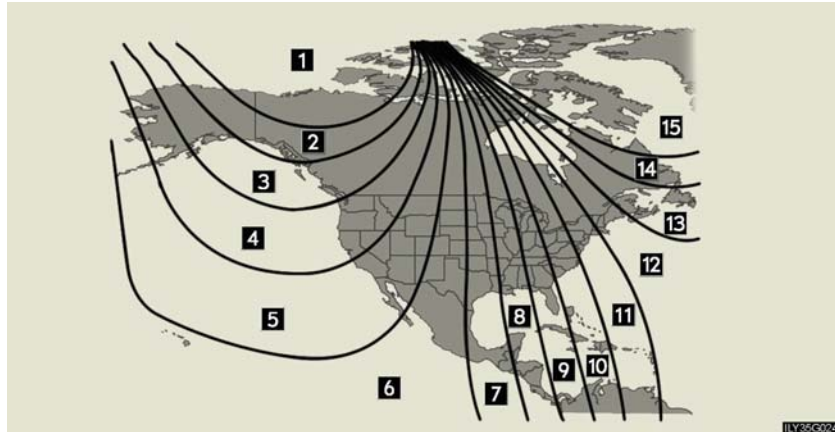


The direction display deviates from the true direction determined by the earth's magnetic field. The amount of deviation varies according to the geographic position of the vehicle.

If you cross over a map boundary shown in illustration, the compass will deviate.

To obtain higher precision or perfect calibration, refer to the following.

n Deviation calibration

 STEP 1 Stop the vehicle where it is safe to drive in a circle.

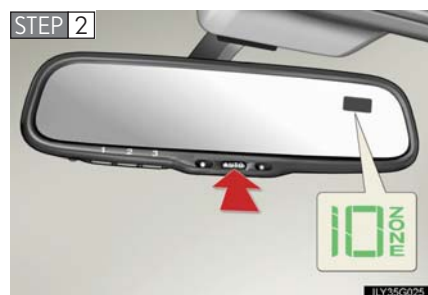

Press "AUTO" until a number (1 to 15) appears on the compass display.

STEP 3 Press "AUTO", and referring to the map above, select the number of the zone where you are.

3

Interior features

3-7. Other interior features

STEP 4 Wait a few seconds until the compass direction is displayed.

The calibration is complete.

n Circling calibration




If "CAL" appears on the display, drive the vehicle at 5 mph (8 km/h) or less in a circle until a direction is displayed.

If there is not enough space to drive in a circle, drive around the block until the direction is displayed.

n Conditions unfavorable to correct operation


The compass may not show the correct direction in the following conditions:

- 1 The vehicle is stopped immediately after turning.
- 1 The vehicle is on an inclined surface.
- 1 The vehicle is in a place where the earth's magnetic field is subject to interference by artificial magnetic fields (underground car park/parking lot, under a steel tower, between buildings, roof car park/parking lot, near an intersection, near a large vehicle, etc.).
- 1 The vehicle has become magnetized.
(There is a magnet or metal object near the inside rear view mirror.)
- 1 The 12 volt battery has been disconnected.
- 1 A door is open.

 **CAUTION**

n While driving
Do not adjust the display.
Be sure to adjust the display only when the vehicle is stopped.

n When doing the circling calibration
Be sure to secure a wide space, and watch out for people and vehicles in the neighborhood. Do not violate any local traffic rules while performing circling calibration.

 **NOTICE**

n To avoid the compass malfunctions
Do not place magnets or any metal objects near the inside rear view mirror.
Doing this may cause a malfunction of the compass sensor.

n To ensure normal operation of the compass

l Do not perform circling calibration of the compass in a place where the earth's magnetic field is subject to interference by artificial magnetic fields.

l During calibration, do not operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

3-7. Other interior features

Lexus Link System*

The Lexus Link System is a communication service that uses Global Positioning System (GPS) data and cellular service to provide you with safety, security and convenience. This system is only operational in GPS and cellular coverage areas. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions. For details about service and subscription, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

n Buttons



- 1 Voice keypad button
- 2 Volume control
- 3 Phone button
- 4 "SERVICES" button
- 5 Emergency button

n Services

The Lexus Link System offers the following services.

- 1 Airbag deployment notification (→P. 394)
- 1 Emergency assistance (→P. 394)
- 1 Stolen vehicle location assistance (→P. 395)
- 1 Remote horn/lights and remote door lock/unlock (→P. 395)
- 1 Advisor record (→P. 396)
- 1 Personal calling (→P. 396)
- 1 Other services (→P. 395)

Operating the Lexus Link System during a Bluetooth® phone call will terminate the Bluetooth® phone call.

*: If equipped

Safety information for the Lexus Link System

Important! Read this information before using the Lexus Link System.

n Exposure to radio frequency signals

The Lexus Link System installed in your vehicle is a low power radio transmitter and receiver. When the "ENGINE START STOP" switch is in the IGNITION ON mode, it receives and also sends radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.

1 ANSI (American National Standards Institute) C95.1 [1992]

1 NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]

1 ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of the Lexus Link System complies with the FCC guidelines in addition to those standards.

3-7. Other interior features

Indicator and warning lights



1 Operation indicator light

If your subscription has expired, the operation indicator light will go off.

2 Warning light


If the warning light (red light) comes on, have the vehicle inspected by your Lexus dealer.

Airbag deployment notification

If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center, and your vehicle's location is identified. The Lexus Link Advisor will attempt to contact you and assess the situation. The Advisor can quickly contact the nearest emergency services provider, describe the situation and request that assistance be sent to your location.

The Lexus Link Advisor can, if requested, connect you to an emergency services operator.

Emergency assistance

When you press the  button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

If you have accidentally pressed the button, tell the Lexus Link Advisor that you are not experiencing an emergency.

Stolen vehicle location assistance

If your vehicle is stolen, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free) and select the option for Lexus Link.

To protect subscribers' privacy, the location of a vehicle will not be provided to anyone other than a law enforcement authority.


Remote horn/lights and remote door lock/unlock

The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free) and select the option for Lexus Link.

- 1 In the case that you forget to lock the vehicle or you are locked out, the Lexus Link Call Center can send a signal to lock or unlock the vehicle remotely.
- 1 In the case that you forget where you parked the vehicle, such as in a large parking lot, the Lexus Link Call Center can send a signal to flash the headlights and sound the horn to help you locate the vehicle.

When contacting the Lexus Link Call Center from the outside of the vehicle, you need the Lexus Link PIN (Personal Identification Number). Write the PIN down and carry it with you.



Other services

Press the  button in the vehicle or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free), and then select the option for Lexus Link. The services provided will depend on the service plan level.

3-7. Other interior features

Advisor record

n Recording a conversation with an advisor

Press the  button to record a conversation. To stop recording, press the  button again.


- Up to 2 minutes of recording time is available.
- Recording a new conversation deletes the previously recorded conversation.

n Playing the recorded conversation

STEP 1 Press the  or  button.

STEP 2 Say "Advisor playback".

Press the button again to stop the playback.

To restart the playback, press the  button, say "Advisor playback" and then select either of the following methods.

- Say "Resume" to resume the playback.
- Say "Play" to start from the beginning.

Personal calling

The hands-free personal calling feature can be added to the Lexus Link System as an option. You can purchase a package of minutes that works best for you. As you make and receive calls, minutes are deducted from your plan. They are easily billed to a credit card that is kept on file so no separate phone bill is needed.

Personal calling universal voice recognition commands:


- **"Help"** The system will provide a list of available commands.
- **"Clear"** When you are entering digits, this command will erase the last digit entered.
- **"Cancel"** This command takes you from the current function to the "Lexus Link ready" prompt. If the last response from the system was "Lexus Link ready", this command will exit voice mode.

Voice recognition error message:

- **"Pardon"** The system responds with this message if the system does not recognize your voice command properly. Say the command slowly again. After the third time this happens, the system will try to guess the command you are requesting. If correct, say "Yes". If not, say "No", and the system will prompt you with its next-best guess.
- **"Slower please"** The system responds with this message if you say a command before the system is ready to listen or if your voice command cannot be recognized because of substantial background noise. Try to wait slightly longer before speaking.

n There are 5 ways to make a call.

► Dialing a specific number

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Dial".

STEP 2 When the system responds with "Phone number to dial please", say the entire number you wish to dial without pausing.


STEP 3 The system will repeat the number and ask "Yes or No".

STEP 4 Say "Yes" (or "No" to try again).

STEP 5 The system responds with "Dialing" (your call will then be connected).

► Dialing digit-by-digit ("Digit Dial")

"Digit Dial" enables you to dial a phone number by individual digit. This is helpful when there is background noise and also improves voice recognition.

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Digit dial".

STEP 2 When the system responds with "Digit please", say the first digit of the number to be dialed and wait for it to be repeated back to you.

STEP 3 Continue one digit at a time until all digits are entered.

3-7. Other interior features


STEP 4 When finished, say "Dial". The system responds with "Dialing" and your call is placed.

If you have problems storing a number using the continuous number method, you can store numbers one digit at a time using "Digit Store". Simply follow the instructions above for "Digit Dial", except say "Digit Store" in STEP 1 and "Store" in STEP 4.

► Dialing a phone number saved as a nametag

A nametag is a convenient way to store important or frequently called phone numbers for easy access at any time. To do this, choose a frequently-called number to store, the example below uses your home telephone number.

1 How to store a nametag

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Store".

STEP 2 When the system responds with "Phone number to store, please", say the entire number you wish to store with no pauses. The system will repeat the number and ask "Yes or No".

STEP 3 Say "Yes" (or "No" to try again).

STEP 4 When the system responds with "Nametag, please", say "home".

STEP 5 When the system responds with "About to store home. Does that sound OK?", say "Yes" (or "No" to try again).

STEP 6 The system responds with "Storing home".


- The system can store up to 20 nametags.

- Try to use multi-syllable nametags such as "my home", and "the office".

- Try to avoid similar-sounding nametags like "Tim" and "Kim".

When using the "Dial" and "Store" commands, the system will recognize 7, 10, and 11-digit phone numbers. When dialing or storing a phone number, you can say "zero" or "oh" for 0.


1 How to place a call using a stored nametag

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Call".

STEP 2 When the system responds with "Nametag, please", say the stored nametag.

STEP 3 The system responds with "Calling [nametag]".


1 How to hear a list of your stored nametags

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Directory".

STEP 2 The system will list your nametags.


► Dialing the last number you called ("Redial")

You can dial the last number you called by using the "Redial" feature.

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Redial".


STEP 2 The system will respond with "Redialing [#]".

► Dialing a number a Lexus Link Advisor downloaded to your vehicle

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Number recall".


STEP 2 The system will respond with "Connecting to number recall".

n Receiving a call

When someone calls you, you will hear a ring tone. Press the  button to answer the call.


If you do not answer within 30 seconds, the system will terminate the incoming call.

n Ending a call

When your call is finished, press the  button to end the call.


3-7. Other interior features

n Accessing voicemail and sending number tones to an automated phone system


You can access a voicemail system and respond to a number request from an automated phone system. When you receive the request for a number while in a call, press the  button after saying the numbers one at a time, say "Dial".

If you do not say any commands within 5 seconds after pressing the button, or if you press the button twice, the system cannot receive the number tones you are trying to send. Press the button to try again.

n How to retrieve your phone number


STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "My number".

STEP 2 The system responds with "Your number is [#]".

If the response is "Personal calling unavailable", this means your personal calling feature is not yet active, this may take a few days from vehicle delivery. It could also mean that the personal calling service is not available in your area. Press the  button to check with an Advisor. Now that you have your number, take a moment to practice by making your first call to your home phone. Remember, the system recognizes numbers better when you say them quickly.

n Verifying remaining units (minutes)


► To verify remaining minutes

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Units".

STEP 2 When the system responds with "Verify or add", say "Verify".

STEP 3 The system responds with "You have [#] units remaining".

► To add more calling units (minutes)

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Units".


STEP 2 When the system responds with "Verify or add", say "Add".

STEP 3 The system responds with "Connecting to the Personal Calling Center".

n Security code/locking your system

The personal calling function can be locked using a 4-digit security code. While the system is locked, it is only possible to communicate with the Lexus Link Call Center.

To turn on/off the security

STEP 1 Press the  button. When the system responds with "Lexus Link ready", say "Security".

STEP 2 When the system responds with "Enter first digit of code please", say your 4-digit code one digit at a time.

STEP 3 After the fourth digit, the system responds with "Security (code ####) is now on/off".

3-7. Other interior features

n Speech recognition information

The Lexus Link speech recognition systems use speech technology that is designed to understand a wide range of speakers of American English. However, the technology may not work as well if a regional or ethnic accent is encountered. If the speech recognition system does not work properly, refer to the following.

- 1 The system does not recognize your command properly if noise is present. Perform the following to improve voice command recognition.
 - Turn down or off the air conditioning system.
 - Slow down to reduce wind noise.
 - Close the windows and the moon roof to block outside noise.
 - Have all occupants be quiet so that the system does not recognize their conversation as a command.
- 1 When to speak
Say a command within 5 seconds after the system prompts you to speak.
- 1 How to speak
 - Speak forcefully and clearly.
 - Speak calmly and naturally.
 - The driver should speak while facing forward, and the passenger should speak facing the inside rear view mirror.
 - Avoid speaking with a rising intonation. Use a flat or falling intonation.
- 1 Tips for one-word commands
 - The system recognizes only one word at a time for personal calling. (There are some exceptions, such as "Advanced services" and "My number".)
 - When inputting the security codes or voice-activated keypad number, you must say them one digit at a time. When inputting a phone number, the speech recognition system can recognize 7, 10, and 11-digit numbers as well as the number 911.

1 Tips for entering a phone number using the “Dial” and “Store” commands

- You do not need to say “Dial”, “Store” or “Verify” after the phone number.
- If the phone number entered is not 7, 10, or 11 digits, use the “Dial” or “Store” command.
- Do not pause between the digits.
- Speech recognition does not recognize the words “Hundred” or “Thousand”. Instead, say each digit.
- Speech recognition often works better when the digits are combined smoothly into a single phrase.
- If the system does not recognize your command properly, use the “Digit dial” command to enter one digit at a time.

1 If problems continue

- Say each one of the syllables in the word clearly.
- Be sure to articulate each sound in the word.
- If the system is confusing 2 commands that are similar, be sure to pronounce the distinction.
- Avoid clipping short words and syllables.
- Try speaking louder to prevent background noise from drowning out your voice.

1 Audible voice prompts

Some of the voice guidance instructions can be changed to Spanish. Press the



button and ask a Lexus Link Advisor.

n Information on Advanced Services

See the Lexus Link area of the Lexus website at www.lexus.com/lexuslink/ or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free) for more information.

3-7. Other interior features

n Certification for the Lexus Link System

FCC ID: SCWTR-423-A2

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.