


## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

| Item  | Function   | Default setting   | Customized setting           |
|---|--|---|------------------------------|
| Smart access system with push-button start  | Smart access system with push-button start   | ON  | OFF                          |
|   | Operation signal (Emergency flashers)  | ON  | OFF                          |
|   | Operation signal (Buzzer)  | ON  | OFF                          |
| Wireless remote control   | Unlocking operation  | Driver's door unlocked in 1-step, all doors unlocked in 2-steps | All doors unlocked in 1-step |
|   | Time elapsed before automatic door lock function is activated if door is not opened after being unlocked | 60 seconds  | OFF                          |
|   |  |   | 30 seconds                   |
|   |  |   | 120 seconds                  |
|   | Operation signal (Emergency flashers)  | ON  | OFF                          |
|   | Operation signal (Buzzer)  | ON  | OFF                          |
|   | Trunk unlocking function   | ON  | OFF                          |
|   | Trunk unlocking operation  | Push and hold   | Push twice<br>One short push |
|   | Panic function   | ON  | OFF                          |
| Buzzer sounds when pushing  with any door not closed | ON   | OFF   |                              |

| Item          | Function  | Default setting   | Customized setting           |
|---------------|---|---|------------------------------|
| Door lock     | Unlocking using a key   | Driver's door unlocked in 1-step, all doors unlocked in 2-steps | All doors unlocked in 1-step |
|               | Speed-detecting automatic door lock function                        | OFF   | ON                           |
|               | Opening driver's door unlocks all doors                             | OFF   | ON                           |
|               | Shifting the shift lever to "P" unlocks all doors.                  | ON  | OFF                          |
|               | Shifting the shift lever to position other than "P" locks all doors | ON  | OFF                          |
| Power windows | Linked door key operation   | Open and close  | Open only                    |
|               | Wireless remote control linked operation                            |   | Close only                   |
|               |   | ON  | OFF                          |

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Customizing Your Lexus

| Item                           | Function   | Default setting                         | Customized setting |
|--------------------------------|--|---|--------------------|
| Moon roof                      | Linked door key operation  | Open and close                          | Open only          |
|                                |  |   | Close only         |
|                                | Linked operation of components when door key is used                         | Slide only                              | Tilt only          |
|                                | Wireless remote control linked operation                                     | ON                                      | OFF                |
|                                | Linked operation of components when wireless remote control used             | Slide only                              | Tilt only          |
| Automatic light control system | Light sensor sensitivity   | Level 3                                 | Levels 1 to 5      |
|                                | Time elapsed before headlights automatically turn off after doors are closed | 30 seconds                              | 0 seconds          |
|                                |  |   | 60 seconds         |
|                                |  |   | 90 seconds         |
| Day time running light         | ON   | OFF*                                    |                    |
| Windshield wipers and washer   | Switching operation when the vehicle is stationary                           | ON                                      | OFF                |
|                                | Drip prevention function   | ON                                      | OFF                |
|                                | Time elapsed before the drip prevention function operates                    | Variable depending on the vehicle speed | 3 seconds          |

\*: Vehicles sold outside Canada

| Item  | Function  | Default setting          | Customized setting |
|---|---|--------------------------|--------------------|
| Illumination  | Time elapsed before lights turn off                         | 15 seconds               | 7.5 seconds        |
|   |   |                          | 30 seconds         |
|   | Operation when the doors are unlocked                       | ON                       | OFF                |
|   | Operation after the "ENGINE START STOP" switch turned OFF   | ON                       | OFF                |
|   | Front/rear personal lights turned on when a door is opened  | Corresponding light only | All lights         |
|   |   |                          | OFF                |
|   | Foot lights   | ON                       | OFF                |
|   | Shift lever light   | ON                       | OFF                |
| Outer foot light  | ON  | OFF                      |                    |
| Front/rear personal lights turned on when the interior lights are switched "ON" | ON  | OFF                      |                    |
| Rear sunshade   | Time elapsed before the reverse operation feature activates | 0.7 seconds              | 0 seconds          |
|   |   |                          | 0.9 seconds        |
|   |   |                          | 1.2 seconds        |

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus









### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### n U.S. OWNERS

l In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

l In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### n CANADIAN OWNERS

l In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

l The U.S. mainland: [www.lexus.com](http://www.lexus.com)

l Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

l Canada: [www.lexus.ca](http://www.lexus.ca)

©2008 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.