

1-4. Opening and closing the windows and moon roof

Power windows

The power windows can be opened and closed using the following switches.



- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

1-4. Opening and closing the windows and moon roof

n **The power windows can be operated when**

The "ENGINE START STOP" switch is in IGNITION ON mode.

n **Linked door lock window operation**

l The power windows can be opened and closed using the mechanical key.
(→P. 526)

l The power windows can be opened using the wireless remote control.
(→P. 34)

l The power windows can be closed using the smart access system with push-button start. (→P. 22)

n **Operating the power windows after turning the "ENGINE START STOP" switch OFF**

The power windows can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. They cannot, however, be operated once the driver's or front passenger's door is opened.

n **Jam protection function**

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

n **Customization that can be configured at Lexus dealer**

Settings (e.g. linked door lock operation) can be changed.
(Customizable features →P. 571)

1

Before driving

1-4. Opening and closing the windows and moon roof

CAUTION

n When closing the windows

Observe the following precautions.

Failing to do so may result in death or serious injury.

I Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.

I Do not allow children to operate the power windows.
Closing a power window on someone can cause death or serious injury.

n Jam protection function


I Never try jamming any part of your body to activate the jam protection function intentionally.

I The jam protection function may not work if something gets caught just before the window fully closes.

1-4. Opening and closing the windows and moon roof Moon roof (if equipped)

Use the overhead switches to open, close, and tilt the moon roof up and down.

n Opening and closing

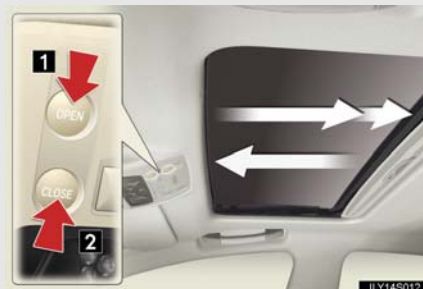


1 Open

Stops just before it is opened fully. Press the switch again to fully open.

2 Close

To stop partway, press the switch lightly.

n Tilt up and down

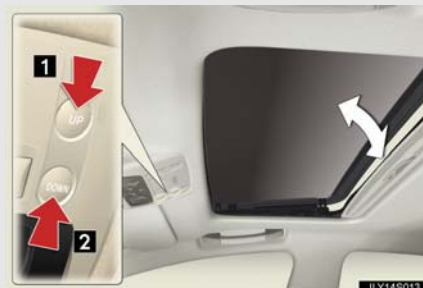

1 Tilt up

2 Tilt down

To stop partway, press the switch lightly.

1
Before driving

1-4. Opening and closing the windows and moon roof

n The moon roof can be operated when

The "ENGINE START STOP" switch is in IGNITION ON mode.

n Linked door lock moon roof operation

l The moon roof can be opened and closed using the mechanical key. (→P. 526)

l The moon roof can be opened using the wireless remote control. (→P. 34)

l The moon roof can be closed using the smart access system with push-button start. (→P. 22)

n Operating the moon roof after turning the "ENGINE START STOP" switch OFF

The moon roof can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. It cannot, however, be operated once the driver's door is opened.

n Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

n If the moon roof cannot be closed automatically

Keep the close switch depressed.

n To reduce moon roof wind noise

Drive with the moon roof opened automatically (just before fully opened position).

n Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

n Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed.
(Customizable features →P. 571)

1-4. Opening and closing the windows and moon roof

CAUTION

n When opening the moon roof

Observe the following precautions.

Failing to do so may cause death or serious injury.

1 Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.

1 Do not sit on top of the moon roof.

n When closing the moon roof

Observe the following precautions.

Failing to do so may result in death or serious injury.

1 Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated.

1 Do not allow children to operate the moon roof.

Closing the moon roof on someone can cause death or serious injury.

n Jam protection function

1 Never try jamming any part of your body to activate the jam protection function intentionally.

1 The jam protection function may not work if something gets caught just before the moon roof fully closes.

1

Before driving