

### 3-4. Using the hands-free system

## Hands-free system

The hands-free system is a function that allows you to use your mobile phone without touching it.

This system supports Bluetooth<sup>®</sup> mobile phones. Bluetooth<sup>®</sup> is a wireless data system that allows the mobile phone to wirelessly connect to the hands-free system and make/receive calls.

#### ► Telephone switch



- 1 Sending/Receiving/"Telephone" screen display (when stopped)
- 2 End call

#### ► Microphone



The person you are speaking to can be heard from the driver's side speaker.







To use the hands-free system you must register your Bluetooth<sup>®</sup> phone in the system. (→P. 268)

Status display

You can check such indicators as signal strength and battery charge on the “Telephone” screen.



- 1 Connection status
- 2 Battery charge
- 3 Call area
- 4 Signal strength

Indicators	Conditions
Connection status	Blue: Good Yellow: Bad  : Not connected
Battery charge	 : Full  : Low
Call area	“Rm”: Roaming area “Hm”: Home area
Signal strength	 : Good  : Bad  : Not connected

### 3-4. Using the hands-free system

---

#### **n When using the hands-free system**

- 1 The audio system and voice guidance are muted when making a call.
- 1 If both parties speak at the same time it may be difficult to hear.
- 1 If the received call volume is overly loud, an echo may be heard.
- 1 Try to face the microphone as much as possible when speaking.
- 1 In the following circumstances it may be difficult to hear the other party.
  - When driving on unsealed roads
  - When driving at high speeds
  - If the window is open
  - If the air-conditioning is blowing directly on the microphone
  - If the air-conditioning is set to high

#### **n Conditions under which the system will not operate**

- 1 If using a mobile phone that does not support Bluetooth®.
- 1 If the mobile phone is switched off.
- 1 If you are outside service range.
- 1 If the mobile phone is not connected.
- 1 If the mobile phone's battery is low.

#### **n Bluetooth® antenna**

The antenna is built into the display. If the mobile phone is behind the seat or in the console box, or touching or covered by metal objects, connection status may deteriorate.

#### **n Battery charge/Signal status**

This display may not correspond exactly with the mobile phone itself.

### 3-4. Using the hands-free system

#### n About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

#### n Compatible models

Compatible with HFP (Hands Free Profile) Ver. 1.0 and OPP (Object Push Profile) Ver. 1.1.

#### n Certification for the hands-free system

FCC ID: HYQBT0501A  
IC ID: 1551A-BT0501A

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

3

Interior features

### 3-4. Using the hands-free system

#### CAUTION

##### **n FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.

##### **n Caution while driving**

Do not use the mobile phone or connect the Bluetooth<sup>®</sup> system.


#### NOTICE



##### **n When leaving the vehicle**

Do not leave your mobile phone in the vehicle. The inside of the vehicle may become hot, causing damage to the phone.

### 3-4. Using the hands-free system Using the Bluetooth® phone
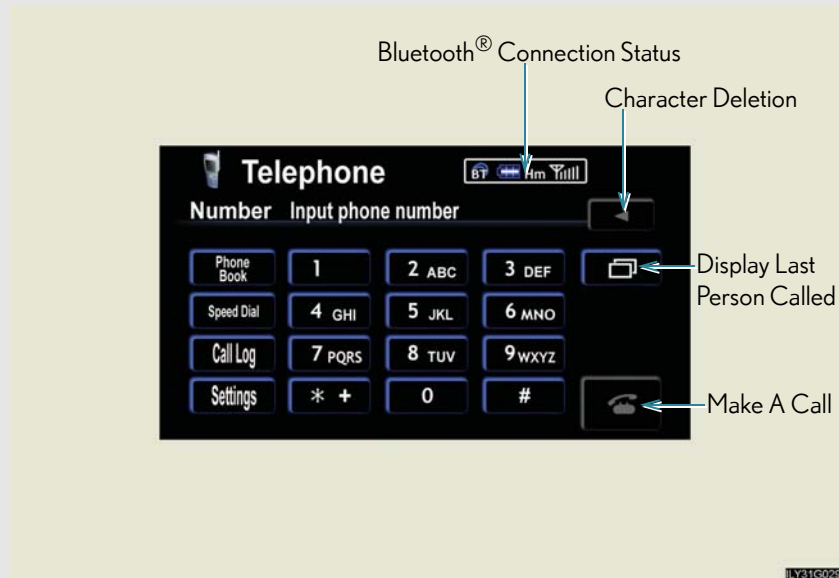
#### ► Telephone screen



To display the screen shown above, press , then touch  on the "Information" screen.

3


Interior features

### 3-4. Using the hands-free system

#### Registering a Bluetooth® phone

You can register up to 6 phones in the system.

**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch **Settings** on the "Telephone" screen.



Touch **Register**.

### 3-4. Using the hands-free system



Input the passkey displayed on screen into your phone.


If the message “Bluetooth\* connection successful” is displayed, registration is complete.

If the message “Bluetooth\* connection failed. Please check the “Passkey” and the settings of the telephone” is displayed, start again from the beginning.

#### Bluetooth® phone connection

There are two connection methods available—automatic and manual.

**STEP 1** Press .

**STEP 2** Touch  on the “Information” screen.

**STEP 3** Touch  on the “Telephone” screen.

**STEP 4** Choose one of the following methods.



##### 1 Automatic connection

If the engine switch is in the “ACC” or “IG-ON” mode, the system will automatically connect to the Bluetooth\* phone. Touching automatic connection will turn it ON/OFF.

##### 2 Manual connection

If automatic connection fails or is turned OFF, connection must be made manually.

If the message “Bluetooth\* connection successful” is displayed, connection is complete.

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.



### 3-4. Using the hands-free system


#### n Reconnecting to the Bluetooth® phone


If the system cannot connect due to poor signal strength with the engine switch in the "ACC" or "IG-ON" mode, the system will automatically attempt to reconnect. If the phone is turned off, the system will not attempt to reconnect. In this case, connection must be made manually, or the phone must be re-selected.

#### Making a call

Once the Bluetooth® phone is registered, you can make a call using the following procedure.


#### n Dialing


STEP 1 Press .



STEP 2 Touch  on the "Information" screen.



Inputting the phone number.

To delete the input phone number, touch .


To dial the last input phone number, touch .

STEP 4 Touch  or press the  on the steering wheel.


## n Dialing from the phone book

You can dial a number from the phone book data imported from your mobile phone. Up to 1000 entries may be stored in the phone book. (→P. 291)

**STEP 1** Press .



**STEP 2** Touch  on the "Information" screen.

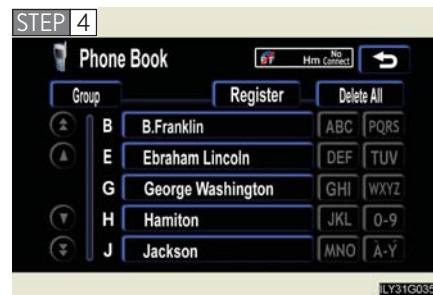**STEP 3** Touch  on the "Telephone" screen.



Choose the data to call from the list.



Choose the number and then touch  or press the  on the steering wheel.

3

Interior features


### 3-4. Using the hands-free system

#### n Dialing from history


You can make a call from past dialed numbers or received calls.

Up to 5 numbers are stored, with the last recent number being deleted to make room for a new number.


**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

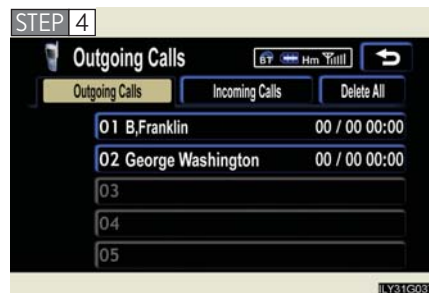

**STEP 3** Touch  on the "Telephone" screen.



Choose the number to call from the list.

To choose a number from the incoming calls history, touch  and choose a number to call.




Touch  or press the  on the steering wheel.

#### n Calling using speed dial

You can make a call using numbers registered from the phone book and call history. (→P. 282)

**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.



Choose the desired number to make a call.

To change the page, touch  or .

3

Interior features

### 3-4. Using the hands-free system


#### n Calling using voice recognition

Using voice recognition, you can call by name from the "Phone Book" screen, call by number from the "Telephone" screen, and send tones from the "Call" screen.(→P. 278)



Talk switch

#### 1 Calling by name from the "Phone Book" screen

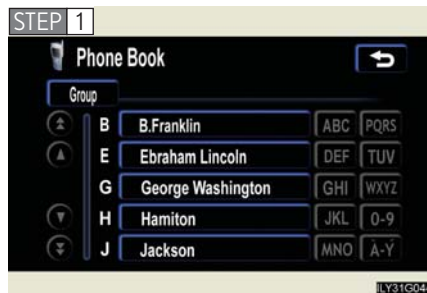

Press the talk switch.

**STEP 2** Following the system guidance, wait until the beep and then say the desired name.

If there are multiple entries for the same name, "Next" will be displayed.

To select the next candidate, touch **Next** or say "Next candidate".

**STEP 3** Following the system guidance, press the talk switch.

**STEP 4** Following the system guidance, wait until the beep and then say "Dial".

### 3-4. Using the hands-free system

#### 1 Calling by number from the "Telephone" screen



Press the talk switch.

**STEP 2** Following the system guidance, wait until the beep and then say the desired number.

**STEP 3** Following the system guidance, press the talk switch.

**STEP 4** Following the system guidance, wait until the beep and then say "Dial".

#### 1 Sending tones from the "Call" screen



Press the talk switch.

**STEP 2** Following the system guidance, wait until the beep and then say the desired number.

**STEP 3** Following the system guidance, press the talk switch.

**STEP 4** Following the system guidance, wait until the beep and then say "Yes".

#### n Calling using POI


You can make a call using a Point Of Interest. (→ "Navigation System Owner's Manual")

3


Interior features

### 3-4. Using the hands-free system

#### n **Made/Received call history list**

- 1 If you make a call to or receive a call from a number registered in the phone book, the name is displayed in the call history.
- 1 If you make multiple calls to the same number, only the last call made is displayed in the made calls history.
- 1  is displayed to the left of phone number for unanswered calls.
- 1 Calls where the number is unavailable, such as public telephones, are not stored in the call history.


#### n **When driving**

 

- 1 The functions “Dialing”, “Dialing from the phone book”, and “Dialing from history” are unavailable.
- 1 If you press the  on the steering wheel, the “Speed Dial” screen is displayed. At this time phone numbers will not be displayed. Choose from the names displayed to make a call.

#### n **International calls**

You may not be able to make international calls, depending on the mobile phone in use.

#### n **To display the voice recognition command list**

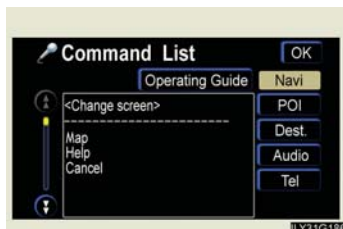


**STEP 1** After pressing the talk switch, press . If the “Operating Guide” screen is displaying, press .

**STEP 2** Press .

### 3-4. Using the hands-free system


#### n To display the voice recognition operating guide

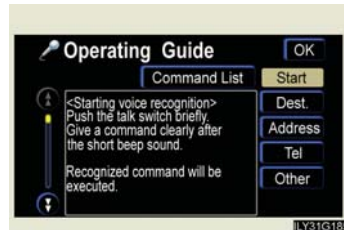

**STEP 1** After pressing the talk switch, press **Help**. If the "Command List" screen is displaying, press **Operating Guide**.

**STEP 2** Press **Tel**.

#### n To cancel voice recognition


- 1 Press and hold the talk switch.
- 1 Press  on the steering wheel.
- 1 Say "Cancel".
- 1 Press **Cancel**. (excluding command verification)



#### n When using voice recognition

Use correct commands and speak clearly, otherwise the system may not correctly recognize the command. Wind or other noises may also cause the system not to recognize the desired command.

### Receiving a call

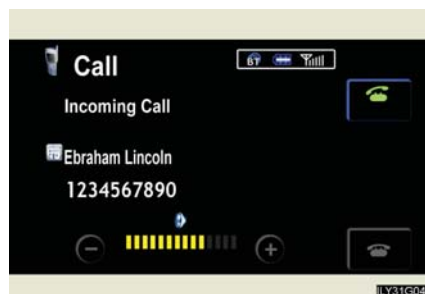When a call is received, the following screen is displayed together with a sound.




Touch  or press the  on the steering wheel.





### 3-4. Using the hands-free system

#### n To refuse a call

Touch and hold .

#### n To adjust the received call volume

Press the  or . You can also adjust the volume using the steering switches.

---

#### n International calls



Received international calls may not be displayed correctly, depending on the mobile phone in use.

### Speaking on the phone

The following screen is displayed when speaking on the phone.



#### n To adjust the received call volume

Press the  or . You can also adjust the volume using the steering switches.

#### n To prevent the other party from hearing your voice

Touch the .

#### n Inputting a key

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phone book.

### 3-4. Using the hands-free system

**STEP 1** Touch **0-9**.



Input the number.

If repeated tone symbols\* are stored in the phone book, **Send** and **Exit** are displayed on the right side of the screen.

\*: Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number.  
(e.g. 056133p0123w#1)

**STEP 3** Confirm the number displayed on screen, and touch **Send**.

If you touch **Exit**, operation is completed without making a call.

#### n To transfer a call

Touch **Transfer Call**.

#### n To hang up

Touch  or press the  on the steering wheel.

3

Interior features

#### n Transferring calls

- 1 It is not possible to transfer from hands-free to the mobile phone while driving.
- 1 If you transfer from the mobile phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- 1 Transfer method and operation may vary according to the mobile phone used.
- 1 For operation of the mobile phone in use, see the phone's manual.

#### n To send a tone by speed tone

Touch **0-9** then touch **Speed Tone**. Choose the desired number from the speed tone list displayed.

#### n While driving

Key input is unavailable.


 

### 3-4. Using the hands-free system

## Setting the hands-free system

You can speed dial, register in and edit the phone book, and set the Bluetooth® phone.

► Settings screen




To display the screen shown above, press , touch  on the "Information" screen, then touch  on the "Telephone" screen.

## Registering/Deleting a speed dial item


### n Registering a speed dial item


You can register a number from the phone book or the call history. Up to 17 entries may be stored.

**STEP 1** Press .


**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch the **Settings** switch on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.

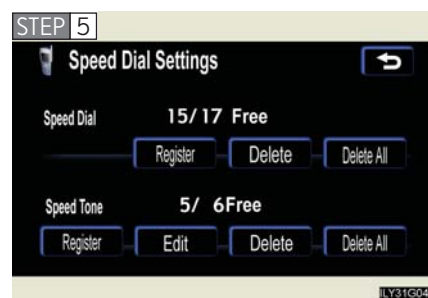

Touch **Register** in the "Speed Dial" section of the "Speed Dial Settings" screen.

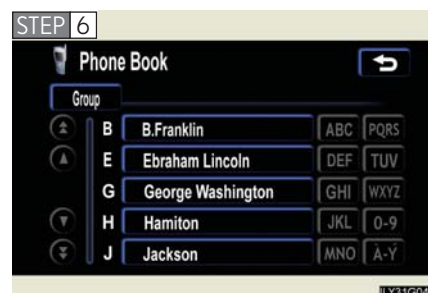


Select the data to be registered.


3

Interior features

### 3-4. Using the hands-free system

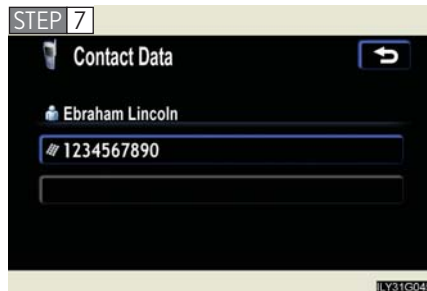

Select the number to be registered.

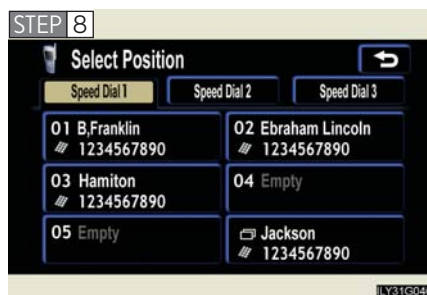

Press the desired switch.

The last dialed number will be registered in position 6.

#### n Deleting a speed dial item

STEP 1 Press **INFO**.

STEP 2 Touch **Telephone** on the "Information" screen.

STEP 3 Touch the **Settings** switch on the "Telephone" screen.

STEP 4 Touch **Speed Dial** on the "Settings" screen.

STEP 5 Touch **Delete** in the "Speed Dial" section of the "Speed Dial Settings" screen.

STEP 6 Select the data to be deleted.

STEP 7 A confirmation message will be displayed. If everything is correct, touch **Yes**.

**n To delete all speed dial items**

Follow the steps for “Deleting a speed dial item” to “STEP 5”. In the “Speed Dial” section of the “Speed Dial Settings” screen, touch the **Delete All**. A confirmation message will be displayed. If everything is correct, touch **Yes**.

**Registering/Editing/Deleting a Speed Tone**

**n Registering a speed tone**


You can register up to 6 items.

**STEP 1** Press **INFO**.


**STEP 2** Touch **Telephone** on the “Information” screen.

**STEP 3** Touch **Settings** on the “Telephone” screen.

**STEP 4** Touch **Speed Tone** on the “Settings” screen.

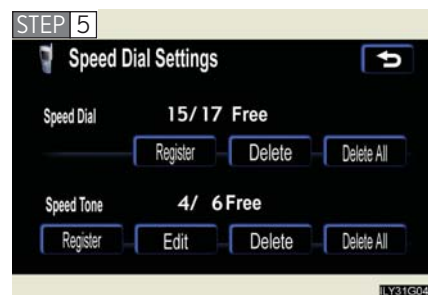

Touch **Register** in the “Speed Tone” section.

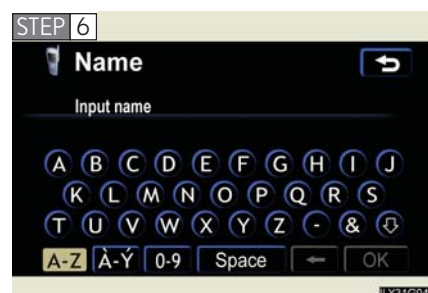

Input the desired name and touch

**OK**.


**A-Z**, **À-Ý**: Letter input

**0-9**: Number/Symbol input

**Space**: Space

**OK**: Backspace

### 3-4. Using the hands-free system

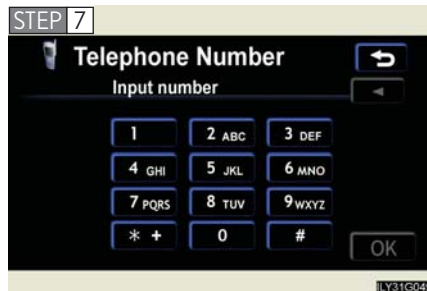

Input the number and touch **OK**.



Touch the desired switch.

#### n Editing a speed tone


STEP 1 Press **INFO**.

STEP 2 Touch **Telephone** on the "Information" screen.

STEP 3 Touch **Settings** on the "Telephone" screen.

STEP 4 Touch **Speed Tone** on the "Settings" screen.

STEP 5 Touch **Edit** in the "Speed Tone" section of the "Speed Dial Settings" screen.

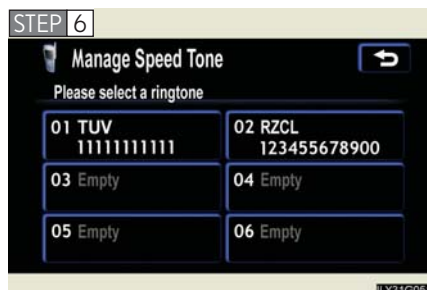


Touch the switch to be edited.

**STEP 7** Input the name and touch **OK**.


**STEP 8** Input the number and touch **OK**.

#### n Deleting a speed tone

**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch **Settings** on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.

**STEP 5** Touch **Delete** in the "Speed Tone" section of the "Speed Dial Settings" screen.

**STEP 6** Choose the data to delete.

**STEP 7** A confirmation message will be displayed. If everything is correct, touch **Yes**.

#### n To delete all speed tone data


Follow the steps "Deleting a speed tone" to "STEP 5". In the "Speed Tone" section, touch **Delete All**. A confirmation message will be displayed. If everything is correct, touch **Yes**.





### 3-4. Using the hands-free system


#### Setting the volume

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

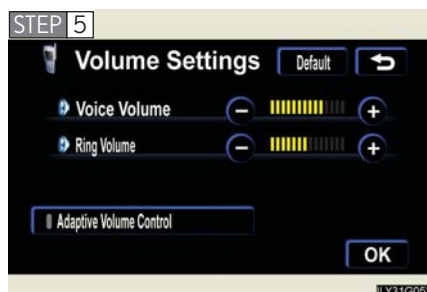

Touch  or  to lower or raise the volume.

Voice Volume: Change the speaker volume

Ring Volume: Change the ring volume

#### n Adaptive Volume Control

When traveling at 50 mph (80 km/h) or over, the system automatically raises the volume one level.

If the vehicle's speed drops to 43 mph (70 km/h), the volume will return to its original level.


You can turn this function ON/OFF by touching .

#### n To return to the default volume settings

Touch , then .

## Changing the screen settings

The following settings can be changed.

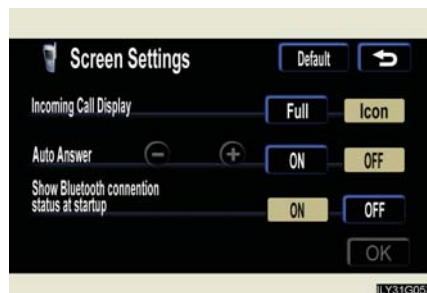

### “Incoming Call Display”

The incoming call screen settings can be changed.

### “Auto Answer”

When a call is received, the system automatically switches to the talking screen after the set period of time, meaning you can speak without pressing anything.

### “Show Bluetooth\* connection status at startup”


You can set the system to show the status confirmation display when connecting.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


### 3-4. Using the hands-free system

#### n “Incoming Call Display” settings

**STEP 1** Press .

**STEP 2** Touch  on the “Information” screen.

**STEP 3** Touch  on the “Telephone” screen.

**STEP 4** Touch  on the “Settings” screen.


**STEP 5** Select the desired switch.


**Full** : The hands-free screen is displayed when a call is received, and you can operate the system from that screen.


**Icon** : A message is displayed at the top of the screen, and you can only operate the system with the steering switches.


#### n “Auto Answer” settings

**STEP 1** Press .

**STEP 2** Touch  on the “Information” screen.

**STEP 3** Touch  on the “Telephone” screen.


**STEP 4** Touch  on the “Settings” screen.

**STEP 5** Touch  in the “Auto Answer” section of the “Screen Settings” screen.


**STEP 6** Set the wait time using  and . (1 - 60 seconds)


 
n **“Show Bluetooth\* connection status at startup” settings**

**STEP 1** Press .

**STEP 2** Touch  on the “Information” screen.

**STEP 3** Touch  on the “Telephone” screen.

**STEP 4** Touch  on the “Settings” screen.

**STEP 5** Touch  /  in the “Show Bluetooth\* connection status at startup” section of the “Screen Settings” screen.

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

n **To set the screen settings to default**

Touch , then .


### 3-4. Using the hands-free system

#### Phone book settings


Up to 1000 names, 2 items per name, can be registered.

##### n Transferring mobile phone data


**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.


**STEP 5** Touch .

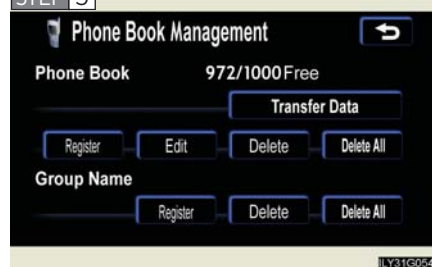

**STEP 6** Select the group to transfer to.




### 3-4. Using the hands-free system

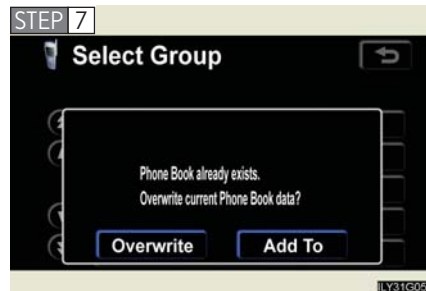

To overwrite data, touch **Overwrite**.

To add to existing data, touch **Add To**.

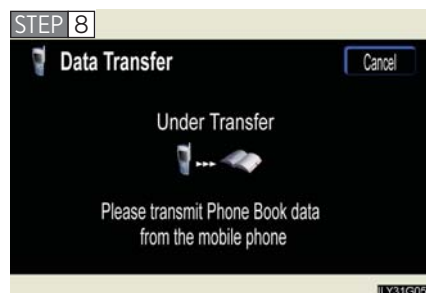

Transfer will begin. If you wish to cancel the transfer before finished, touch **Cancel**.

Transfer is complete when "Transfer completed" is displayed.

If "Transfer failed" is displayed, restart the process from the beginning.

3

Interior features


#### n Registering by input

**STEP 1** Press **INFO**.

**STEP 2** Touch **Telephone** on the "Information" screen.

**STEP 3** Touch **Settings** on the "Telephone" screen.


**STEP 4** Touch **Phone Book** on the "Settings" screen.

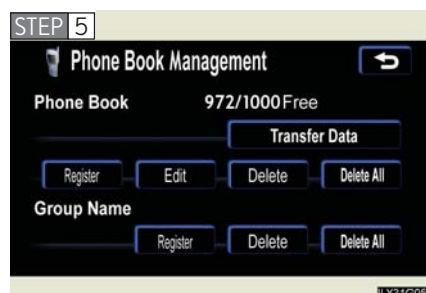

Touch the **Register** in the "Phone Book" section.

### 3-4. Using the hands-free system

**STEP 6** Choose the switch to register.

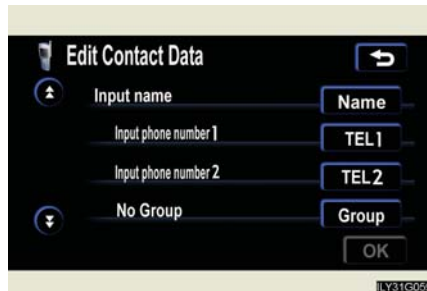

**Name** : Input the name on the "Name" screen.

**TEL1** , **TEL2** :  
Input the number(s) on the "Telephone Number" screen. When you touch **OK** , the "Select Icon" screen will appear. Choose the desired icon.

- Mobile phone1
- Mobile phone2
- Home
- Work
- Other


**Group** : Select the desired group from the "Select Group" screen. (No Group, 01 - 09)

**Voice Rec.** : Select the desired phone number and touch **REC** to record a voice tag.  
To play the voice tag, touch **PLAY** . To delete the voice tag, touch **Delete** .

**STEP 7** Once input is complete, touch **OK** .


n Add history data to a registered entry

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

 
STEP 4 Choose the desired number from the list.

To choose from the received call history, touch  then select the desired number.

STEP 5 Touch .









STEP 6 Choose the phone book entry to be added to.

STEP 7 Check the data to be added, then touch .






 


### 3-4. Using the hands-free system




 
#### n Editing phone book data

- STEP 1** Press .
- STEP 2** Touch  on the "Information" screen.
- STEP 3** Touch  on the "Telephone" screen.
- STEP 4** Touch  on the "Settings" screen.
- STEP 5** Touch  in the "Phone Book" section of the "Phone Book Management" screen.
- STEP 6** Choose the data to edit.
- STEP 7** Choose the switch to edit.
- STEP 8** After editing, press .

#### n Deleting phone book data

- STEP 1** Press .
- STEP 2** Touch  on the "Information" screen.
- STEP 3** Touch  on the "Telephone" screen.
- STEP 4** Touch  on the "Settings" screen.
- STEP 5** Touch  in the "Phone Book" section of the "Phone Book Management" screen.
- STEP 6** Select the data to delete.
- STEP 7** A confirmation message will be displayed. If everything is correct, touch .


#### n To delete all data

Follow the steps “Deleting phone book data” to “STEP 5”. In the “Phone Book” section of the “Phone Book Management” screen, touch . To delete all data within a group, touch , then select the group to delete. To delete all contact data, touch . Check that everything is correct, then touch .

#### n Registering/Editing/Deleting from the phone book


You can register data in the phone book, edit registered data, and delete items.

**STEP 1** Press .

 
 
**STEP 2** Touch  on the “Information” screen.

**STEP 3** Touch  on the “Telephone” screen.

**STEP 4** To register data, touch  on the “Phone Book” screen.

To delete all data, touch .

To delete or edit specific data, select the data to delete/edit, then touch

 to delete, or  to edit.

#### n The phone book


The method for transferring phone book data from the phone to the system varies with phone model. See the phone’s manual.

### 3-4. Using the hands-free system

 
#### Changing the phone book group name settings


##### n Registering a group name

**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.

**STEP 5** Touch the  switch in the "Group Name" section of the "Phone Book Management" screen.


**STEP 6** Select the group to register ("01" - "19").




Select the switch to be edited.





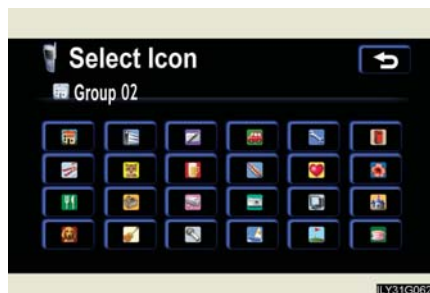

**Icon** : The below screen will be displayed. Select the desired icon.

**Name** : Input the name on the "Name" screen.




 
**STEP 8** Once editing is complete, touch .

### n Deleting a group name

- STEP 1 Press .
- STEP 2 Touch  on the "Information" screen.
- STEP 3 Touch  on the "Telephone" screen.
- STEP 4 Touch  on the "Settings" screen.
- STEP 5 Touch the  switch in the "Group Name" section of the "Phone Book Management" screen.
- STEP 6 Select the group name to delete.
- STEP 7 A confirmation message will be displayed. If everything is correct, touch .

3

### n To delete all data


Follow the steps "Deleting phone book data" procedure to "STEP 5". In the "Phone Book" section of the "Phone Book Management" screen, touch . A confirmation message will be displayed. If everything is correct, touch .

Interior features

### 3-4. Using the hands-free system


#### Deleting the history

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

 
STEP 3 Touch  on the "Telephone" screen.

STEP 4 Select the data to delete from the list.





To delete data from the received calls history, touch , then select the data to delete.

STEP 5 Touch .



STEP 6 Check that everything is correct, then touch .

#### n To delete all data

  Follow the steps "Deleting a group name" to "STEP 4". Touch  on the "Outgoing Calls" screen. To delete all received call history data, touch , then touch . Check that everything is correct, then touch .


#### Changing the security settings

You can disable certain hands-free system functions. Use the security settings when you do not wish other people to see the registered data, for example when having the vehicle valet parked at a hotel.


To enable or disable security, the security code (4 digits) is required. The default code is "0000". Be sure to change the security code before use.


## n Changing the security code

**STEP 1** Press .


**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch **Settings** on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.

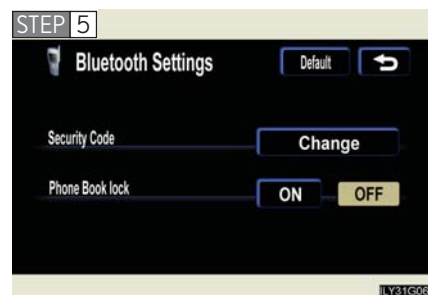

Touch **Change** in the "Security Code" section.

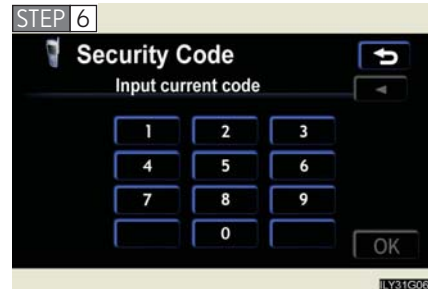

Input the current security code, and touch **OK**.


**STEP 7** Input the new security code, and touch **OK**.

**STEP 8** A confirmation message will appear. If everything is correct, touch **Yes**.


### 3-4. Using the hands-free system

#### n Enabling security


**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.


**STEP 4** Touch  on the "Settings" screen.

**STEP 5** Touch  in the "Phone Book Lock" section of the "Phone Book Lock" screen.


**STEP 6** Input the security code, and touch .


#### n Setting the security code to default


**STEP 1** Press .

 
**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.

**STEP 4** Touch  on the "Settings" screen.

**STEP 5** Touch  on the "Phone Book Lock" screen.

**STEP 6** Input the security code on the "Security Code" screen, then touch .

**STEP 7** A confirmation message will appear. If everything is correct, touch .

#### n **If the “Phone Book Lock” is set**

If the security code is input and the “Phone Book Lock” set, the following functions are locked.

- l Display of the phone book screen and transferring, registering, editing, deleting the phone book data.
- l Display of speed dial screen, registering, deleting the speed dial and speed dialing.
- l Display of the other party's name for calls being received or made.
- l Display of dialed numbers screen and received calls screen, deleting dialed numbers and received numbers.
- l Display of phone information screen.
- l Changing the security code.

The speed dial screen is not displayed while driving.

#### n **When changing the security code**

- l Be sure to choose a number difficult for strangers to guess.
- l Do not forget the security code. Even your Lexus dealer will be unable to disable the security. If you do forget the code, initialize all personal data. (→P. 187)




### 3-4. Using the hands-free system

#### Setting a Bluetooth® phone

##### n Selecting a Bluetooth® phone

If multiple Bluetooth® phones are registered, follow the below procedure to select the Bluetooth® phone to be used. You may only use one phone at a time.


**STEP 1** Press .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Telephone" screen.

 
 
**STEP 4** Touch .



Select the phone to be use, then touch .

If no phones are registered, "Empty" will be displayed.

If "Bluetooth\* connection successful" is displayed, registration was successful.


If another Bluetooth® phone is already connected, a confirmation message is displayed. Touch  or .

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.


### n Displaying Bluetooth® information


You can check the device address and device name.

STEP 1 Press .


STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

STEP 5 On the "Select Telephone" screen, select the desired phone and touch .




To change the device name, touch  in the "Device Name" section, and input the name on the "Name" screen (max. 20 characters).


### n To change the Bluetooth® settings

You can change the device name and passkey.

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

### 3-4. Using the hands-free system



To change the device name, touch **Change** in the "Device Name" section, and input the name on the "Name" screen (max. 20 characters).

To change the passkey, touch **Change** in the "Passkey" section, and input 4 - 8 digits on the "Passkey" screen.

#### n Setting the Bluetooth<sup>®</sup> settings to default

**STEP 1** Press **INFO**.

**STEP 2** Touch **Telephone** on the "Information" screen.

**STEP 3** Touch **Settings** on the "Telephone" screen.

**STEP 4** Touch **Bluetooth** on the "Settings" screen.


**STEP 5** Touch **Default** on the "Bluetooth\* Settings" screen.

**STEP 6** A confirmation message is displayed. If everything is correct, touch **Yes**.


\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


n To delete the Bluetooth® settings

STEP 1 Press .


STEP 2 Touch  on the "Information" screen.

 
 
STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

STEP 5 Touch  in the "Bluetooth\* Telephone" section of the "Bluetooth\* Settings" screen.

STEP 6 On the "Delete Telephone" screen, select the phone to delete.

To check the device address, touch .

STEP 7 If you touch , a confirmation message is displayed. If everything is correct, touch .

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.