

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle.

| Item | When to initialize | Reference |
|------------------------------|--|-----------|
| Maintenance data | After the maintenance is performed | P. 424 |
| Tire pressure warning system | <ul style="list-style-type: none">• When rotating the tires on vehicles with differing front and rear tire inflation pressures• When changing the tire size | P. 452 |