


## SECTION 2

### NAVIGATION SYSTEM: DESTINATION SEARCH

#### Navigation system: destination search

• Destination search	68
Selecting the search area	68
Destination search by Home	70
Destination search by Preset destinations	70
Destination search by "Address"	71
Destination search by "Point of Interest"	75
Destination search by "Destination Assist"	82
Destination search by "Previous Destinations"	82
Destination search by "Address Book"	83
Destination search by "Emergency"	83
Destination search by "Intersection & Freeway"	84
Destination search by "Map"	87
Destination search by "Coordinates"	88
Deleting set destinations	88
• Starting route guidance	89

## Destination search —

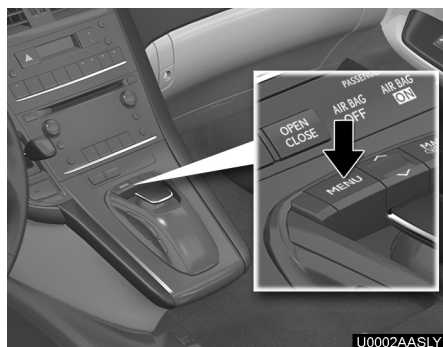

1. Push the “MENU” button on the Remote Touch.

Start



2. Select “Destination”.




You can use one of 11 different methods to search your destination. (See pages 70 through 88.)

### INFORMATION


*When searching the destination, the response to the screen button may be slow.*

## — Selecting the search area

Change the selected region in order to set a destination from a different region by using “Address”, “Point of Interest” or “Intersection & Freeway”.

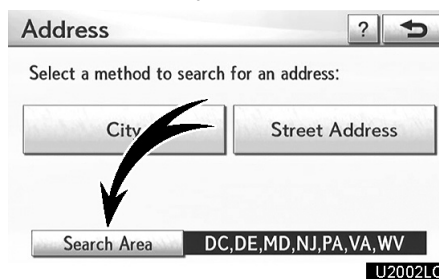

1. Select “Search Area” to display a map of the United States and Canada divided into 15 regions. (For map database information and updates, see “Map database information and updates” on page 394.)

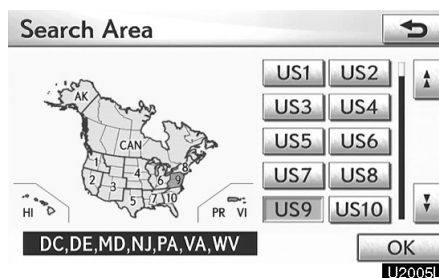

2. Select one of “US1” through “CAN” to select a region to search.
3. Select “OK” and the previous screen returns.

---

## NAVIGATION SYSTEM: DESTINATION SEARCH

---

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont
"US9"	Washington, D.C. Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii
"AK"	Alaska
"PR"	Puerto Rico
"VI"	US Virgin Islands
Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

## — Destination search by Home

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.



3. Select “Go Home”.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 89.)

If home has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set a “Home” address. (To register “Home”, see page 117.)

### INFORMATION

**Guidance starts from the current vehicle position to your home if “OK” is selected even while driving.**

## — Destination search by Preset destinations

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.



3. Select any of the preset destination buttons on the “Destination” screen.

The screen changes and displays the map location of the preset destination point and the route preference. (See “Starting route guidance” on page 89.)

If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set “Preset Destinations”. (To register “Preset Destinations”, see page 119.)

### INFORMATION

**Guidance starts from the current vehicle position to the preset destination point if “Go to Ⓞ” is selected even while driving.**

## — Destination search by “Address”


There are 2 ways to search a destination by address.

- (a) Search by city
- (b) Search by street address

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)

2. Select “Destination”.

3. Select “Address” on the “Destination” screen.

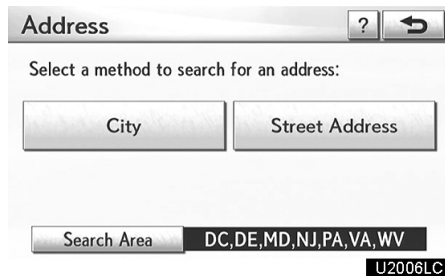


4. Select the button for the desired method.

(a) Selecting a city to search

1. Push the “MENU” button on the Remote Touch, then select “Destination”.


2. Select “Address” on the “Destination” screen.

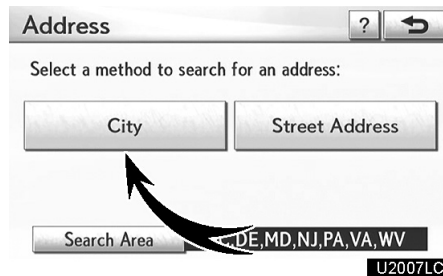

3. Select “City”.



4. Input a city name.

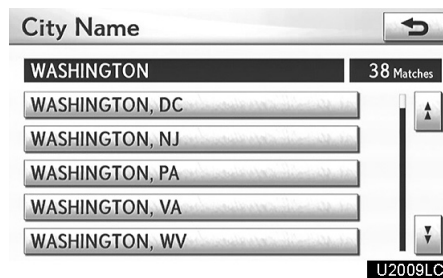

5. Select the button of the desired city name from the displayed list.

## NAVIGATION SYSTEM: DESTINATION SEARCH

Street Name

Enter a street name \*\*\*

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2010LC

**6. Input the street name and select “OK”.**

Street Name

CON 5 Matches

CONDON

CONGRESS

CONIFER

CONNECTICUT

CONSTITUTION

U2011LC

**7. When the desired street name is found, select the corresponding button.**

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

House Number

Enter a house number

N 1 2 3

W E 4 5 6

S 7 8 9

- 0 /

A-Z 0-9 Space OK

U2012LC

**8. Input a house number.**

Address

3 Matches

CONSTITUTION AVE NE, WASHINGT...

CONSTITUTION AVE NW, WASHINGT...

CONSTITUTION CT NW, WASHINGT...

U2013LC

If the same address exists in more than one city, the current screen changes to the address list screen.

## SELECTING FROM THE LAST 5 CITIES

City Name

Enter a city name \*\*\* Last 5 Cities

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2014LC

### 1. Select "Last 5 Cities".

Last 5 Cities

WASHINGTON, DC

BALTIMORE, MD

PHILADELPHIA, PA

NEW BERLIN, PA

BOSTON, VA

U2015LC

### 2. Select the button of the desired city name.

If the navigation system has never been used, this function will not be available.

The current screen changes to the screen for inputting a street name. (See "(a) Selecting a city to search" on page 71.)

## (b) Search by street address

1. Push the "MENU" button on the Remote Touch, then select "Destination".
2. Select "Address" on the "Destination" screen.

Address

Select a method to search for an address:

City Street Address

Search Area DC, MD, NJ, PA, VA, WV

U2016LC

### 3. Select "Street Address".

House Number

Enter a house number

N 1 2 3

W E 4 5 6

S 7 8 9

- 0 /

A-Z 0-9 Space OK

U2017LC

### 4. Select numbers directly on the screen to input a house number.

After inputting a house number, select "OK" to display the screen for inputting a street name.

Street Name

Enter a street name \*\*\*

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2018LC

### 5. Input the street name and select "OK".

## NAVIGATION SYSTEM: DESTINATION SEARCH

Street Name

CONN 100 Matches

CONN

CONNANT

CONNARD

CONNATSER

CONNAUGHT

U2019LC

6. When the desired street name is found, select the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

If the same address exists in more than one city, the current screen changes inputting the city name or to the address list screen.

City Name

Enter a city name 74 Matches

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2020LC

7. Input a city name.

City Name

B 5 Matches

BALTIMORE, MD

BEACH HAVEN, NJ

BROWNS MILLS, NJ

BURLINGTON, NJ

BURLINGTON TWP, NJ

U2021LC

8. Select the button of the desired city name from the displayed list.

### INFORMATION

*You can search for a street name using just the body.*

*Example : S WESTERN AVE*

*You can input “S WESTERN AVE”, “WESTERN AVE” or “WESTERN”*



## — Destination search by “Point of Interest”

There are 4 ways to search by Points of Interest.

- Search by name
- Search by category
- Search by phone #
- Search by eDestination

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)

2. Select “Destination”.

3. Select “Points of Interest” on the “Destination” screen.

4. Select the button for the desired method.

### (a) Search by “Name”

1. Push the “MENU” button on the Remote Touch, then select “Destination”.

2. Select “Point of Interest” on the “Destination” screen.

3. Select “Name” on the “Point of Interest” screen.

4. Input the name of the Point of Interest.


5. Select the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.

### INFORMATION

*To search for a facility name using multiple search words, put a space between each word.*

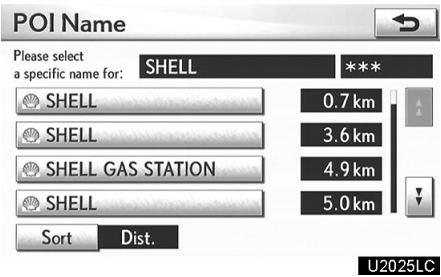


Select the button of the desired destination.

If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “● Selecting a city to search” on page 76 and “● Selecting from the categories” on page 77.)

**INFORMATION**

*The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 108.)*

● Selecting a city to search

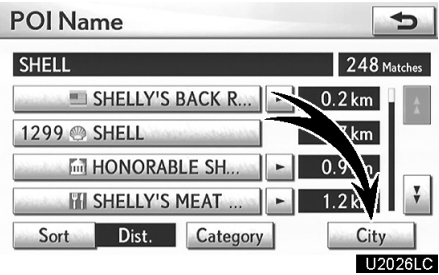

1. Select “City”.



2. Input the city name.




3. Select the button of the desired city name from the displayed list.


**INFORMATION**

*To cancel the city setting, select “Any City”.*

● **Selecting from the categories**

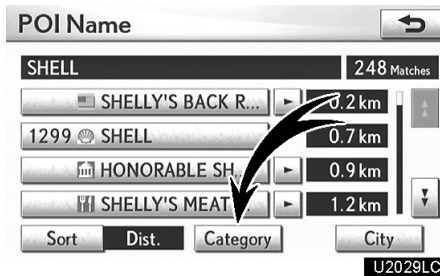


Select "Category".

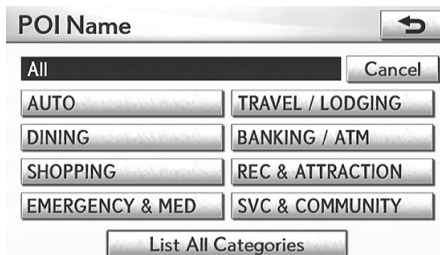

If the desired POI category is on the screen, select the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.

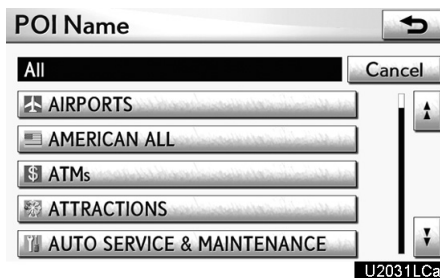

When the desired category is selected, the POI name list screen is displayed.

(b) **Search by "Category"**

The destination can be set by selecting the search point and the POI category.

1. Push the "MENU" button on the Remote Touch, then select "Destination".
2. Select "Point of Interest" on the "Destination" screen.
3. Select "Category" on the "Point of Interest" screen.



**Set the search point by the following method:**

1. Set the search point from near the vehicle's current position
2. Set the search point from along the chosen route
3. Set the search point from near a city center
4. Set the search point from near a destination

It is possible to display the names of POIs located within approximately 200 miles (320 km) from the selected search point.

**SETTING THE SEARCH POINT FROM NEAR HERE**

**Select “Near Here”.**

The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 80.)

**SETTING THE SEARCH POINT FROM ALONG MY ROUTE**

**Select “Along My Route”.**

The search point is set and the “POI Category” screen will be displayed. (See page 80.)

**SETTING THE SEARCH POINT FROM NEAR CITY CENTER**

**1. Select “Near City Center”.**

City Name

Enter a city name \*\*\* Last 5 Cities

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2033LC

**2. Input the city center name.**

City Name

NEW 108 Matches

NEW ALBANY, PA

NEW ALEXANDRIA, PA

NEW BALTIMORE, PA

NEW BEAVER, PA

NEW BERLIN, PA

U2034LC

**3. Select the button of the desired city center name.**

The search point is set and the “POI Category” screen will be displayed. (See page 80.)

## SELECTING FROM THE LAST 5 CITIES

### 1. Select "Near City Center".



### 2. Select "Last 5 Cities".




### 3. Select the button of the desired city center name.

The search point is set and the "POI Category" screen will be displayed. (See page 80.)

## SETTING THE SEARCH POINT FROM NEAR A DESTINATION

### 1. Select "Near a Destination".

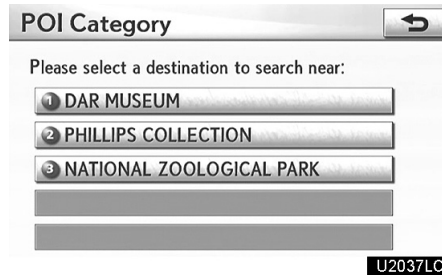

### 2. Select the button of the desired destination.

The search point is set and the "POI Name" screen will be displayed. (See page 80.)

## NAVIGATION SYSTEM: DESTINATION SEARCH

- **To search POIs near the search point**

When the search point is set, the "POI Category" screen will be displayed.



U2073LC


**Select the desired POI category.**

If the desired POI category is not on the screen, select "**List All Categories**" to list all POI categories.



U2039LC

**Select the desired POI category from the list.**

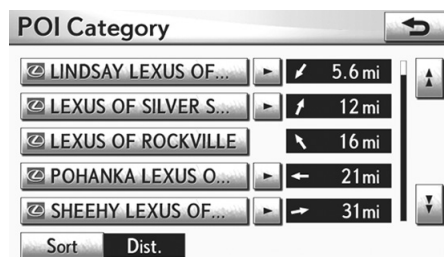

U2079LC

By selecting the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 89.)

**(c) Search by "Phone #"**

1. Push the "MENU" button on the Remote Touch, then select "Destination".

2. Select "Point of Interest" on the "Destination" screen.

3. Select "Phone #" on the "Point of Interest" screen.



U2042LC

4. Input a telephone number.

5. After inputting a telephone number, select "OK".

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 89.)

If there is more than one site with the same number, the following screen will be displayed.




U2043LC

### INFORMATION

- *If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.*
- *To set an address book entry as a destination using the phone number, the number must already be registered. (See page 127.)*

#### (d) Search by “eDestination”

1. Push the “MENU” button on the Remote Touch, then select “Destination”.
2. Select “Point of Interest” on the “Destination” screen.
3. Select “eDestination” on the “Point of Interest” screen.

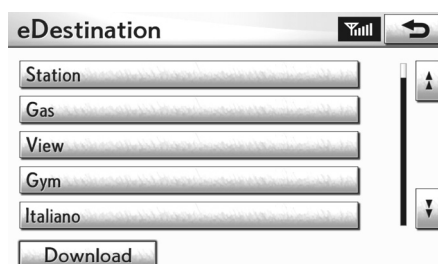


U2002LS

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. You can store up to 200 locations online to access and update at any time. Your locations can be organized into up to 20 folders. (See “eDestination” on page 164.)

### — Destination search by “Destination Assist”

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Destination Assist” on the “Destination” screen.

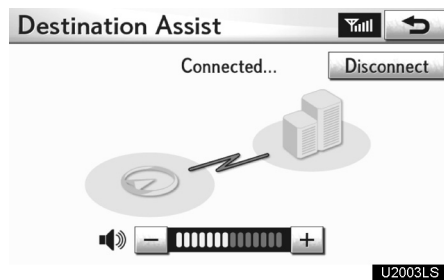

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI). After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system. (See “Destination Assist” on page 161.)

### — Destination search by “Previous Destinations”

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Previous Destinations” on the “Destination” screen.



The previous starting point and up to 100 previously set destinations are displayed on the screen.

4. Select the button of the desired destination.

**“Delete”:** To delete the previous destination. (To delete previous destinations, see page 133.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

### INFORMATION


*The list of previous destinations can also be deleted by selecting “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “— Deleting previous destinations” on page 133.)*



### — Destination search by “Address Book”

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Address Book” on the “Destination” screen.

A list of registered address book entries is displayed.

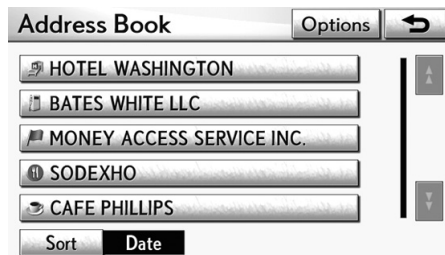

4. Select the button of the desired address book entry.

“Options”: To register or edit address book. (See page 122.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

### — Destination search by “Emergency”


1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Emergency” on the second page of the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and longitude at the top of the screen.



4. Select the desired emergency category.

The selected emergency category list is displayed.

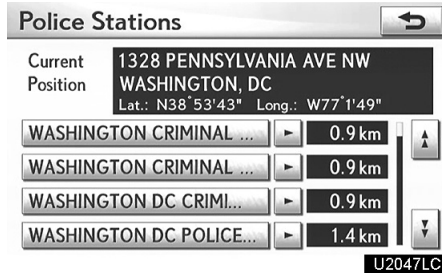

5. Select the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 89.)

### INFORMATION

*The navigation system does not guide in areas where route guidance is unavailable. (See page 393.)*

## — Destination search by "Intersection & Freeway"


There are 2 ways to search.

- (a) Search by intersection
- (b) Search by Freeway Entrance/Exit

1. Push the "MENU" button on the Remote Touch. (See "—Remote Touch" on page 5.)

2. Select "Destination".

3. Select "Intersection & Freeway" on the second page of the "Destination" screen.

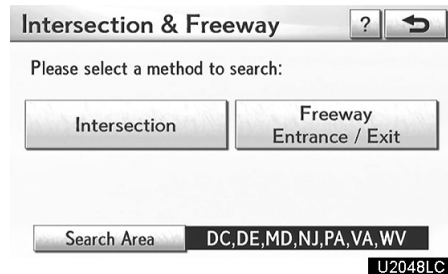

4. Select the button for the desired method.

(a) Search by "Intersection"

1. Push the "MENU" button on the Remote Touch, then select "Destination".
2. Select "Intersection & Freeway" on the second page of the "Destination" screen.
3. Select "Intersection" on the "Intersection & Freeway" screen.

First Street Name

Enter the first street name \*\*\*

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2049LC

4. Input the name of the first intersecting street which are located near the destination to be set.
5. Select "OK".

First Street Name

CAPITAL 5 Matches

CAPITAL

CAPITAL CEMENT

CAPITAL GATEWAY

CAPITAL ONE

PORT CAPITAL

U2050LC

6. Select the button of the desired item.

Second Street Name

Enter the second street name 24 Matches

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2068LC

7. Input the name of the second intersecting street.

Second Street Name

A 2 Matches

CRANBURY HALF ACRE


HALF ACRE

U2069LC

8. Select the button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 89.)

## NAVIGATION SYSTEM: DESTINATION SEARCH

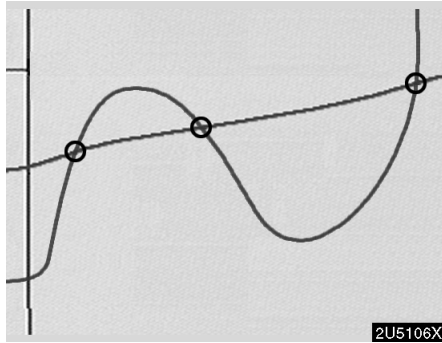

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

### (b) Search by “Freeway Entrance/Exit”

1. Push the “MENU” button on the Remote Touch, then select “Destination”.
2. Select “Intersection & Freeway” on the second page of the “Destination” screen.
3. Select “Freeway Entrance/Exit” on the “Intersection & Freeway” screen.

Freeway Name

Enter a freeway name 522 Matches

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2051LC

### 4. To input a freeway name.

Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

Freeway Name

I-95 5 Matches

I-95 EXPRESS LN N

I-95 EXPRESS LN S


I-95 HOV LN

I-95 N

I-95 S

U2052LC

5. Select the desired freeway by selecting the button.

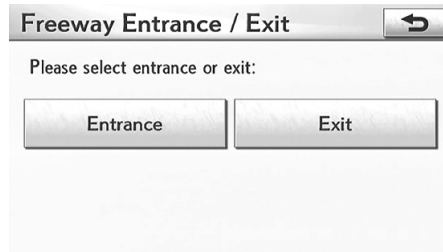

U2053LC

6. Either a freeway “Entrance” or “Exit” can be selected.



U2054LC

7. To input a freeway entrance or exit name.

8. Select “OK”.



U2055LC

9. Select the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

## — Destination search by “Map”

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)

2. Select “Destination”.

3. Select “Map” on the second page of the “Destination” screen.



U2056LC


The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 89.)

### INFORMATION

*Guidance starts if “OK” is selected even while driving. However, the cursor cannot be moved.*

## — Destination search by “Coordinates”

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Coordinates” on the second page of the “Destination” screen.

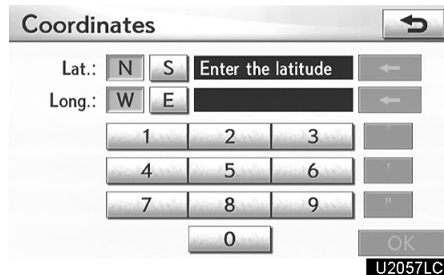

4. Input the latitude and the longitude.
5. When the input is finished, select “OK”.

By selecting the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 89.)

## — Deleting set destinations

A set destination can be deleted.

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Destination”.
3. Select “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



4. Select the destination for deletion.

“Select All”: To select all destinations on the list.

“Unselect All”: To unselect all of the selected destinations.

5. Select “Delete”.



A message appears to confirm the request to delete.

6. To delete the destination(s), select “Yes”.

If “Yes” is selected, the data cannot be recovered.

If “No” is selected, the previous screen will return.


The system searches for the guidance route again, and displays the entire route.

### INFORMATION

**Set destinations can also be deleted by selecting "Route". (See "— Deleting destinations" on page 101.)**


## Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

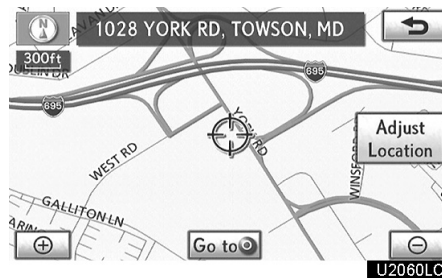

### 1. Scroll the map to the desired point.

**"Adjust Location":** To adjust the position in smaller increments.

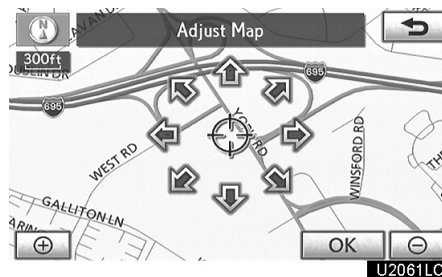

**When an arrow facing the desired point is selected, the map scrolls in that direction.**

The scroll stops when the selection of the arrow is released.

### 2. Select "Go to" button.

The system starts route search and displays recommended routes.


If there is already a set destination, **"Go to" button** and **"Add to Route"** are displayed.

**"Go to" button:** To delete the existing destinations and set a new one.

**"Add to Route":** To add a destination.

**"Info.":** If this button is displayed on the top of the screen, select it to view items such as name, address, and phone number.

## NAVIGATION SYSTEM: DESTINATION SEARCH

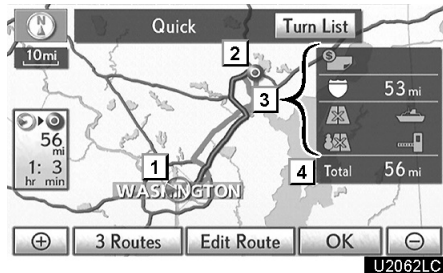

- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, select "OK".

"Turn List": The following screen displays the list of the roads up to the destination.

"3 Routes": To select the desired route from 3 possible routes. (See page 91.)

"Edit Route": To change the route. (See page 92.)

### INFORMATION


- Guidance can be paused or resumed. (See "— Pausing and resuming guidance" on page 107.)
- If "OK" is selected until a beep sounds, demo mode will start. Push the "MAP/VOICE" button on the Remote Touch to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.

### CAUTION


Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.



### 3 ROUTES SELECTION

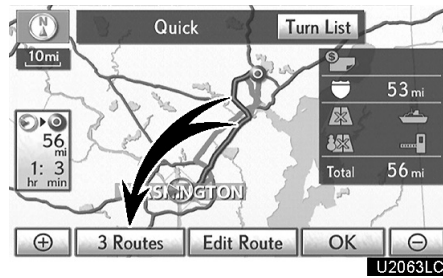

1. To select the desired route from 3 routes, select “3 Routes”.

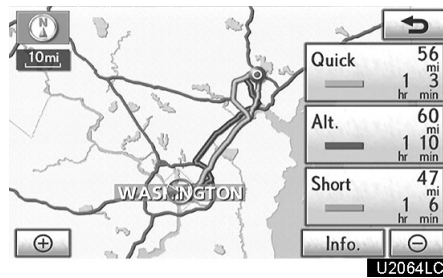

2. Select “Quick”, “Alt.” or “Short” to select the desired route.

“Quick”: Recommended route.  
This route is indicated by an orange line.

“Alt.”: Alternative route.  
This route is indicated by a purple line.

“Short”: A route by which you can reach the destination in the shortest distance.  
This route is indicated by a green line.

“Info.”: To display the following information about each of the 3 routes.

3 Routes Info.			
	Quick	Alt.	Short
1	1 h 3 min	1 h 10 min	1 h 6 min
2	56 miles	60 miles	47 miles
3			
4	53 miles	53 miles	32 miles
5			


U2065LC

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry

## NAVIGATION SYSTEM: DESTINATION SEARCH

### ● Edit route

You can again designate the conditions of the route to the destination.

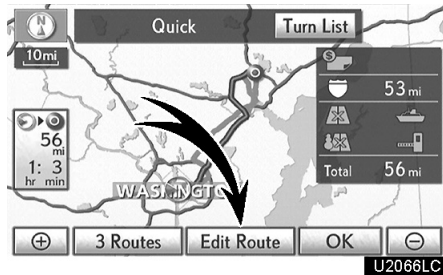

### INFORMATION

- *Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.*
- *If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.*

Select “Edit Route”.



“Add”: To add destinations. (See page 100.)

“Delete”: To delete destinations. (See page 101.)

“Reorder”: To reorder destinations. (See page 100.)

“Preferences”: A number of choices are provided on the conditions which the system uses to determine the route to the destination. (See page 105)