Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

ltem	Function	Default setting	Customized setting
Smart access system with	Operation signal (Emergency flashers) Operation signal (Buzzer)	On	Off
push-button start		On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
Wireless remote	Time elapsed before automatic door lock function is	60 seconds	30 seconds
control	activated if door is not opened after being unlocked	oo seconas	120 seconds
	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking function	On	Off
	Trunk unlocking operation	Push and hold	Push twice One short push
	Panic function	On	Off

Customizing Your Lexus

ltem	Function	Default setting	Customized setting
	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors	Off	On
	Shifting gears to P unlocks all doors	On	Off
	Shifting gears to position other than P locks all doors	On	Off
Steering wheel	Auto tilt-away function	On	Off
Power windows	Linked door key operation	Open and close	Off Open only Close only
	Wireless remote control linked operation	Off	Open only
	Linked door key operation	Open and close	Off Open only Close only
Moon roof	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	Open only
	Linked operation of components when wireless remote control is used	Slide only	Tilt only

ltem	Function	Default setting	Customized setting
	Light sensor sensitivity	Level 3	Level 1 to 5
Automatic light control system	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds 60 seconds 90 seconds
Lights	Daytime running light system (U.S.A. only)	On	Off
	Switching operation when the vehicle is stationary	On	Off
Windshield	Drip prevention function	On	Off
wipers and washer	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds
Intuitive parking	Back sensor operation display and buzzer	On	Off
assist	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.9 ft. (150 cm)	2.0 ft. (60 cm)
	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	On	Off
Illumination	Operation after the "ENGINE START STOP" switch is turned OFF	On	Off
	Front footwell lights	On	Off
	Shift lever light	On	Off
	Outer foot lights	On	Off
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	On	Off

М	emo	



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■U.S. OWNERS

- In the U.S. mainland or Canada: Lexus Roadside Assistance
 - 1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)
- ●In Hawaii· Servco Automotive Roadside Assistance/Customer Services 1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)
- ■CANADIAN OWNERS
- In Canada or the U.S. mainland: Lexus Roadside Assistance/Customer Service 1-800-26-LEXUS or 1-800-265-3987 (Toll-Free)

Please access our websites for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2012 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.