# 3-2. Using the audio system Audio system type

► With navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Without navigation system (type A)
 CD player with changer and AM/FM radio



21 V32AD248

Without navigation system (type B)
 CD player with changer and AM/FM radio

<b>•%</b> ####################################	
TRAF I 2 3 4 5 6 TEXT within NILLE A AR MUTE	
AM TM CD AUX C	
	CLY32AB304

Title	Page
Using the radio	P. 223
Using the CD player	P. 231
Playing back MP3 and WMA discs	P. 238
Operating an iPod	P. 246
Operating a USB memory	P. 254
Optimal use of the audio system	P. 263
Using the AUX port	P. 265
Using the steering wheel audio switches	P. 267

#### Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

# **CAUTION**

#### For vehicles sold in U.S.A. and Canada

- Part 15 of the FCC Rules
  - FCC Warning:

Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

- Laser products
  - Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

• This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

# A NOTICE

#### To prevent battery discharge

Do not leave the audio system on longer than necessary with the engine off.

#### To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.

# 3-2. Using the audio system Using the radio





# RDS (Radio Data System) (type A)

This feature allows your radio to receive station identification information and program information (classical, jazz, etc.) from radio stations which broadcast this information.

## Receiving RDS broadcasts





The radio seeks or scans the stations by the relevant program type.

# Displaying radio station names

Press TEXT .

## Displaying radio text messages

Press TEXT twice.

If "MSG" shows in the display, a text message will be displayed.

If the text continues past the end of the display, 
is displayed. Press and hold **Text** until you hear a beep.

# XM<sup>®</sup> Satellite Radio (type A)

# Receiving XM<sup>®</sup> Satellite Radio

STEP 1 Press .

The display changes as follows each time **see** is pressed. "SAT1"  $\rightarrow$  "SAT2"  $\rightarrow$  "SAT3"



STEP 2 Turn to select the desired channel in all categories or press



" $\wedge$ " or " $\vee$ " on to select the desired channel in the current

category.

# Setting XM<sup>®</sup> Satellite Radio channel presets

Select the desired channel. Press the button the channel is to be set to (from 🗾 to 🗾 ) until you hear a beep.

# Changing the channel category





#### When the battery is disconnected

Station presets are erased.

#### Reception sensitivity

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted inside the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

## ■XM<sup>®</sup> Satellite Radio

An XM<sup>®</sup> Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous states and 10 Canadian provinces.

XM<sup>®</sup> subscriptions

For detailed information about  $XM^{\textcircled{R}}$  Satellite Radio or to subscribe: U.S.A.—

Visit on the web at <u>www.xmradio.com</u> or call 1-877-515-3987.

Canada —

Visit on the web at <u>www.xmradio.ca</u> or call 1-877-515-3987.

Radio ID

You will need the radio ID when activating  $\mathsf{XM}^{\textcircled{R}}$  service or reporting a prob-

lem. Select "CH000" using

, and the receiver's 8-character ID number

will appear.

Satellite tuner

The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of  $\rm XM^{\textcircled{R}}$  Satellite Radio.

## ■ If the satellite radio does not operate normally

If a problem occurs with the XM<sup>®</sup> tuner, a message will appear on the display. Refer to the table below to identify the problem, and take the suggested corrective action.

"ANTENNA"	The $XM^{(\!R\!$
AINTEININA	There is a short-circuit in the antenna or the surround- ing antenna cable. See a Lexus certified dealer.
	You have not subscribed to the XM <sup>®</sup> Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM <sup>®</sup> Satellite Radio for subscrip- tion information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
"UNAUTH"	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CHOO1". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact $XM^{\textcircled{R}}$ Satellite Radio.
"NO SIGNAL"	The XM <sup>®</sup> signal is too weak at the current location. Wait until your vehicle reaches a location with a stron- ger signal.
"LOADING"	The unit is acquiring audio or program information. Wait until the unit has received the information.
"OFF AIR"	The channel you selected is not broadcasting any pro- gramming. Select another channel.
""	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.

# "CHUNAVL"

The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM<sup>®</sup> Listener Care Center at 1-877-515-3987.

### Certifications for the radio tuner

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by trying one or more of the following:

- Reorienting or relocate the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the dealer or an experienced radio/TV technician for help.

# 3-2. Using the audio system Using the CD player





## Loading CDs

## Loading a CD

STEP 1 Push TOAD

"WAIT" is shown on the display.

STEP 2 Insert a CD when the indicator on the slot turns from amber to green.

The display changes from "WAIT" to "LOAD".

## Loading multiple CDs

STEP 1 Press and hold **man** until you hear a beep.

"WAIT" is shown on the display.

STEP 2 Insert a CD when the indicator on the slot turns from amber to green.

The display changes from "WAIT" to "LOAD".

The indicator on the slot turns to amber when the CD is inserted.

STEP 3 Insert the next CD when the indicator on the slot turns from amber to green again.

Repeat the procedure for the remaining CDs.

To stop the operation, press or .

## **Ejecting CDs**

## Ejecting a CD



## To select the CD to be ejected,



The number of the CD selected is shown on the display.

STEP 2 Press and remove the CD.

## Ejecting all the CDs

Press and hold **man** until you hear a beep, and then remove the CDs.

## Selecting, fast-forwarding, reversing and scanning tracks

## Selecting a track

Press " $\land$ " to move up and " $\lor$ " to move down using

desired track number is displayed.

To fast forward or reverse, press and hold " $\land$ " or " $\lor$ " on until you hear a beep.

## Scanning a CD (type A only)

STEP 1 Press SCAN .

The first ten seconds of each track will be played.

STEP 2 Press again when the desired track is reached.

until the

SEEK

Selecting a CD
To select a CD to play
To select the desired CD, press "^" or " $\lor$ " on $\bigcirc$ or $\bigcirc$ or $\bigcirc$ .
To scan loaded CDs (type A only)
STEP 1 Press and hold with you hear a beep.
The first ten seconds of the first track on each CD will be played.
STEP 2 Press again when the desired CD is reached.
Random playback
Current CD
Press (RAND).
Press and hold (RAND) until you hear a beep.
Repeat play
To repeat a track
Press [2] (RPT).
To repeat all of the tracks on a CD
Press and hold (RPT) until you hear a beep.
Playing and pausing tracks
To play or pause a track, press
Switching the display
Press TEXT .

Each time is pressed, the display changes in the order of Track no./ Elapsed time  $\rightarrow$  CD title  $\rightarrow$  Track title.

## Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **text** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

## Canceling random, repeat and scan playback

Press (RAND), (RPT), again.

## When "LOAD", "ERROR" or "WAIT" is shown on the display

"LOAD": This indicates that the CD player has completed loading the CD.

- "ERROR": This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.
- "WAIT": Operation is stopped due to a high temperature inside the player. Wait for a while and then press and or a contact your Lexus dealer if the CD still cannot be played back.

## Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not play correctly.

#### CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected.

If CDs are left inside the CD player or in the ejected position for extended periods

CDs may be damaged and may not play properly.

#### Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

# **MOTICE**

#### CDs and adapters that cannot be used

Do not use the following types of CDs, 3 in. (8 cm) CD adapters or Dual Disc. Doing so may damage the CD player and/or the CD insert/eject function.



# 🕂 NOTICE



CDs with a transparent or translucent recording area.

 CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off.

## CD player precautions

Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- Do not insert anything other than CDs into the CD slot.
- Do not apply oil to the CD player.
- Store CDs away from direct sunlight.
- Never try to disassemble any part of the CD player.



• Do not insert more than one CD at a time.

# 3-2. Using the audio system Playing back MP3 and WMA discs



→P. 232, 233

## Selecting MP3 and WMA discs

<u> </u>	Ρ	22	Λ
-	۰.	20	т

## Selecting a folder

Select	ting f	olde	rs o	nea	at a	a time	e					
Press	6	$(\wedge)$	or	5	(	∨)to	select	the c	lesir	ed	folder	:
	_											

Selecting the desired folder by cueing the first file of each folder (type A only)

Press and hold	SCAN	until you hear a beep. When the desired folder is
reached, press	SCAN	once again.

Returning to the first folder

Press and hold  $\blacksquare$  ( $\lor$ ) until you hear a beep.

#### Fast-forwarding and reversing files

т	r.r.		1	1 1	1 "	"		""	
lo '	fast-forward	or reverse,	press and	hold	b	Λ	or	$\vee$	or



hear a beep.

Interior teatures



## Switching the display

## Press TEXT

Each time first is pressed, the display changes in the order of Folder no./ File no./Elapsed time  $\rightarrow$  Folder name  $\rightarrow$  File name  $\rightarrow$  Album title (MP3 only)  $\rightarrow$  Track title  $\rightarrow$  Artist name.

## Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

#### Canceling random, repeat and scan playback

Press (RAND), (RPT), again.

## When "LOAD", "ERROR", "WAIT" or "NO MUSIC" is shown on the display

"LOAD": This indicates that the CD player has completed loading the CD.

- "ERROR": This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.
- "WAIT": Operation is stopped due to a high temperature inside the player. Wait for a while and then press end or end . Contact your Lexus dealer if the CD still cannot be played back.

"NO MUSIC": This indicates that the MP3/WMA file is not included in the CD.

#### Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



#### CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

#### If CDs are left inside the CD player or in the ejected position for extended periods

CDs may be damaged and may not play properly.

#### Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

#### MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

#### MP3 file compatibility

- Compatible standards MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies MPEG1LAYER3: 32, 44.1, 48 (kHz) MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR) MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps) MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- · Compatible channel modes: stereo, joint stereo, dual channel and monaural

### WMA file compatibility

- Compatible standards WMA Ver. 7, 8, 9
- Compatible sampling frequencies 32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
   Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)
   Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

#### Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

#### Compatible disc formats

The following disc formats can be used.

 Disc formats: CD-ROM Mode 1 and Mode 2 CD-ROM XA Mode 2, Form 1 and Form 2

• File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet) MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

### File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

#### Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

#### ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

#### MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

#### Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

#### Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

# **MOTICE**

CDs and adapters that cannot be used

→P. 236

CD player precautions

→P. 237

## Connecting an iPod enables you to enjoy music from the vehicle speakers.

# Connecting an iPod



Open the cover and connect the portable audio device.

Turn on the power of the iPod if it is not turned on.







## Selecting a play mode

STEP 1 Press to select iPod menu mode.

STEP 2 Pressing or changes the play mode in the following order: "PLAYLISTS"→"ARTISTS"→"ALBUMS"→"SONGS"→ "PODCASTS"→"GENRES"→"COMPOSERS"→ "AUDIOBOOKS"

STEP 3 Press to select the desired play mode.

# Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
"PLAYLISTS"	Playlists select	Songs select	-	-
"ARTISTS"	Artists select	Albums select	Songs select	-
"ALBUMS"	Albums select	Songs select	-	-
"SONGS"	Songs select	-	-	-
"PODCASTS"	Albums select	Songs select	-	-
"GENRES"	Genre select	Artists select	Albums select	Songs select
"COMPOSERS"	Composers select	Albums select	Songs select	-
"AUDIOBOOKS"	Songs select	-	-	-

## Selecting a list

STEP 1 Press 💽 or 🔼 to display the first selection list.

STEP 2 Press to select the desired item.

Pressing **Examples** to the second selection list.

STEP 3 Repeat the same procedure to select the desired item.

To return to the previous selection list, select "GO BACK" or press

( 🕤 ).

3



## Adjusting sound quality and volume balance

STEP 1 Press to enter iPod menu mode.

STEP 2 Pressing changes sound modes. ( $\rightarrow$ P. 264)

#### About iPod

- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

#### iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.

#### iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.

For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

### Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **TEXT** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

## Canceling shuffle and repeat playback

Press (RAND) or (RPT) again.

#### Error messages

"ERROR": This indicates a problem in the iPod or its connection.

"NO MUSIC": This indicates that there is no music data in the iPod.

- "EMPTY": This indicates that some available songs are not found in a selected playlist.
- "UPDATE": This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

## Compatible models

Model	Generation	Software version
iPod	5th generation	Ver. 1.2.0 or higher
	1st generation	Ver. 1.3.0 or higher
iPod nano	2nd generation	Ver. 1.1.2 or higher
	3rd generation	Ver. 1.0.0 or higher
iPod touch	1st generation	Ver. 1.1.0 or higher
iPod classic	1st generation	Ver. 1.0.0 or higher

Depending on differences between models or software version etc., some models listed above might be incompatible with this system.

iPod 4th generation and earlier models are not compatible with this system. iPhone, iPod mini, iPod shuffle and iPod photo are not compatible with this system.

Items related to standards and limitations are as follows:

- Maximum number of lists in device: 9999
- Maximum number of songs in device: 65535
- Maximum number of songs per list: 65535

# 

#### Caution while driving

Do not connect iPod or operate the controls.

# 🔨 NOTICE

#### To prevent damage to iPod

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
- Do not insert foreign objects into the port as this may damage the iPod or its terminal.

# 3-2. Using the audio system Operating a USB memory

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

## Connecting a USB memory



Open the cover and connect the portable audio device.

Turn on the power of the USB memory if it is not turned on.






## Selecting a folder





3

## Switching the display

Press TEXT

Each time **TEXT** is pressed, the display changes in the order of Elapsed time  $\rightarrow$  Folder name  $\rightarrow$  File name  $\rightarrow$  Album title (MP3 only) $\rightarrow$  Track title  $\rightarrow$  Artist name.

#### USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

#### Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding **text** until you hear a beep will display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

#### Canceling random, repeat and scan playback

Press 🚺 (RAND), 🔽 (RPT), 🔜 again.

#### Error messages

"ERROR": This indicates a problem in the USB memory or its connection.

"NO MUSIC": This indicates that no MP3/WMA files are included in the USB memory.

## USB memory

Compatible devices

USB memory that can be used for MP3 and WMA playback

Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 999 (including the root)
- Maximum number of files in a device: 65025
- Maximum number of files per folder: 255
- MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

- MP3 file compatibility
  - Compatible standards MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
  - Compatible sampling frequencies MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz) MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz) MPEG2.5: 8, 11.025, 12 (kHz)
  - Compatible bit rates (compatible with VBR) MPEG1 AUDIO LAYERII, III: 32-320 (kbps) MPEG2 AUDIO LAYERII, III: 32-160 (kbps) MPEG2.5: 32-160 (kbps)

· Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
  - Compatible standards WMA Ver. 9
  - Compatible sampling frequencies HIGH PROFILE 32, 44.1, 48 (kHz)
  - Compatible bit rates HIGH PROFILE 32-320 (kbps, VBR)

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

File names

## MP3 and WMA playback

- When a USB memory containing MP3 or WMA files is connected, all files in the USB memory are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.

Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

- Playback
  - To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
  - There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
  - Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

## **CAUTION**

## Caution while driving

Do not connect USB memory or operate the controls.

## **NOTICE**

#### To prevent damage to USB memory

- Do not leave USB memory in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

# 3-2. Using the audio system Optimal use of the audio system



Adjusting the Automatic Sound Levelizer (ASL)		
Press asl .		
The ASL switches between on and off modes each time	ASL	is
pressed.		

ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.

## Adjusting sound quality and volume balance

## Changing sound quality modes

Press MINK .

Pressing changes the sound mode in the following order:

"BAS"→"MID"→"TRE"→"FAD"→"BAL"

## Adjusting sound quality

Press 💽 or 💽 to adjust the level.

Mode displayed	Sound qual- ity mode	Level	Press ∨	Press ∧
"BAS"*	Bass	-5 to 5		
"MID"*	Mid-range	-5 to 5	Low	High
"TRE"*	Treble	-5 to 5		
"FAD"	Front/rear volume balance	F7 to R7	Shifts to rear	Shifts to front
"BAL"	Left/right volume balance	L7 to R7	Shifts to left	Shifts to right

\*: The sound quality level is adjusted individually in each audio mode.

# 3-2. Using the audio system Using the AUX port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Open the cover and connect the portable audio device.







## Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

#### When using a portable audio device connected to the power outlet

Noise may occur during playback. Use the power source of the portable audio device.

# 3-2. Using the audio system Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

Operation may differ depending on the type of audio system or navigation system. For details, refer to the manual provided with the audio system or navigation system.



- Turns the power on, selects an audio source
- Increases/decreases volume
- Radio mode: Selects a radio station
  - CD mode: Selects a track, file (MP3 and WMA) and disc
  - Bluetooth<sup>®</sup> audio mode: Selects a track and album
  - iPod mode: Selects a song
  - USB memory mode: Selects a file and folder

## Turning on the power

Press MODE when the audio system is turned off.

The audio system can be turned off by holding MODE down until you hear a beep.

## Changing the audio source

Press MODE when the audio system is turned on. The audio source changes as follows each time MODE is pressed. If no discs are inserted in the player, or if the external device is not connected, that mode will be skipped.

Type A: FM1 $\rightarrow$ FM2 $\rightarrow$ SAT1 $\rightarrow$ SAT2 $\rightarrow$ SAT3 $\rightarrow$ CD player $\rightarrow$ Bluetooth<sup>®</sup>audio $\rightarrow$ AUX $\rightarrow$ iPod or USB memory $\rightarrow$ AM Type B: FM1 $\rightarrow$ FM2 $\rightarrow$ CD player $\rightarrow$ Bluetooth<sup>®</sup>audio $\rightarrow$ AUX $\rightarrow$ 

iPod or USB memory $\rightarrow AM$ 

## Adjusting the volume

Press "+" on **for and** to increase the volume and "-" to decrease the volume.

Hold down for the volume increasing or decreasing the volume.

## Selecting a radio station

STEP 1 Press MODE to select radio mode.

STEP 2 Press " $\land$ " or " $\lor$ " on  $\bigtriangledown$  to select a radio station.

To scan for receivable stations, press and hold with you hear a beep.

## Selecting a track/file or song

STEP 1 Press MODE to select CD, Bluetooth<sup>®</sup> audio, iPod or USB memory mode.

STEP 2 Press " $\wedge$ " or " $\vee$ " on  $\bigcirc$  to select the desired track/file or song.

