 
Keys





- Electronic keys
 - Operating the smart access system with push-button start (→P. 33)
 - Operating the wireless remote control function (→P. 45)
- Mechanical keys
- Key number plate
- Card key without the wireless remote control function (if equipped)



- 1 Electronic key
 - Operating the smart access system with push-button start $(\rightarrow P. 33)$
- 2 Mechanical key

Using the mechanical key



Take out the mechanical key.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. $(\rightarrow P. 505)$

■ Card key

- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the key does not operate properly.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc. If it is difficult to pull it out, use a coin etc.



 To store the mechanical key in the card key, insert it inside while pressing the lock release button.



• If the battery was removed, reinstall the battery with the positive terminal facing the Lexus emblem.

- The card key is not waterproof.
- When required to leave a key to the vehicle with a parking attendant

Turn the trunk opener main switch off and lock the glove box as circumstances demand. $(\rightarrow P. 52, 330)$

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ Key number plate

Keep the plate in a safe place, not in the vehicle. In the event that a mechanical key is lost, a new key can be made at your Lexus dealer using the key number plate. $(\rightarrow P. 504)$

■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc, ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

⚠ NOTICE

■ To prevent key damage

Observe the following.

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for a long period of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the electronic keys.
- Do not attach stickers that contain materials that block radio waves, such as metallic materials, to the key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems, glass top ranges, or medical electrical equipment, such as low-frequency therapy equipment.

Precautions for handling the card keys

- Do not apply excess force when inserting the mechanical key to the card key.
 Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode and the card key may stop working.
 - If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp it and pull.) If the battery is corroded, have your Lexus dealer replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover.
 Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery.
 Installing the battery in the wrong direction may cause the battery to deplete rapidly.

↑ NOTICE

- The surface of the card key may be damaged, or its coating may peel off in the following situations.
 - The card key is carried together with hard objects, such as coins or keys.
 - The card key is scraped with a sharp object, such as a tip of mechanical pencil.
 - The surface of the card key is wiped with thinners or benzene.

■ Carrying the electronic key on your person

When carrying the key, maintain a distance of at least 3.9 in. (10 cm) from any of the following electrical appliances with their power on. If a distance of 3.9 in. (10 cm) is not kept, radio waves may be interfered with, causing the key to not function correctly.

- A portable radio, cellular phone, cordless phone or other wireless communication device
- Personal computers or personal digital assistants (PDAs)
- Digital audio players
- Portable game systems