# 1-4. Opening and closing the windows and moon roof **Power windows**

The power windows can be opened and closed using the following switches.



- Closing
- One-touch closing\*
- 3 Opening
- 4 One-touch opening\*
- \*: Pushing the switch in the opposite direction will stop window travel partway.

# Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

# n The power windows can be operated when

The "ENGINE START STOP" switch is in IGNITION ON mode

#### n Door lock linked window operation

- 1 The power windows can be opened and closed using the mechanical key.  $(\rightarrow P.417)$
- 1 The power windows can be opened using the wireless remote control.  $(\rightarrow P. 36)$

# n Operating the power windows after turning the "ENGINE START STOP" switch OFF

The power windows can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. They cannot, however, be operated once either front door is opened.

#### n Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

#### n Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed. (Customizable features  $\rightarrow$  P. 461)

# **CAUTION**

# n Closing the windows

Observe the following precautions.

Failing to do so may result in death or serious injury.

- 1 Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- 1 Do not allow children to operate the power windows. Closing a power window on someone can cause serious injury, and in some instances, even death.


# n Jam protection function

- 1 Never try jamming any part of your body to activate the jam protection function intentionally.
- 1 The jam protection function may not work if something gets caught just before the window fully closes.

# 1-4. Opening and closing the windows and moon roof Moon roof\*

Use the overhead switches to open, close, and tilt the moon roof up and down.

# n Opening and closing

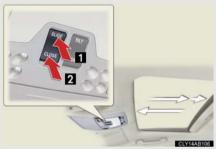


# 2 Close

Push the switch in the either direction to stop the moon roof partway.

The moon roof stops slightly

before the fully opened position. Push the switch again to fully

# n Tilting up and down

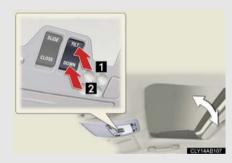

# 1 Tilt up

1 Open

open.

# Tilt down

Push the switch in the either side to stop the moon roof partway.

# n The moon roof can be operated when

The "ENGINE START STOP" switch is in IGNITION ON mode.

#### n Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument panel when the "ENGINE START STOP" switch is turned OFF and the driver's door is opened with the moon roof open.

#### n Linked door lock moon roof operation

- 1 The moon roof can be opened and closed using the mechanical key.  $(\rightarrow P.417)$
- 1 The moon roof can be opened using the wireless remote control.  $(\rightarrow P. 36)$
- 1 The moon roof can be closed using the entry function.  $(\rightarrow P. 25)$

# $_{ m II}$ Operating the moon roof after turning the "ENGINE START STOP" switch OFF

The moon roof can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is switched to ACCESSORY mode or turned OFF. It cannot, however, be operated once either front door is opened.

# n Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

# ${\it n}\$ When the moon roof does not close normally

Pressing and holding the "CLOSE" switch will close the moon roof.

#### n To reduce moon roof wind noise

Drive with the moon roof opened to slightly before the fully open position as driving with the moon roof opened fully will cause wind noise.

#### n Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

# n Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed. (Customizable features  $\rightarrow$  P. 461)

# **A** CAUTION

# n Opening the moon roof

Observe the following precautions.

Failing to do so may cause death or serious injury.

- 1 Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- 1 Do not sit on top of the moon roof.

# n Closing the moon roof

Observe the following precautions.

Failing to do so may result in death or serious injury.

- 1 Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated.
- 1 Do not allow children to operate the moon roof.
  Closing the moon roof on someone can cause death or serious injury.

# n Jam protection function

- 1 Never try jamming any part of your body to activate the jam protection function intentionally.
- 1 The jam protection function may not work if something gets caught just before the moon roof fully closes.

1-4. Opening and closing the windows and moon roof