
Door Locks

$n \ \ \text{Locking the vehicle from inside}$

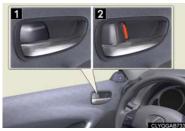

- ▶ Inside lock button
- 1 Locks
- 2 Unlocks



- ► Door lock switch
 Operates all door locks.
- 1 Locks
- 2 Unlocks

$n \ \ \text{Locking the vehicle from outside}$

Using the entry function or wireless remote control $(\rightarrow P.7, 8)$

$n \ \ \mathsf{Rear} \ \mathsf{door} \ \mathsf{child}\text{-}\mathsf{protector} \ \mathsf{lock}$



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch


The window lock switch disables the operation of passenger window switches.

ting Before Dr

When Driving

Moon Roof (If Equipped)

n Opening and closing

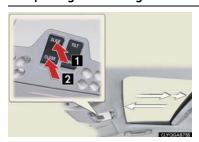

1 Opens


The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

Opening and Closi

$n \ \, \text{Tilt up and down}$

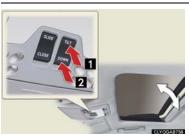

- 1 Tilts up
- 2 Tilts down

What to do if ...

Your Lexus

54

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counterclockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Hood



1 Pull the hood release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.



Trunk

n Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

1 2 To disable the trunk opener, turn OFF the main switch in the glove box.

1 ON

2 OFF

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

$n \ \ \text{Entry function and wireless remote control}$

→P.7, 8

