



## Keys

### n Electronic key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Starts and stops the engine

### n Mechanical key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box


The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull.

### n Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm

Use the alarm to attract attention to the vehicle in order to help deter break-ins.  
(To stop the alarm, push any button on the wireless remote control.)

The wireless remote control can also be used to open the windows and moon roof.  
To do so, simply press and hold  button.

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 17.

### Entering the vehicle



To unlock the vehicle, simply grasp either of the front door handles.

### Exiting the vehicle



To lock the vehicle, press the lock button on either of the front door handles.

### Opening the trunk



To open the trunk, press the trunk release button.

For details on what to do when the electronic key battery becomes discharged, see page 48.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.



### ► Engine immobilizer system

The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### ► Alarm

The alarm detects forcible entry and attracts attention to the vehicle by sounding the horn and flashing the exterior lights in the event that an attempt is made to forcibly open the doors, trunk or hood that have been locked.

When all the doors are locked, the security indicator light comes on to indicate that the alarm is in its preparation state. The indicator light begins to flash after approximately 30 seconds to indicate that the system is armed.



### ► Steering lock

The steering wheel locks when the engine switch is in OFF mode.

To stop the alarm, start the engine or unlock the doors or trunk using the electronic key or the wireless remote control. (The alarm will stop after several seconds.)