

### 3-4. Using the hands-free phone system (for cellular phones)

## Hands-free system for cellular phones

The hands-free system is a function that allows you to use your cellular phone without touching it.

This system supports Bluetooth<sup>®</sup> cellular phones. Bluetooth<sup>®</sup> is a wireless data system that allows the cellular phone to wirelessly connect to the hands-free system and make/receive calls.

#### Vehicles with a navigation system:

Refer to the "Navigation System Owner's Manual".

#### Vehicles without a navigation system:

Title	Page
Using the hands-free system	P. 401
Making a phone call	P. 410
Setting a cellular phone	P. 415
Security and system setup	P. 422
Using the phone book	P. 427

### 3-4. Using the hands-free phone system (for cellular phones)

---

#### ■ Conditions under which the system will not operate

- If using a cellular phone that does not support Bluetooth®
- If the cellular phone is switched off
- If you are outside service range
- If the cellular phone is not connected
- If the cellular phone's battery is low
- If the cellular phone is behind the seat or in the glove box or console box
- If metal is covering or touching the phone

#### ■ Signal status

This display may not correspond exactly with the cellular phone itself.

#### ■ When using the hands-free system

- The audio system and voice guidance are muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the incoming call volume is overly loud, an echo may be heard.
- Try to face toward the microphone as much as possible when speaking.
- In the following circumstances, it may be difficult to hear the other party:
  - When driving on unpaved roads
  - When driving at high speeds
  - When a window is open
  - When the air conditioning is blowing directly on the microphone
  - When the air conditioning is set to high

#### ■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P. 426)

### 3-4. Using the hands-free phone system (for cellular phones)

#### ■ For detailed information about Handsfree Phone System

For assistance with pairing and operating your cell phone, go to the website [www.lexus.letstalk.com](http://www.lexus.letstalk.com).

#### ■ About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

#### ■ Compatible models

Compatible with HFP (Hands Free Profile) Ver. 1.5 and OPP (Object Push Profile) Ver. 1.1.

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone. If your cellular phone supports OPP alone, you cannot use the Bluetooth® phone.

#### ■ Certification for the hands-free system

FCC ID: ACJ932C5ZZZ035  
IC ID: 216J-C5ZZZ035  
MADE IN JAPAN

FCC ID: AJDK018  
IC ID: 775E-K018  
MADE IN JAPAN

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

### 3-4. Using the hands-free phone system (for cellular phones)

#### CAUTION

##### ■ FCC WARNING

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

##### ■ Caution while driving

Do not use a cellular phone or connect the Bluetooth<sup>®</sup> phone.

#### NOTICE

##### ■ To prevent damage to cellular phones

Do not leave cellular phones in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the phone.

### 3-4. Using the hands-free phone system (for cellular phones)

## Using the hands-free system (for cellular phones)

#### ■ Audio unit

##### Type A



- 1 Display  
A message, name, phone number, etc. is displayed.

Lower-case characters and special characters cannot be displayed.

- 2 Displays information that is too long to be displayed at one time on the display (press and hold)

- 3 Selects speed dials

- 4 Selects items such as menu and number  
Turn: Selects an item  
Press: Inputs the selected item

- 5 Bluetooth® connection condition

If "BT" is not displayed, the hands-free phone system cannot be used.

- 6 Reception level

##### Type B



##### Type C




3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### ■ Steering wheel switches

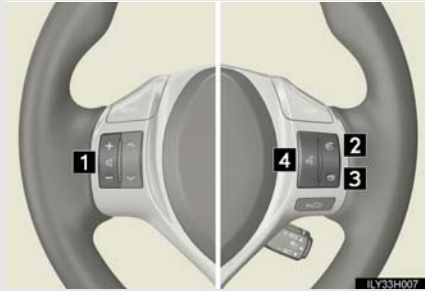

##### 1 Volume

The voice guidance volume cannot be adjusted using this button.

##### 2 Off-hook switch

Turns the hands-free system on/starts a call

##### 3 On-hook switch

Turns the hands-free system off/ends a call/refuses a call

##### 4 Talk switch

Turns the voice command system on (press)/turns the voice command system off (press and hold)

#### ■ Microphone



### 3-4. Using the hands-free phone system (for cellular phones)

#### Operating the system using voice commands

By following voice guidance instructions output from the speaker, voice commands enable the operation of the hands-free phone system without the need to check the display or operate



#### ■ Operation procedure when using voice commands

Press the talk switch and follow voice guidance instructions.

#### ■ Auxiliary commands when using voice commands

The following auxiliary commands can be used when operating the system using a voice command:

- “Cancel”: Exits the hands-free phone system
- “Repeat”: Repeats the previous voice guidance instruction
- “Go back”: Returns to the previous procedure
- “Help”: Reads aloud the function summary if a help comment is registered for the selected function

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Using the hands-free phone system for the first time

Before using the hands-free phone system, it is necessary to register a cellular phone in the system. The system will enter phone registration mode automatically when starting the system with no cellular phone registered. Follow the procedure below to register (pair) a cellular phone:


**STEP 1** Press the off-hook switch or the talk switch.

The introductory guidance and phone name registration instructions are heard.

**STEP 2** Select "Pair Phone" using a voice command or




**STEP 3** Register a phone name by either of the following methods:

- a. Select "Record Name" using , and say the name to be registered.
- b. Press the talk switch and say the name to be registered.

A voice guidance instruction to confirm the input is heard.



### 3-4. Using the hands-free phone system (for cellular phones)

**STEP 4** Select "Confirm" using a voice command or .


A passkey is displayed and heard, and a voice guidance instruction for inputting the passkey into the cellular phone is heard.

**STEP 5** Input the passkey into the cellular phone.

Refer to the manual that comes with the cellular phone for the operation of the phone.

Guidance for registration completion is heard.

If the cellular phone has a Bluetooth® audio player, the audio player can be registered at the same time. A voice guidance instruction to register a Bluetooth® audio player is heard.

**STEP 6** Select "Yes" or "No" using a voice command or  (Bluetooth® audio player → P. 373).

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Menu list of the hands-free phone system

##### ■ Normal operation

First menu	Second menu	Third menu	Operation detail
"Callback"	-	-	Dialing a number stored in the incoming call history memory
"Redial"	-	-	Dialing a number stored in the outgoing call history memory
"Phonebook"	"Add Entry"	-	Adding a new phone number
	"Change Name"	-	Changing the registered name in the phone book
	"Delete Entry"	-	Deleting the registered data
	"Del Spd Dial"	-	Deleting speed dials
	"List Names"	-	Listing the registered data
	"Speed Dial"	-	Setting speed dials

### 3-4. Using the hands-free phone system (for cellular phones)

First menu	Second menu	Third menu	Operation detail
"Setup"	"Security"	"Set PIN"	Setting a PIN code
		"Phbk Lock"	Locking the phone book
		"Phbk Unlock"	Unlocking the phone book
	"Phone Setup"	"Pair Phone"	Registering the cellular phone to be used
		"Connect"	Selecting a cellular phone to be used
		"Change Name"	Changing a registered name of a cellular phone
		"List Phones"	Listing the registered cellular phones
		"Set Passkey"	Changing the passkey
		"Delete Phone"	Deleting a registered cellular phone
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		"Device Name"	Displaying the Bluetooth <sup>®</sup> device address and name
		"Initialize"	Initializing the system

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### ■ Using a short cut key

First menu	Second menu	Operation detail
"Dial XXX (name)"	-	Dialing a name registered in the phone book
"Phone book add Entry"	-	Adding a new phone number
"Phone book Change name"	-	Changing a registered name in the phone book
"Phone book Delete Entry"	-	Deleting the registered data
"Phone book List names"	-	Listing the registered data
"Phone book Set Speed Dial"	-	Setting speed dials
"Phone book Delete Speed Dial"	-	Deleting speed dials
"Dial XXX (number)"	-	Dialing by inputting a number
"Phonebook"	"Phonebook Unlock"	Unlocking the phone book
	"Phonebook Lock"	Locking the phone book

### 3-4. Using the hands-free phone system (for cellular phones)

#### ■ Automatic volume adjustment

When vehicle speed reaches 50 mph (80 km/h) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 43 mph (70 km/h) or less.

#### ■ When using a voice command


For numbers, say a combination of single digits from zero to nine, # (pound), \* (star), and + (plus).

Say the command correctly and clearly.

#### ■ Situations that the system may not recognize your voice

- When driving on rough roads
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fan emits a loud noise

#### ■ Operations that cannot be performed while driving

- Operating the system with 
- Registering a cellular phone to the system

#### ■ Changing the passkey

→P. 419

### **3-4. Using the hands-free phone system (for cellular phones)**

## **Making a phone call**

#### **■ Making a phone call**

- Dialing by inputting a number  
“Dial by number”
- Dialing by inputting a name  
“Dial by name”
- Speed dialing
- Dialing a number stored in the outgoing history memory  
“Redial”
- Dialing a number stored in the incoming history memory  
“Call back”

#### **■ Receiving a phone call**

- Answering the phone
- Refusing the call

#### **■ Transferring a call**


#### **■ Call waiting**

#### **■ Using the call history memory**


- Dialing
- Storing data in the phone book
- Deleting

### 3-4. Using the hands-free phone system (for cellular phones)

#### Dialing by inputting a number

- STEP 1** Press the talk switch and say "Dial by number".
- STEP 2** Press the talk switch and say the phone number.
- STEP 3** Dial by one of the following methods:
  - a. Press the off-hook switch.
  - b. Press the talk switch and say "Dial".
  - c. Select "Dial" using .

#### Dialing by inputting a name

- STEP 1** Press the talk switch and say "Dial by name".
- STEP 2** Select a registered name to be input by either of the following methods:
  - a. Press the talk switch and say a registered name.
  - b. Press the talk switch and say "List Names". Press the talk switch when the desired name is read aloud.
- STEP 3** Dial by one of the following methods:
  - a. Press the off-hook switch.
  - b. Press the talk switch and say "Dial".
  - c. Select "Dial" using .

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Speed dialing

**STEP 1** Press the off-hook switch.

**STEP 2** Press the preset button in which the desired number is registered.

**STEP 3** Press the off-hook switch.

#### When receiving a phone call

##### ■ Answering the phone

Press the off-hook switch.

##### ■ Refusing the call

Press the on-hook switch.

#### Transferring a call

A call can be transferred between the cellular phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

- a. Operate the cellular phone.  
Refer to the manual that comes with the cellular phone for the operation of the phone.
- b. Press the off-hook switch<sup>\*1</sup>.
- c. Press the talk switch and say "Call Transfer"<sup>\*2</sup>.

<sup>\*1</sup>: This operation can be performed only when transferring a call from the cellular phone to the system during a call.

<sup>\*2</sup>: While the vehicle is in motion, calls cannot be transferred from the system to the cellular phone.



### 3-4. Using the hands-free phone system (for cellular phones)

#### Call waiting

When a call is interrupted by an incoming call from a third party, the following options will become available:

- Answer the incoming call: Press the off-hook switch. (Press the off-hook switch again as necessary to switch back and forth between calls.)
- Refuse the incoming call: Press the on-hook switch.

#### Using the call history memory

Follow the procedure below to use a number stored in the call history memory:

**STEP 1** Press the talk switch and say “Redial” (when using a number stored in the outgoing call history memory) or “Call back” (when using a number stored in the incoming call history memory).

**STEP 2** Select the number by either of the following methods:


- a. Say “Previous” or “Go back” until the desired number is displayed.


- b. Select the desired number using




### 3-4. Using the hands-free phone system (for cellular phones)

**STEP 3** The following operations can be performed:

Dialing: Press the off-hook switch or select “Dial” using a voice command or .

Storing the number in the phone book: Select “Store” and then “Confirm” using a voice command or .

Deleting: Select “Delete” and then “Confirm” using a voice command or .

---

#### ■ Call waiting

- If your phone does not support HFP Ver. 1.5, this function cannot be used.
- Call waiting operation may differ depending on your cellular phone and service provider.

#### ■ Call history

Up to 5 numbers can be stored in each of the outgoing and incoming call history memories.

#### ■ When talking on the phone

- Do not talk simultaneously with the other party.
- Keep the volume of the received voice down. Otherwise, voice echo will increase.

### 3-4. Using the hands-free phone system (for cellular phones)

## Setting a cellular phone

Registering a cellular phone in the hands-free phone system allows the system to function. The following functions can be used for registered cellular phones:

#### ■ Functions and operation procedures

To enter the menu for each function, follow the steps below using a

voice command or




:

- Registering a cellular phone
  1. "Setup" → 2. "Phone Setup" → 3. "Pair Phone"
- Selecting a cellular phone to be used
  1. "Setup" → 2. "Phone Setup" → 3. "Connect Phone (Connect)"
- Changing the registered name of a cellular phone
  1. "Setup" → 2. "Phone Setup" → 3. "Change Name"
- Listing the registered cellular phones
  1. "Setup" → 2. "Phone Setup" → 3. "List Phones"
- Changing the passkey
  1. "Setup" → 2. "Phone Setup" → 3. "Set Passkey"
- Deleting a registered cellular phone
  1. "Setup" → 2. "Phone Setup" → 3. "Delete Phone"

### 3-4. Using the hands-free phone system (for cellular phones)

#### Registering a cellular phone

Select "Pair Phone" using a voice command or , and perform the procedure for registering a cellular phone. (→P. 404)

#### Selecting a cellular phone to be used

**STEP 1** Select "Connect Phone (Connect)" using a voice command or



##### Pattern A

**STEP 2** Select the cellular phone to be used by either of the following methods, and select "Confirm" by using a voice command or



- a. Press the talk switch and say the name of the desired cellular phone.
- b. Press the talk switch and say "List Phones". When the name of the desired cellular phone is read aloud, press the talk switch.


##### Pattern B

**STEP 2** Select the cellular phone to be used using



### 3-4. Using the hands-free phone system (for cellular phones)

#### Changing the registered name of a cellular phone

**STEP 1** Select "Change Name" using a voice command or .

##### Pattern A

**STEP 2** Select the name of the cellular phone to be changed by either of the following methods, and select "Confirm" using a voice com-

mand or .


- Press the talk switch and say the name of the desired cellular phone.
- Press the talk switch and say "List Phones". When the name of the desired cellular phone is read aloud, press the talk switch.

##### Pattern B

**STEP 2** Select the desired cellular phone name to be changed using



**STEP 3** Press the talk switch or select "Record Name" using , and say the new name.


**STEP 4** Select "Confirm" using a voice command or .

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Listing the registered cellular phones

Select “List Phones” using a voice command or . The list of registered cellular phones will be read aloud.

When listing is complete, the system returns to “Phone Setup”.

Pressing the talk switch while the name of a cellular phone is being read aloud selects the cellular phone, and the following functions will become available:

- Selecting a cellular phone: “Connect Phone (Connect)”
- Changing a registered name: “Change Name”
- Deleting a cellular phone: “Delete Phone”

### 3-4. Using the hands-free phone system (for cellular phones)

#### Changing the passkey

**STEP 1** Select "Set Passkey" using a voice command or



##### Pattern A

**STEP 2** Press the talk switch, say a 4 to 8-digit number, and select

"Confirm" using a voice command or



##### Pattern B

**STEP 2** Select a 4 to 8-digit number using



The number should be input 1 digit at a time.

**STEP 3** When the entire number to be registered as a passkey has been

input, press



again.

If the number to be registered has 8 digits, pressing of the knob is not necessary.

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Deleting a registered cellular phone

**STEP 1** Select "Delete Phone" using a voice command or



##### Pattern A

**STEP 2** Select the cellular phone to be deleted by either of the following methods and select "Confirm" using a voice command or



- Press the talk switch and say the name of the desired cellular phone.
- Press the talk switch and say "List Phones". When the name of the desired cellular phone is read aloud, press the talk switch.

##### Pattern B

**STEP 2** Select the desired cellular phone to be deleted using



If the cellular phone to be deleted is paired as a Bluetooth<sup>®</sup> audio player, the registration of the audio player can be deleted at the same time. A voice guidance instruction to delete a Bluetooth<sup>®</sup> audio player is heard.

**STEP 3** Select "Yes" or "No" using a voice command or



(Bluetooth<sup>®</sup> audio player → P. 373)



### 3-4. Using the hands-free phone system (for cellular phones)

---

#### ■ The number of cellular phones that can be registered

Up to 6 cellular phones can be registered in the system.

### 3-4. Using the hands-free phone system (for cellular phones)

## Security and system setup

#### ■ Security setting items and operation procedures

To enter the menu for each function, follow the steps below using a

voice command or



- Setting or changing the PIN (Personal Identification Number)  
1. "Setup" → 2. "Security" → 3. "Set PIN"
- Locking the phone book  
1. "Setup" → 2. "Security" → 3. "Phonebook Lock (Phbk Lock)"
- Unlocking the phone book  
1. "Setup" → 2. "Security" → 3. "Phonebook Unlock (Phbk Unlock)"

#### ■ System setup items and operation procedures

To enter the menu for each function, follow the steps below using



- Setting voice guidance volume  
1. "Setup" → 2. "System Setup" → 3. "Guidance Vol"
- Displaying the Bluetooth<sup>®</sup> device address and name  
1. "Setup" → 2. "System Setup" → 3. "Device Name"
- Initializing the system  
1. "Setup" → 2. "System Setup" → 3. "Initialize"

### 3-4. Using the hands-free phone system (for cellular phones)

#### Setting or changing the PIN


##### ■ Setting a PIN

**STEP 1** Select "Set PIN" using a voice command or



**STEP 2** Enter a PIN using a voice command or



When using , input the code 1 digit at a time.

##### ■ Changing the PIN

**STEP 1** Select "Set PIN" using a voice command or




**STEP 2** Enter the registered PIN using a voice command or



**STEP 3** Enter a new PIN using a voice command or




When using , input the code 1 digit at a time.


3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Locking or unlocking the phone book


**STEP 1** Select “Phonebook Lock (Phbk Lock)” or “Phonebook Unlock (Phbk Unlock)” using a voice command or .

**STEP 2** Input the PIN by either of the following methods and select “Confirm” using a voice command or .

a. Press the talk switch and say the registered PIN.


b. Input a new PIN using .

#### Setting voice guidance volume

**STEP 1** Select “Guidance Vol” using .


**STEP 2** Change the voice guidance volume.


To decrease the volume: Turn  counterclockwise.

To increase the volume: Turn  clockwise.

### 3-4. Using the hands-free phone system (for cellular phones)


#### Displaying the Bluetooth® device address and name


**STEP 1** Select "Device Name" using .

**STEP 2** Turn  to display the Bluetooth® device address and name.

**STEP 3** Select "Go Back" using  to return to "System Setup".

#### Initializing the system

**STEP 1** Select "Initialize" and then "Confirm" using .

**STEP 2** Select "Confirm" again using .

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

---

#### ■ Initialization

- The following data in the system can be initialized:
  - Phone book
  - Outgoing and incoming call history
  - Speed dials
  - Registered cellular phone data
  - Security code
  - Registered Bluetooth® enabled portable player data
  - Passkey for the cellular phones
  - Passkey for the Bluetooth® audio players
  - Guidance volume
  - Receiver volume
  - Ring tone volume
- Once the initialization has been completed, the data cannot be restored to its original state.

#### ■ When the phone book is locked

The following functions cannot be used:

- Dialing by inputting a name
- Speed dialing
- Dialing a number stored in the call history memory
- Using the phone book

### 3-4. Using the hands-free phone system (for cellular phones)

## Using the phone book

To enter the menu for each function, follow the steps below using a voice command or




- Adding a new phone number
  1. "Phonebook" → 2. "Add Entry"
- Changing the registered name in the phone book
  1. "Phonebook" → 2. "Change Name"
- Listing the registered data
  1. "Phonebook" → 2. "List Names"
- Setting speed dials
  1. "Phonebook" → 2. "Set Speed Dial (Speed Dial)"
- Deleting the registered data
  1. "Phonebook" → 2. "Delete Entry"
- Deleting speed dials
  1. "Phonebook" → 2. "Delete Speed Dial (Del Spd Dial)"


### 3-4. Using the hands-free phone system (for cellular phones)

#### Adding a new phone number

The following methods can be used to add a new phone number:

- Inputting a phone number using a voice command
- Transferring data from the cellular phone
- Inputting a phone number using 
- Selecting a phone number from outgoing or incoming call history

#### ■ Adding procedure

**STEP 1** Select “Add Entry” using a voice command or .

**STEP 2** Use one of the following methods to input a telephone number:  
Inputting a telephone number using a voice command:


STEP2-1 Select “By Voice” using a voice command or .

STEP2-2 Press the talk switch, say the desired number, and select “Confirm” using a voice command.



### 3-4. Using the hands-free phone system (for cellular phones)

Transferring data from the cellular phone:


STEP2-1 Select "By Phone" and then "Confirm" using a voice command or .


STEP2-2 Transfer the data from the cellular phone.

Refer to the manual that comes with the cellular phone for the details of transferring data.

STEP2-3 Select the data to be registered by either of the following methods:

a. Say "Previous" or "Next" until the desired data is displayed, and select "Confirm" using a voice command.

b. Select the desired data using .

Inputting a phone number using .

STEP2-1 Select "Manual Input" using .

STEP2-2 Input a phone number using , and press

 again.

Input the phone number 1 digit at a time.

### 3-4. Using the hands-free phone system (for cellular phones)

Selecting a phone number from outgoing or incoming call history:

STEP2-1 Select "Call History" using a voice command or



STEP2-2 Select "Outgoing" or "Incoming" using a voice command or




STEP2-3 Select the data to be registered by either of the following methods:

a. Say "Previous" or "Go back" until the desired data is displayed, and select "Confirm" using a voice command.


b. Select the desired data using




### 3-4. Using the hands-free phone system (for cellular phones)

**STEP 3** Select the name to be registered by either of the following methods, and select “Confirm” using a voice command or :

a. Press the talk switch and say the desired name.

b. Select “Record Name” using , and say the desired name.

**STEP 4** Select “Confirm” using a voice command or .

In **STEP 4**, selecting “Set Speed Dial (Speed Dial)” instead of “Confirm” registers the newly added phone number as a speed dial.

3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Changing the registered name in the phone book

**STEP 1** Select “Change Name” using a voice command or



##### Pattern A

**STEP 2** Select the name to be changed by either of the following meth-

ods, and select “Confirm” using a voice command or



- a. Press the talk switch, say the desired name.
- b. Press the talk switch, and say “List Names”. When the desired name is read aloud, press the talk switch.

##### Pattern B

**STEP 2** Select the desired name to be changed using



**STEP 3** Press the talk switch or select “Record Name” using , and say the new name.




**STEP 4** Select “Confirm” using a voice command or



### 3-4. Using the hands-free phone system (for cellular phones)

#### Listing the registered data

Select "List Names" using a voice command or . The list of the registered data will be read aloud.

When listing is complete, the system returns to the "Phonebook".

Pressing the talk switch while the desired data is being read aloud selects the data, and the following function will become available:

- Dialing: "Dial"
- Changing a registered name: "Change Name"
- Deleting an entry: "Delete Entry"
- Setting a speed dial: "Set Speed Dial (Speed Dial)"

### 3-4. Using the hands-free phone system (for cellular phones)

#### Setting speed dials

**STEP 1** Select “Set Speed Dial (Speed Dial)” using a voice command or



##### Pattern A

**STEP 2** Select the data to be registered as a speed dial by either of the following methods, and select “Confirm” using a voice command



or :

- a. Press the talk switch, say the desired name.
- b. Press the talk switch, and say “List Names”. When the desired name is read aloud, press the talk switch.

##### Pattern B

**STEP 2** Select the desired data using



**STEP 3** Select the desired preset button, and register the data into speed dial by either of the following methods:

- a. Press the desired preset button, and select “Confirm” by using

a voice command or



- b. Press and hold the desired preset button.

### 3-4. Using the hands-free phone system (for cellular phones)

#### Deleting the registered data

**STEP 1** Select "Delete Entry" using a voice command or



##### Pattern A

**STEP 2** Select the data to be deleted by either of the following methods,

and select "Confirm" using a voice command or



- a. Press the talk switch, and say the name of the desired phone number.
- b. Press the talk switch, say "List Names". When the name of the desired phone number is read aloud, press the talk switch.

##### Pattern B

**STEP 2** Select the desired data to be deleted using





3

Interior features

### 3-4. Using the hands-free phone system (for cellular phones)

#### Deleting speed dials

**STEP 1** Select “Delete Speed Dial (Del Spd Dial)” using a voice command or  .

**STEP 2** Press the preset button to which the desired speed dial is registered, and select “Confirm” using a voice command or  .

---

#### ■ Limitation of number of digits

A phone number that exceeds 24 digits cannot be registered.