5

Calmly perform the following actions if any of the warning lights turn on or flash. If a light turns on or flashes, but then turns off, this does not necessarily indicate a malfunction in the system.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

| Warning light | Warning light/Details | |
|-------------------------|--|--|
| | Brake system warning light (warning buzzer)* | |
| BRAKE (U.S.A.) (Canada) | Low brake fluid Malfunction in the brake booster system This light also comes on when the parking brake is not | |
| | released. If the light turns off after the parking brake is fully released the system is operating normally. | |

*: Parking brake engaged warning buzzer:

 \rightarrow P. 484

Stop the vehicle immediately.

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

| Warning light | Warning light/Details | |
|---------------|---|--|
| | Charging system warning light Indicates a malfunction in the vehicle's charging system. | |

Have the vehicle inspected by your Lexus dealer immediately.

Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.

| Warning light | Warning light/Details | |
|---------------|---|--|
| (U.S.A.) | Malfunction indicator lamp Indicates a malfunction in: • The electronic engine control system; • The electronic throttle control system; or • The electronic automatic transmission control system. | |
| * | SRS warning light Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system. | |

| Warning light | Warning light/Details | |
|---------------|---|--|
| ABS (U.S.A.) | ABS warning light Indicates a malfunction in: • The ABS; | |
| (Canada) | • The brake assist system. | |
| ! | Electric power steering system warning light Indicates a malfunction in the EPS (Electric Power Steering) system. | |
| ? | Slip indicator Indicates a malfunction in: • The VSC system; • The TRAC system; or • The hill-start assist control system | |

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

| Warning light | Warning light/Details | Correction procedure |
|-----------------------------|--|--|
| 4 | Open door warning light (warning buzzer)*1 Indicates that a door or the trunk is not fully closed. | Check that all doors and the trunk are closed. |
| -3 | Low fuel level warning light Remaining fuel (Approximately 2.9 gal. [11 L, 2.4 lmp. gal.] or less) | Refuel the vehicle. |
| (On the instrument cluster) | Driver's seat belt reminder light (warning buzzer)*2 Warns the driver to fasten his/her seat belt. | Fasten the seat belt. |

| Warning light | Warning light/Details | Correction procedure |
|-----------------------|--|---|
| (On the center panel) | Front passenger's seat belt reminder light (warning buzzer)*2 Warns the front passenger to fasten his/her seat belt. | Fasten the seat belt. |
| | Tire pressure warning light | |
| | When the light comes on: Low tire inflation pressure such as • Natural causes (→P. 476) • Flat tire (→P. 492) | Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer. |
| | When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system (→P. 477) | Have the system checked by your Lexus dealer. |

| Warning light | Warning light/Details | Correction procedure |
|---------------|--|----------------------|
| | Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction. | →P. 481 |

*1:Open door warning buzzer:

 \rightarrow P.484

*2:Driver's and front passenger's seat belt reminders buzzer:

The driver's and front passenger's seat belts reminder sounds to alert the driver and front passenger that his or her sear belt is not fastened. The buzzer sounds intermittently for 10 seconds after the vehicle has reached a speed of at least 12 mph (20 km/h). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

■ If the malfunction indicator lamp comes on while driving

First check the following:

- Is the fuel tank empty?
 If it is, fill the fuel tank immediately.
- Is the fuel tank cap loose?
 If it is, tighten it securely.

The lamp will go off after taking several driving trips.

If the lamp does not go off even after several trips, contact your Lexus dealer as soon as possible.

■ Electric power steering warning light

When the battery is low or when the voltage drops temporarily, the electric power steering warning light may come on.

■ Front passenger detection sensor and passenger seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound, even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ When the tire pressure warning light comes on

Check the tire inflation pressure and adjust to the appropriate level. Pressing the satellite switch does not turn off the tire pressure warning light.

■ The tire pressure warning light may turn on due to natural causes

The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with a spare tire

The compact spare tire is not equipped with the tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire is replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the proper tire inflation pressure. The tire pressure warning light will turn off after a few minutes.

■ If the tire pressure warning system is inoperative

The tire pressure warning system will be disabled in the following conditions: (When the condition becomes normal, the system will work properly.)

- If tires not equipped with tire pressure warning valves and transmitters are used
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer
- If a different set of tires has been selected using the satellite switch
- If the tire inflation pressure is 73 psi (500 kPa, 5.1 kgf/cm² or bar) or higher

The tire pressure warning system may be disabled in the following conditions: (When the condition becomes normal, the system will work properly.)

- If electronic devices or facilities using similar radio wave frequencies are nearby
- If a radio set at similar frequencies is in use in the vehicle
- If there is a lot of snow or ice on the vehicle, in particular around the wheels or wheel housings
- If non-genuine Lexus wheels are used (Even if you use Lexus wheels, the tire pressure warning system may not work properly with some types of tires.)
- If tire chains are used

■ If the tire pressure warning light frequently comes on after blinking for 1 minute

If the tire pressure warning light frequently comes on after blinking for 1 minute when the "ENGINE START STOP" switch is turned to IGNITION ON mode, have it checked by your Lexus dealer.

■ Customization that can be configured at Lexus dealer

The vehicle speed linked seat belt reminder buzzer can be disabled. (Customizable features \rightarrow P. 553)

A CAUTION

■ When the electric power steering warning light comes on

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, firmly hold and operate it using more force than usual.

If the tire pressure warning light comes on

Be sure to observe the following precautions. Failure to do so could cause loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If the tire is flat, change to the spare tire and have the flat tire repaired by the nearest Lexus dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

If a blowout or sudden air leakage should occur

The tire pressure warning system may not activate immediately.

A CAUTION

Maintenance of the tires

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and load information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and load information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.



■ Precaution when installing a different tire

When a tire of a different specification or maker is installed, the tire pressure warning system may not operate properly.

5

If a warning message is displayed

If a warning is shown on the multi-information display, stay calm and perform the following actions:



Master warning light


The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

Multi-information display

If any of the warning lights turns on again after performing the following actions, contact your Lexus dealer.

Stop the vehicle immediately.

A buzzer sounds and a warning message is shown on the multi-information display. The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

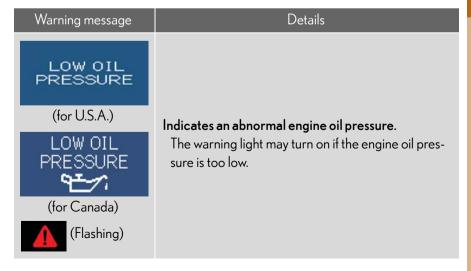

Have the vehicle inspected by your Lexus dealer immediately.

A buzzer sounds and a warning message is shown on the multi-information display. Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.

| Warning message | Details |
|-------------------------------|---|
| CHECK AWD | Indicates a malfunction in the AWD system. |
| CHECK S/T LOCK (Flashing) | Indicates a malfunction in the steering lock system. |
| CHECK SONAR (If equipped) | Indicates intuitive parking assist malfunction. The malfunctioning assist-sensor is shown flashing on the display. |

| Warning message | Details |
|---------------------------------------|---|
| CHECK HEADLIGHT SYSTEM (If equipped) | Indicates a malfunction in the headlight leveling system. |

Follow the correction procedures.

A buzzer sounds and a warning message is shown on the multi-information display. After taking the specified steps to correct the suspected problem, check that the warning message turns off.

| Warning message | Details | Correction procedure |
|--|--|---|
| RIGHT DOOR RIGHT DOOR RIGHT DOOR RIGHT REAR DOOR REAR DOOR | Indicates that one or more of the doors is not fully closed. The system also indicates which doors are not fully closed. If ashes and a buzzer sounds to indicate that one or more of the doors is not fully closed (with the vehicle having reached a speed of 3 mph [5 km/h]). | Make sure that all of the doors are closed. |
| HOOD OPEN | Indicates that the hood is not fully closed. flashes and a buzzer sounds to indicate that hood is not fully closed (with the vehicle having reached a speed of 3 mph [5 km/h]). | Close the hood. |

| \A/ · | D . :1 | C " |
|---|--|----------------------------|
| Warning message | Details | Correction procedure |
| | Indicates that the trunk is not fully closed. | |
| TRUNK OPEN | flashes and a buzzer sounds to indi- cate that trunk is not fully closed (with the vehicle having reached a speed of 3 mph [5 km/h]). | Close the trunk. |
| MOONROOF OPEN (Flashing) (If equipped) | Indicates that the moon roof is not fully closed (with the "ENGINE START STOP" switch OFF and the driver's door opened). | Close the moon roof. |
| PARK BRAKE | Indicates that the parking brake is still engaged. flashes and a buzzer sounds to indicate that the parking brake is still engaged (with the vehicle having reached a speed of 3 mph [5 km/h]). | Release the parking brake. |
| LOW WASHER FLUID | Indicates that the washer fluid level is low. | Add washer fluid. |

| Warning message | Details | Correction procedure |
|------------------------|---|--|
| LOW ENGINE OIL LEVEL | Indicates that engine oil level is low. | Check the level of engine oil, and add if necessary. |
| OIL MAINT REQD SOON | Indicates that all mainte- nance according to the driven distance on the maintenance schedule* should be performed soon. | If necessary, perform maintenance. |
| (U.S.A. only) | Comes on approximately 4500 miles (7200 km) after the maintenance data has been reset. | |
| OIL MAINT | Indicates that all mainte- nance is required to cor- respond to the driven distance on the mainte- nance schedule*. | Perform the necessary |
| (U.S.A. only) | Comes on approximately 5000 miles (8000 km) after the maintenance data has been reset. (The indicator will not work properly unless the maintenance data has been reset.) | maintenance. Please reset the maintenance data after the maintenance is performed (→P. 386) |

| Warning message | Details | Correction procedure |
|---------------------------------|---|----------------------|
| CLEAN SONAR (If equipped) | Indicates that intuitive parking assist is dirty or covered with ice. | Clean the sensor. |

^{*:} Refer to the separate "Scheduled Maintenance" or "Owner's Manual Supplement" for the maintenance interval applicable to your vehicle.

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

| Interior buzzer | Exterior buzzer | Warning message | Details | Correction procedure |
|--------------------|--------------------|--|---|--|
| Once | _ | (Comes on for 10 seconds.) (Flashing) | Indicates that an attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally. | Start the engine with the electronic key present.* |
| Once | 3 times | KEY IS NOT DETECTED (Flashing) | Indicates that a door other than the driver's door has been opened or closed with the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area. | Confirm the location of the electronic key. |

| Interior buzzer | Exterior buzzer | Warning message | Details | Correction procedure |
|--------------------|--------------------|--|--|--|
| Once | 3 times | (Vehicles with an automatic transmission) (Flashing) | Indicates that the driver's door has been opened or closed with the shift lever in P, the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area. | Turn the "ENGINE START STOP" switch OFF or confirm the location of the electronic key. |
| Once | Con- tinuous | SHIFT TO P RANGE KEY IS NOT DETECTED (Displayed alternately) (Vehicles with an automatic transmission) (Flashing) | Indicates that the driver's door has been opened or closed (with the shift lever out of in P, the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area). | Shift the shift lever to P. Confirm the location of the electronic key. |
| Once | _ | LOW KEY BATTERY (Flashing) | Indicates that the key battery is low. | Replace the battery. $(\rightarrow P. 433)$ |

| Interior buzzer | Exterior buzzer | Warning message | Details | Correction procedure |
|--------------------|--------------------|---|--|---|
| Once | _ | WHEN STARTING THE ENGINE, DEPRESS THE BRAKE PEDAL (Vehicles with an auto- matic transmission) | Indicates that a door has been opened or closed and the "ENGINE START STOP" switch has been switched twice to ACCESSORY mode from OFF. | Press the "ENGINE START STOP" switch while applying the brakes. |
| Once | _ | WHEN STARTING THE ENGINE, DEPRESS THE CLUTCH PEDAL (Vehicles with a manual transmission) | Indicates that a door has been opened or closed and the "ENGINE START STOP" switch has been switched twice to ACCESSORY mode from OFF. | Press the "ENGINE START STOP" switch while depressing the clutch pedal. |
| _ | _ | S/T IS NOT UNLOCKED (Flashing) | Indicates that the steering lock has not released within 3 seconds of pressing the "ENGINE START STOP" switch. | Press the "ENGINE START STOP" switch again while turn- ing the steering wheel with the brake pedal depressed. |


| Interior buzzer | Exterior buzzer | Warning message | Details | Correction procedure |
|--------------------|--------------------|--|--|----------------------|
| Once | _ | DEPRESS THE BRAKE PEDAL, AND TOUCH THE ENGINE SWITCH WITH THE KEY (Vehicles with an auto- matic transmission) | Indicates that the electronic key does not operate properly. | →P. 507 |
| _ | _ | TO START, DEPRESS THE BRAKE PEDAL, AND PUSH THE ENGINE SWITCH (Vehicles with an automatic transmission) | | |
| Once | _ | DEPRESS THE CLUTCH PEDAL, AND TOUCH THE ENGINE SWITCH WITH THE KEY (Vehicles with a manual transmission) | Indicates that the electronic key does not operate properly. | →P. 507 |
| _ | _ | TO START, DEPRESS THE CLUTCH PEDAL, AND PUSH THE ENGINE SWITCH (Vehicles with a manual transmission) | | |

^{*:} If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key. (\(\rightarrow P. 37))


5-2. Steps to take in an emergency If you have a flat tire

Remove the flat tire and replace it with the spare provided.


- Before jacking up the vehicle
 - Stop the vehicle on a hard, flat surface.
 - Set the parking brake.
 - Shift the shift lever to P (vehicles with an automatic transmission) or R (vehicles with a manual transmission).
 - Stop the engine.
 - Turn on the emergency flashers.
- Location of the spare tire, jack and tools

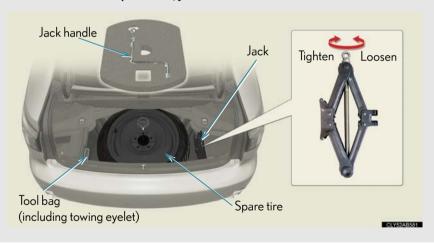


Taking out the spare tire

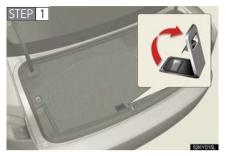

Lift up the hook of the panel on the trunk floor.

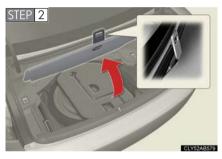

Secure the panel using the hook provided.

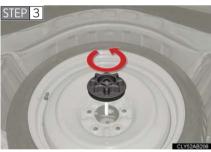

Loosen the center fastener that secures the spare tire.

Replacing a flat tire




Chock the tires.

| Flat tire | | Wheel chock positions |
|-----------|---------------------|--|
| Front | Left-hand side | Behind the rear right-hand side tire |
| | Right- hand side | Behind the rear left- hand side tire |
| Rear | Left-hand side | In front of the front right-hand side tire |
| rcui | Right- hand side | In front of the front left-hand side tire |



Slightly loosen the wheel nuts (one turn).

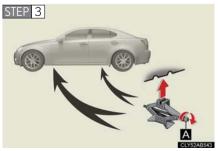

Turn the tire jack portion "A" by hand until the notch of the jack is in contact with the jack point.



Raise the vehicle until the tire is slightly raised off the ground.



Remove all the wheel nuts and the tire.


When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

Installing the spare tire



Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, and the tire may come off the vehicle.

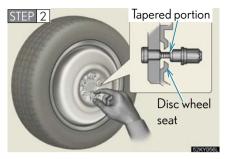


Install the spare tire and loosely tighten each nut by hand to approximately the same amount.

Tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.



Lower the vehicle.

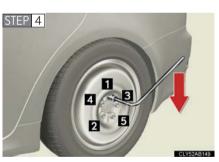

Firmly tighten each nut two or three times in the order shown in the illustration.

Tightening torque: 76 ft·lbf (103 N·m, 10.5 kgf·m)

STEP 5 Stow the flat tire, tire jack and all tools.

■ The compact spare tire

- The compact spare tire is identified by the label "TEMPORARY USE ONLY" on the tire sidewall.
 - Use the compact spare tire temporarily only in an emergency.
- \bullet Make sure to check the tire pressure of the compact spare tire. (\rightarrow P. 531)

■ When using the compact spare tire

As the compact spare tire is not equipped with the tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

■ If you have a flat rear tire on a road covered with snow or ice

Install the compact spare tire on the front of the vehicle. Perform the following steps and fit tire chains to the rear tires.

- STEP 1 Replace a front tire with the compact spare tire.
- Replace the flat rear tire with the tire removed from the front of the vehicle.
- STEP 3 Fit tire chains to the rear tires.

■ After completing the tire change

The tire pressure warning system must be reset. $(\rightarrow P. 414)$

A CAUTION

■ Using the tire jack

Improper use of the tire jack may lead to death or serious injuries due to the vehicle suddenly falling off the jack.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire.
 Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the jack point.
- Do not put any part of your body under the vehicle while it is supported by a jack.
- Do not start or run the engine while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is in it.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.

A CAUTION

• Use a jack stand if it is necessary to get under the vehicle.

Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle may be injured.

Replacing a flat tire

- Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
 - Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
 - Have the wheel nuts tightened with a torque wrench to 76 ft-lbf (103 N·m. 10.5 kgf·m) as soon as possible after changing wheels.

■ When using the spare tire

- Remember that your compact spare tire is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use two compact spare tires simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, deceleration and braking, as well as sharp cornering.

Speed limit when using the spare tire

Do not drive at speeds in excess of 50 mph (80 km/h) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failing to observe this precaution may lead to an accident causing death or serious injury.

CAUTION

■ When the spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & brake assist
- VSC
- TRAC
- FPS
- VDIM
- Navigation system (if equipped)
- Intuitive parking assist (if equipped)
- Cruise control

Also, not only can the following system not be utilized fully, it may actually negatively effect the drive-train components:

AWD system (if equipped)

⚠ NOTICE

Do not drive the vehicle with a flat tire.

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

■ Be careful when driving over bumps with the compact spare tire installed on the vehicle

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

■ Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

■ When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. $(\rightarrow P. 414)$

If the engine will not start even though correct starting procedures are being followed (\rightarrow P. 141), consider each of the following points.

■ The engine will not start even when the starter motor operates normally.

One of the following may be the cause of the problem.

- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle.
- The engine may be flooded.
 Try to restart the engine once more following correct starting procedures. (→P. 141)
- There may be a malfunction in the engine immobilizer system. $(\rightarrow P. 90)$
- The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem.

- \bullet The battery may be discharged. (\rightarrow P. 510)
- The battery terminal connections may be loose or corroded.
- The starter motor does not turn over, the interior lights and head-lights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem.

- One or both of the battery terminals may be disconnected.
- \bullet The battery may be discharged. (\rightarrow P. 510)
- There may be a malfunction in the steering lock system.

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine if the "ENGINE START STOP" switch is functioning normally.

- ► Vehicles with an automatic transmission
- STEP 1 Set the parking brake.
- STEP 2 Put the shift lever in P.
- STEP 3 Set the "ENGINE START STOP" switch to ACCESSORY mode.
- STEP 4 Press and hold the "ENGINE START STOP" switch for about 15 seconds while depressing the brake pedal firmly.
- ► Vehicles with a manual transmission
- STEP 1 Set the parking brake.
- STEP 2 Put the shift lever in N.
- STEP 3 Set the "ENGINE START STOP" switch to the ACCESSORY mode.
- Push and hold the "ENGINE START STOP" switch for about 15 seconds while depressing the brake pedal and clutch pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle checked by your Lexus dealer.

When trouble arises

If the shift lever cannot be shifted from P*

If the shift lever cannot be shifted with your foot on the brake, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Lexus dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.


STEP 1 Set the parking brake.

Turn the "ENGINE START STOP" switch to ACCESSORY mode.

STEP 3 Depress the brake pedal.



Pry the cover up with a flathead screwdriver or equivalent.

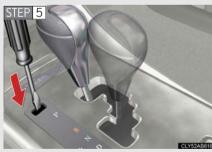

Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

5-2. Steps to take in an emergency If you lose your keys

New genuine Lexus keys can be made by your Lexus dealer using the other key and the key number stamped on your key number plate.

5

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (\rightarrow P. 37) or the electronic key cannot be used because the battery is depleted, the smart access system with push-button start and wireless remote control cannot be used. In such cases, the doors and trunk can be opened or the engine can be started by following the procedure below.


Locking and unlocking the doors, unlocking the trunk and key linked functions

Use the mechanical key built in to the electronic keys to operate the doors. $(\rightarrow P. 29)$

▶ Doors



Remove the cover on the driver's door handle.

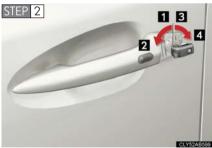


- Locks all the doors
- Closes the windows and moon roof (turn and hold)
- Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.

Opens the windows and moon roof (turn and hold)

5-2. Steps to take in an emergency

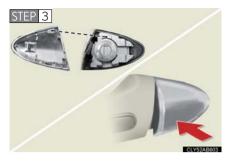

After the operation is completed, reinstall the cover.

Hook the upper claw of the cover onto the upper catch on the vehicle side, and then push on the lower side of the cover.

Make sure that the lower claw of the cover is securely fastened to the lower catch on the vehicle side. If the cover is not securely attached, it may fall off while driving.

► Trunk



Turn the mechanical key clockwise to open.

Changing "ENGINE START STOP" switch modes and starting the engine

► Automatic transmission

STEP 1 Shift the shift lever to P and apply the brakes.





Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.

An alarm will sound to indicate that the start function cannot detect the electronic key that is touched to the "ENGINE START STOP" switch if any of the doors is opened and closed while the key is touched to the switch.

STEP 3 To change "ENGINE START STOP" switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the "ENGINE START STOP" switch. Modes can be changed each time the switch is pressed.

 $(\rightarrow P. 141)$

To start the engine: Press the "ENGINE START STOP" switch within 10 seconds after the buzzer sounds, keeping the brake pedal depressed.

► Manual transmission

STEP 1 Shift the shift lever to N and depress the clutch pedal.





Touch the Lexus emblem side of electronic the kev to the "ENGINE START STOP" switch.

An alarm will sound to indicate that the start function cannot detect the electronic key that is touched to the "ENGINE START STOP" switch if any of the doors is opened and closed while the key is touched to the switch.

STEP 3 To change "ENGINE START STOP" switch modes: Within 10 seconds of the buzzer sounding, release the clutch pedal and press the "ENGINE START STOP" switch. Modes can be changed each time the switch is pressed.

 $(\to P. 141)$

To start the engine: Press the "ENGINE START STOP" switch within 10 seconds after the buzzer sounds, keeping the clutch pedal depressed.

In the event that the engine still cannot be started, contact your Lexus dealer.

■ Stopping the engine

For vehicles with an automatic transmission: Shift the shift lever to P and press the "ENGINE START STOP" switch as you normally do when stopping the engine.

For vehicles with a manual transmission: Shift the shift lever to N position and press the "ENGINE START STOP" switch as you normally do when stopping the engine.

■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery depletes. $(\rightarrow P.433)$

If the vehicle battery is discharged


The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can call your Lexus dealer or a qualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your Lexus following the steps below.

STEP 1 Remove the engine compartment covers. $(\rightarrow P. 399)$

STEP 2 Connecting the jumper cables.

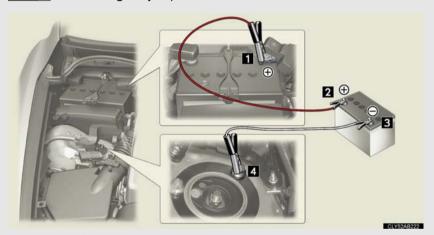

- 11 Positive (+) battery terminal on your vehicle
- Positive (+) battery terminal on the second vehicle
- Negative (-) battery terminal on the second vehicle
- 4 Connect the jumper cable to ground on your vehicle as shown in the illustration.
- Step 3 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- STOP" switch OFF.

- Maintain the engine speed of the second vehicle and turn the "ENGINE START STOP" switch to IGNITION ON mode, then start the vehicle's engine.
- Once the vehicle's engine has started, remove the jumper cables in the exact reverse order in which they were connected.

Once the engine starts, have the vehicle checked at your Lexus dealer as soon as possible.

Avoiding a discharged battery

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic, etc.

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

A CAUTION

Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery.

- Make sure the jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any part other than the intended terminal.
- Do not allow the jumper cables to come into contact with the "+" and "-" terminals.
- Do not allow open flame or use matches, cigarette lighters or smoke near the battery.

A CAUTION

Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery.

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

∧ NOTICE

■ To prevent damaging the vehicle

Do not pull- or push-start the vehicle, because the three-way catalytic converter may overheat and become a fire hazard.

■ When handling jumper cables

Be careful that the jumper cables do not become tangled in the cooling fan or any of the belts when connecting or disconnecting them.

5-2. Steps to take in an emergency If your vehicle overheats

If your engine overheats:

STEP 1 Stop the vehicle in a safe place and turn off the automatic air conditioning system.

STEP 2 Check to see if steam is coming out from under the hood.

If you see steam:

Stop the engine. Carefully lift the hood after the steam subsides and then restart the engine.

If you do not see steam:

Leave the engine running and carefully lift the hood.


STEP 3 Check to see if the cooling fans are operating.

If the fans are operating:

Wait until the temperature of the engine (shown on the instrument cluster) begins to fall and then stop the engine.

If the fans are not operating:

Stop the engine immediately and call your local Lexus dealer.

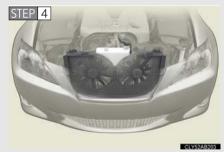

After the engine has cooled down sufficiently, check the engine coolant level and inspect the radiator core (radiator) for any leaks.

If the engine compartment cover needs to be removed: \rightarrow P. 399



Add engine coolant if required.

Water can be used in an emergency if engine coolant is unavailable. $(\rightarrow P. 527)$

Have the vehicle checked at your nearest Lexus dealer as soon as possible

■ Overheating

If you observe the following, your vehicle may be overheating.

- The engine coolant temperature gauge enters the red zone or a loss of power is experienced.
- Steam is coming from under the hood.

A CAUTION

■ To prevent an accident or injury when inspecting under the hood of your vehicle

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injury such as burns.
- Keep hands and clothing away from the fans and other belts while the engine is running.
- Do not loosen the radiator cap while the engine and radiator are hot.
 Serious injury, such as burns, may result from hot coolant and steam released under pressure.



■ When adding engine coolant

Wait until the engine has cooled down before adding engine coolant.

When adding coolant, do so slowly. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

5-2. Steps to take in an emergency

If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt, or snow.

- STEP 1 Stop the engine. Set the parking brake and shift the shift lever to P (vehicles with an automatic transmission) or N (vehicles with a manual transmission).
- STEP 2 Remove the mud, snow, or sand from around the stuck tire.
- STEP 3 Place wood, stones or some other material to help provide traction under the tires.
- STEP 4 Restart the engine.
- STEP 5 Shift the shift lever to the D or R position (vehicles with an automatic transmission) or 1 or R position (vehicles with a manual transmission), release the parking brake and carefully apply the accelerator to free the vehicle.

Turn off TRAC and VSC if these functions are hampering your attempts to free the vehicle. (\rightarrow P. 198)

A CAUTION

■ When attempting to free a stuck vehicle

If you choose to rock the vehicle back and forth to free it, make sure the surrounding area is clear, to avoid striking other vehicles, objects or persons. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

With automatic transmission vehicles, be careful not to shift the shift lever with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

⚠ NOTICE

- To avoid damaging the transmission and other components
 - Avoid spinning the wheels and do not rev the engine.
 - If the vehicle remains stuck after trying these procedures, the vehicle may require towing to be freed.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

STEP 2 Shift the shift lever to N.

► If the shift lever is shifted to N

STEP 3 After slowing down, stop the vehicle in a safe place by the road.

STEP 4 Stop the engine.

If the shift lever cannot be shifted to N

Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.



Stop the engine by pressing and holding the "ENGINE START STOP" switch for 3 consecutive seconds or more.

CLY52AC078

STEP 5 Stop the vehicle in a safe place by the road.

A CAUTION

■ If the engine has to be turned off while driving

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.