6-1. Specifications Maintenance data (fuel, oil level, etc.)

Dimensions and weight

Overall length		190.7 in. (4845 mm)
Overall width		71.6 in. (1820 mm)
Overall height*	2WD	56.1 in. (1425 mm)
	4WD	56.4 in. (1435 mm)
Wheelbase		112.2 in. (2850 mm)
	Front	60.4 in. (1535 mm)
Tread	Rear 2WD 4WD	60.6 in. (1540 mm) 60.4 in. (1535 mm)
Vehicle capacity weight (Occupants + luggage)		815 lb. (370 kg)

*: Unladen vehicle

586



Vehicle identification

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.




This number is stamped on the top left of the instrument panel and in the engine compartment.



This number is also on the Certification Label.

Vehicle specifications



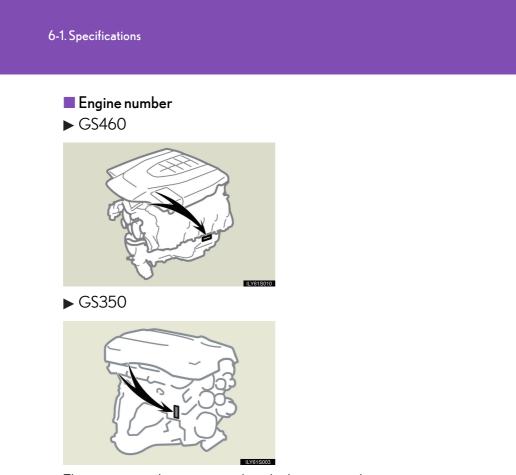

The engine number is stamped on the location as shown.

588



Engine

	GS460	G\$350
Model	1UR-FSE	2GR-FSE
Туре	8-cylinder V type, 4-cycle, gasoline	6-cylinder V type, 4-cycle, gasoline
Bore and stroke	3.70×3.27 in. (94.0 \times 83.0 mm)	
Displacement	$281.2 \text{ cu.in.} (4608 \text{ cm}^3)$	210.9 cu.in. (3456 cm ³)
Drive belt tension	Automatic adjustment	

Fuel

Fuel type	Premium unleaded gasoline only
Octane Rating	91 (Research Octane Number 96) or higher
Fuel tank capacity	18.7 gal. (71 L, 15.6 lmp.gal.)

Vehicle specifications

GS_G_U (OM30C80U)

Lubrication system

► GS460


Oil capacity Drain and refill	
(Reference) With filter	9.1 qt. (8.6 L, 7.6 lmp.qt.)
Without filter	8.9 qt. (8.4 L, 7.4 Imp.qt.)

Engine oil selection

"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Use Lexus approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC multigrade engine oil

Recommended viscosity: SAE 5W-20 or OW-20

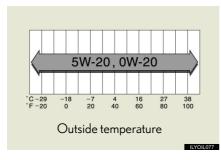

SAE 5W-20 or OW-20 engine oil may be used. However, SAE OW-20 is the best choice for good fuel economy and good starting in cold weather.

590



The OW portion of the oil viscosity rating indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.

The 20 in OW-20 indicates the oil viscosity when the oil is at its operating temperature. An oil with a higher viscosity may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is added to some oil containers to help you select the oil you should use.



GS_G_U(OM30C80U)

► GS350


	2WD	4WD
Oil capacity Drain and refill		
(Reference)		
With filter Without filter	6.6 qt. (6.3 L, 5.5 lmp.qt.) 6.2 qt. (5.9 L, 5.2 lmp.qt.)	6.7 qt. (6.4 L, 5.6 lmp.qt.) 6.3 qt. (6.0 L, 5.3 lmp.qt.)

Engine oil selection

"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Use Lexus approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC multigrade engine oil

Recommended viscosity: SAE 5W-30

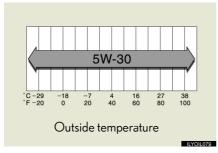

SAE 5W-30 is the best choice for good fuel economy and good starting in cold weather.

If SAE 5W-30 is not available, SAE 10W-30 oil may be used. However, it should be replaced with SAE 5W-30 at the next oil change.



The 5W portion of the oil viscosity rating indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.

The 30 in 5W-30 indicates the oil viscosity when the oil is at its operating temperature. An oil with a higher viscosity may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is added to some oil containers to help you select the oil you should use.



593

GS_G_U(OM30C80U)

Cooling system

Capacity GS460 GS350		11.7 qt. (11.0 L, 9.7 Imp.qt.)
		9.6 qt. (9.1 L, 8.0 lmp.qt.)
Coolant type	9	Use either of the following: • "Toyota Super Long Life Coolant" • Similar high-quality ethylene glycol-based non-sili- cate, non-amine, non-nitrite, and non-borate cool- ant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug		
Make	DENSO	FK20HBR11
Gap		0.043 in. (1.1 mm)

NOTICE

Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust gap when tuning engine.

594

GS_G_U (OM30C80U)

Electrical system	
12 volt battery Open voltage at 68°F (20°C):	12.6—12.8V Fully charged 12.2—12.4V Half charged 11.8—12.0V Discharged (Voltage is checked 20 minutes after the engine and all lights are turned off.)
Charging rates	5A max.

Differential

	GS460/	GS350 (4WD)	
	GS350 (2WD)	Front	Rear
Oil capacity	1.42 qt. (1.35 L, 1.19 Imp.qt.)	0.73 qt. (0.70 L, 0.61 lmp.qt.)	1.42 qt. (1.35 L, 1.19 Imp.qt.)
Oil type and viscosity	Toyota Genuine Dif- ferential Gear Oil LT 75W-85 GL-5 or equivalent	Hypoid gear oil API GL-5 Above 0°F (-18°C): SAE 90 Below 0°F (-18°C): SAE 80W or SAE 80W-90	Toyota Genuine Dif- ferential Gear Oil LT 75W-85 GL-5 or equivalent

Rear differential: "Toyota Genuine Differential Gear Oil" is filled in your Lexus vehicle at factory fill. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

595

GS_G_U (OM30C80U)

Automatic transmission

	GS460	11.4 qt. (10.8 L, 9.5 Imp.qt.)
Fluid capacity*	GS350 (2WD)	8.3 qt. (7.9 L, 7.0 lmp.qt.)
	GS350 (4WD)	10.6 qt. (10.0 L, 8.8 lmp.qt.)
Fluid type		Toyota Genuine ATF WS

*: The fluid capacity is the quantity of reference. If replacement is necessary, contact your Lexus dealer.

MOTICE

Automatic transmission fluid type

Using automatic transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of your automatic transmission accompanied by vibration, and ultimately damage the automatic transmission of your vehicle.

596

Brakes

Pedal clearance	GS460 *1	2.9 in. (74 mm) Min.
	GS350 * ²	2.6 in. (65 mm) Min.
Padal free play	GS460	Less than 0.08 in. (2.0 mm)
Pedal free play	GS350	0.04 — 0.08 in. (1.0 — 2.0 mm)
Brake pad wear limit		0.04 in. (1.0 mm)
Parking brake pedal travel * ³		7—9 clicks
Parking brake lining wear limit		0.04 in. (1.0 mm)
Fluid type		SAE J1703 or FMVSS No. 116 DOT 3

*1: Minimum pedal clearance when depressed with a force of 196 N (20.0 kgf, 44 lbf) while the engine is running.

*2: Minimum pedal clearance when depressed with a force of 490 N (50.0 kgf, 110 lbf) while the engine is running.

*³: Parking brake pedal travel when depressed with a force of 300 N (30.6 kgf, 67.4 lbf).

Steering

Free play

Less than 1.2 in. (30 mm)

6

Vehicle specifications



Tires and wheels

► Type A

Tire size	245/40R18 93Y, 245/40RF18 93Y, P245/40R18 93V, P245/40RF18 93V, 245/40ZR18, T155/70D17 110M (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	Driving under normal conditions Front: 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Rear: 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Driving at high speeds above 100 mph (160 km/h) (in countries where such speeds are per- mitted by law) Add 9 psi (60 kPa, 0.6 kgf/cm ² or bar) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.
Spare tire inflation pressure (Recommended cold tire inflation pressure)	60 psi (420 kPa, 4.2 kgf/cm ² or bar)
Wheel size	18×8 J, $17\times 4T$ (spare)
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

598

GS_G_U (OM30C80U)

▶ Туре В

Tire size	225/50R17 94W, P225/50R17 93V, P225/50RF17 93V, T155/70D17 110M (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	Driving under normal conditions Front: 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Rear: 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Driving at high speeds above 100 mph (160 km/h) (in countries where such speeds are permitted by law) Add 7 psi (50 kPa, 0.5 kgf/cm ² or bar) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indi- cated on the tire sidewall.
Spare tire inflation pressure (Recommended cold tire inflation pressure)	60 psi (420 kPa, 4.2 kgf/cm ² or bar)
Wheel size	$17\times71/2$ J, $17\times4T$ (spare)
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

6

Vehicle specifications

GS_G_U (OM30C80U)

Light bulbs

	Light bulbs	Bulb No.	W	Туре
	Headlights (low beam)	D4S	35	А
	Headlights (high beam)	HB3	60	В
	Front turn signal lights	—	21	С
	Parking lights	—	5	D
Exterior	Fog lights	HB4	51	E
	Front side marker light	194	5	D
	Rear turn signal lights	—	21	С
	Back-up lights	921	16	D
	Trunk light	—	5	F
Interior	Vanity lights		8	D

A: D4S high-intensity discharge bulbs
B: HB3 halogen bulbs
C: Wedge base bulbs (amber)
D: Wedge base bulbs (clear)
E: HB4 halogen bulbs
F: Double end bulbs

600



6-1. Specifications Fuel information

Your vehicle must use only unleaded gasoline.

Premium unleaded gasoline with an octane rating of 91 (Research Octane Number 96) or higher required for optimum engine performance. If 91 octane cannot be obtained, you may use unleaded gasoline with an octane rating as low as 87 (Research Octane Number 91). Use of unleaded gasoline with an significantly reduced performance. Persistent knocking can lead to engine damage and should be corrected by refueling with higher octane unleaded gasoline.

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB3.5-M93 in Canada.

Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Lexus has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

■ If your engine knocks

Consult your Lexus dealer.

- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.
- Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Lexus dealer.

6

Vehicle specifications



Gasoline quality standards

- Automotive manufacturers in the US, Europe and Japan have developed a specification for fuel quality called World-Wide Fuel Charter (WWFC) that is expected to be applied worldwide.
- The WWFC consists of four categories that are based on required emission levels. In the US, category 4 has been adopted.
- The WWFC improves air quality by lowering emissions in vehicle fleets, and customer satisfaction through better performance.

Lexus recommends the use of gasoline containing detergent additives

- Lexus recommends the use of gasoline that contains detergent additives to avoid build-up of engine deposits.
- All gasoline sold in the US contains detergent additives to clean and/or keep clean intake systems.

Lexus recommends the use of cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE (Methyl Tertiary Butyl Ether) is available in many areas.

Lexus recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions and improve air quality.

Lexus does not recommend blended gasoline

- Lexus allows the use of oxygenate blended gasoline where the oxygenate content is up to 10% ethanol or 15% MTBE.
- If you use gasohol in your Lexus, be sure that it has an octane rating no lower than 87.
- Lexus DOES NOT recommend the use of gasoline containing methanol.

602



Lexus does not recommend gasoline containing MMT

Some gasoline contains octane enhancing additive called MMT (Methylcy clopentadienyl Manganese Tricarbonyl).

Lexus DOES NOT recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

🕂 NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used the engine will be damaged.
- Do not use leaded gasoline. Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.
- Do not use gasohol other than that stated here.
 Other gasohol may cause fuel system damage or vehicle performance problems.
- Using unleaded gasoline with an octane number or rating lower than that stated here will cause persistent heavy knocking. At worst, this will lead to engine damage.

Fuel-related poor driveability

If after using a different type of fuel, poor driveability is encountered (poor hot starting, vaporization, engine knocking, etc.), discontinue the use of that type of fuel.

When refueling with gasohol

Take care not to spill gasohol. It can damage your vehicle's paint.

Vehicle specifications



6-1. Specifications Tire information



604


GS_G_U (OM30C80U)

$\blacksquare Tire size \qquad (\rightarrow P.6)$	07)	
DOT and Tire Identification Number (TIN) $(\rightarrow P.6)$	06)	
$\blacksquare Location of treadwear indicators \qquad (\rightarrow P.4)$	63)	
A Run-flat tire (RFT) or standard tire $(\rightarrow P.5)$	66)	
This vehicle can be equipped with either run-flat tires (RFT) or star tires. A "RFT" or "DSST" mark is molded on the sidewall of the run-fla		
Tire ply composition and materials		
Plies are layers of rubber-coated parallel cords. Cords are the str which form the plies in a tire.	rands	
👩 Radial tires or bias-ply tires		
A radial tire has RADIAL on the sidewall. A tire not marked RADIA bias-ply tire.	L is a	
TUBELESS or TUBE TYPE		
A tubeless tire does not have a tube and air is directly filled in the ti tube type tire has a tube inside the tire and the tube maintains the air sure.		
B Load limit at maximum cold tire inflation pressure $(\rightarrow P.$	611)	
	611)	
This means the pressure to which a tire may be inflated.		
🔟 Uniform tire quality grading		
For details, see "Uniform Tire Quality Grading" that follows.		
■ Summer tire or all season tire (→P. 4 An all season tire has "M+S" on the sidewall. A tire not marked "M+S summer tire.	S" is a	
TEMPORARY USE ONLY"	<pre>ver</pre>	1~>
A compact spare tire is identified by the phrase "TEMPORARY ONLY" molded into its sidewall. This tire is designed for temporary e gency use only.		-! - l : f: +
	lions	5

605





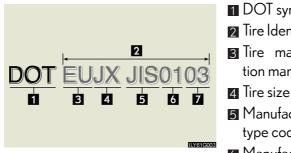

1 DOT symbol*

☑ Tire Identification Number (TIN)

3 Tire manufacturer's identification mark

4 Tire size code

5 Manufacturer's optional tire type code (3 or 4 letters)


6 Manufacturing week

7 Manufacturing year

*: The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

606




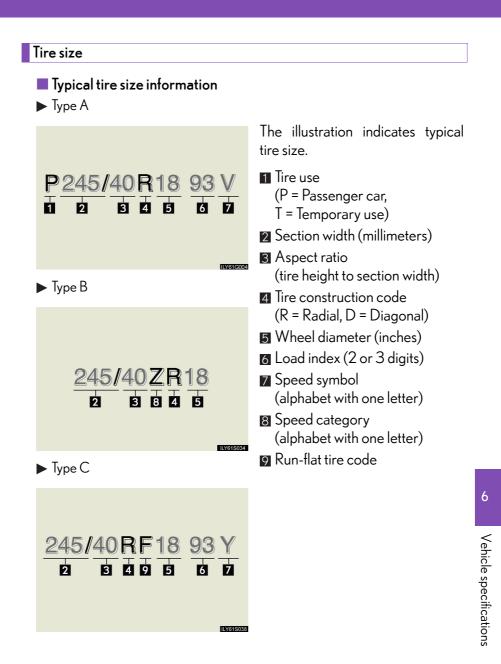



Tire dimensions



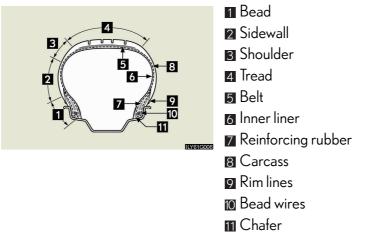

608

GS_G_U (OM30C80U)

Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

DOT quality grades

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1 - 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Vehicle specifications



Traction AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

Temperature A, B, C

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades for this tire are established for a tire that is properly inflated and not overloaded.

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

610

Glossary of tire terminology

- · · ·	
Tire related term Meaning	
Cold tire inflation pres- sure Tire pressure when the vehicle has been pa three hours or more, or has not been driver than 1 mile or 1.5 km under that condition	
Maximum inflation pres- sureThe maximum cold inflated pressure to whi may be inflated, shown on the sidewall of the	
Recommended inflationCold tire inflation pressure recommendedpressureufacturer	by a man-
Accessory weight The combined weight (in excess of those stritems which may be replaced) of automatic sion, power steering, power brakes, power power seats, radio and heater, to the extent items are available as factory-installed equin (whether installed or not)	transmis- windows, that these
Curb weight Curb w	iel, oil and
Maximum loaded vehicle weight The sum of: (a) Curb weight (b) Accessory weight (c) Vehicle capacity weight (d) Production options weight	
Normal occupant weight 150 lb. (68 kg) times the number of occupa fied in the second column of Table 1* that for	-
Occupant distribution Distribution of occupants in a vehicle as spectrum the third column of Table 1* below	ecified in

611



Tire related term	Meaning
Production options weight	The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim
Rim	A metal support for a tire or a tire and tube assembly upon which the tire beads are seated
Rim diameter (Wheel diameter)	Nominal diameter of the bead seat
Rim size designation	Rim diameter and width
Rim type designation	The industry manufacturer's designation for a rim by style or code
Rim width	Nominal distance between rim flanges
Vehicle capacity weight (Total load capacity)	The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity
Vehicle maximum load on the tire	The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two
Vehicle normal load on the tire	The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (dis- tributed in accordance with Table 1 [*] below), and dividing by two
Weather side	The surface area of the rim not covered by the inflated tire

Tire related term	Meaning
Bead	The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim
Bead separation	A breakdown of the bond between components in the bead
Bias ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread
Carcass	The tire structure, except tread and sidewall rubber which, when inflated, bears the load
Chunking	The breaking away of pieces of the tread or sidewall
Cord	The strands forming the plies in the tire
Cord separation	The parting of cords from adjacent rubber com- pounds
Cracking	Any parting within the tread, sidewall, or innerliner of the tire extending to cord material
СТ	A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire
Extra load tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Groove	The space between two adjacent tread ribs



Tire related term	Meaning
Innerliner	The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire
Innerliner separation	The parting of the innerliner from cord material in the carcass
Intended outboard side- wall	 (a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or (b) The outward facing sidewall of asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle
Light truck (LT) tire	A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipur- pose passenger vehicles
Load rating	The maximum load that a tire is rated to carry for a given inflation pressure
Maximum load rating	The load rating for a tire at the maximum permissible inflation pressure for that tire
Maximum permissible inflation pressure	The maximum cold inflation pressure to which a tire may be inflated
Measuring rim	The rim on which a tire is fitted for physical dimension requirements
Open splice	Any parting at any junction of tread, sidewall, or innerliner that extends to cord material
Outer diameter	The overall diameter of an inflated new tire

GS_G_U (OM30C80U)

Tire related term	Meaning
Overall width	The linear distance between the exteriors of the side- walls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs
Passenger car tire	A tire intended for use on passenger cars, multipur- pose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less
Ply	A layer of rubber-coated parallel cords
Ply separation	A parting of rubber compound between adjacent plies
Pneumatic tire	A mechanical device made of rubber, chemicals, fab- ric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load
Radial ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread
Reinforced tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Section width	The linear distance between the exteriors of the side- walls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands
Sidewall	That portion of a tire between the tread and bead
Sidewall separation	The parting of the rubber compound from the cord material in the sidewall

Vehicle specifications



Tire related term	Meaning
Snow tire	A tire that attains a traction index equal to or greater than 110, compared to the ASTM E-1136 Standard Reference Test Tire, when using the snow traction test as described in ASTM F-1805-00, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which is marked with an Alpine Symbol (
Test rim	The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire
Tread	That portion of a tire that comes into contact with the road
Tread rib	A tread section running circumferentially around a tire
Tread separation	Pulling away of the tread from the tire carcass
Treadwear indicators (TWI)	The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread
Wheel-holding fixture	The fixture used to hold the wheel and tire assembly securely during testing

*: Table 1— Occupant loading and distribution for vehicle normal load for various designated seating capacities

616

Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
2 through 4	2	2 in front
5 through 10	3	2 in front, 1 in second seat
11 through 15	5	2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat
16 through 20	7	2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat

GS_G_U (OM30C80U)